Pioneer sound.vision.soul

Service Manual

ORDER NO.
CRT2787

HIGH POWER CD PLAYER WITH FM/AM TUNER

DEH-1400 XQ/UC

COMPACT disc DIGITAL AUDIO

● This service manual should be used together with the manual(s) listed below. For the parts numbers, adjustments, etc. which are not shown in this manual, refer to the following manual(s).

Model No.	Order No.	Mech. Module	Remarks
DEH-1400/XM/UC	CRT2754		
CX-977	CRT2624	S9	CD Mech. Module:Circuit Description, Mech.Description, Disassembly

EXPLODED VIEWS AND PARTS LIST
PACKING(Page 2)

● **PACKING SECTION PARTS LIST** * : Non spare part

Mark No.	Symbol and Description	Part No. DEH-1400/XM/UC	Part No. DEH-1400/XQ/UC
11-4	Polyethylene Bag	Not used	CEG1116
12	Carton	CHG4489	CHG4658
13	Contain Box	CHL4489	CHL4658
14	Protector	CHP2421	CHP2101
15	Protector	CHP2422	CHP2102

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER CORPORATION 2001**

K-ZZD. NOV. 2001 Printed in Japan

EXTERIOR(Page 4)

● EXTERIOR SECTION PARTS LIST

Mark No.	Symbol and Description	Part No. DEH-1400/XM/UC	Part No. DEH-1400/XQ/UC
15	Screw	BPZ26P120FMC	BPZ26P080FMC
28	Heat Sink	CNR1583	CNR1614
29	Holder Unit	CXB6681	CNC8659(Holder)
31	Detach Grille Assy	CXB8748	CXB8981
34	Button(EQ)	CAC7186	CAC7678
39	Button(CLOCK)	CAC7298	CAC7680
41	Button(1-6)	CAC7180	CAC7683
43	Cover	CNS6720	CNS7126
53	Grille Unit	CXB8745	CXB8929
61	Panel	CNS6722	CNS7130
70	Panel	CNS6344	CNS7131

CD MECHANISM MODULE(Page 6)

● CD MECHANISM MODULE SECTION PARTS LIST

Mark No.	Symbol and Description	Part No. DEH-1400/XM/UC	Part No. DEH-1400/XQ/UC
38	Bracket	CNC9123	CNC8957
59	Cover	CNV6334	CNV7012
70	Motor Unit(M2)	CXB5903	CXB8284

ELECTRICAL PARTS LIST(Page 30)

● MISCELLANEOUS PARTS LIST

Circuit Symbol and No.	Part No. DEH-1400/XM/UC DEH-14/XM/UC	Part No. DEH-1400/XQ/UC DEH-14/XQ/UC
M2 Motor Unit(LOADING/CARRIAGE)	CXB5903	CXB8284

Pioneer sound.vision.soul

Service Manual

DEH-1400/XM/UC

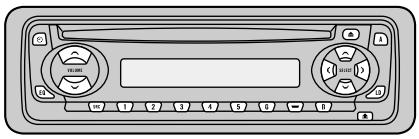

ORDER NO.
CRT2754

HIGH POWER CD PLAYER WITH FM/AM TUNER

DEH-1400 XM/UC

DEH-14 XM/UC

COMPACT disc DIGITAL AUDIO

● This service manual should be used together with the following manual(s):

Model No.	Order No.	Mech. Module	Remarks
CX-977	CRT2624	S9	CD Mech. Module:Circuit Description, Mech.Description, Disassembly

CONTENTS

1. SAFETY INFORMATION 2
2. EXPLODED VIEWS AND PARTS LIST 2
3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM 8
4. PCB CONNECTION DIAGRAM 22
5. ELECTRICAL PARTS LIST 30
6. ADJUSTMENT.....34
7. GENERAL INFORMATION 38
   7.1 DIAGNOSIS 38
      7.1.1 DISASSEMBLY 38
      7.1.2 CONNECTOR FUNCTION DESCRIPTION 41
   7.2 PARTS 42
      7.2.1 IC.....42
      7.2.2 DISPLAY 50
   7.3 OPERATIONAL FLOW CHART 51
8. OPERATIONS AND SPECIFICATIONS.....52

PIONEER CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan
PIONEER ELECTRONICS (USA) INC. P.O.Box 1760, Long Beach, CA 90801-1760 U.S.A.
PIONEER EUROPE NV Haven 1087 Keetberglaan 1, 9120 Melsele, Belgium
PIONEER ELECTRONICS ASIACENTRE PTE.LTD. 253 Alexandra Road, #04-01, Singapore 159936

© **PIONEER CORPORATION 2001**

K-ZZD. OCT. 2001 Printed in Japan

● **CD Player Service Precautions**

1. For pickup unit(CXX1480) handling, please refer to"Disassembly"(see page 38).
   During replacement, handling precautions shall be taken to prevent an electrostatic discharge(protection by a jumper-solder).
2. During disassembly, be sure to turn the power off since an internal IC might be destroyed when a connector is plugged or unplugged.
3. Please checking the grating after changing the pickup unit(see page 35).
4. In this product, because the memory capacity of the microcomputer is insufficient, the test mode is not installed. However grating of the pickup unit can be confirmed.

1. SAFETY INFORMATION

CAUTION

This service manual is intended for qualified service technicians; it is not meant for the casual do-it-yourselfer.
Qualified technicians have the necessary test equipment and tools, and have been trained to properly and safely repair complex products such as those covered by this manual.
Improperly performed repairs can adversely affect the safety and reliability of the product and may void the warranty.
If you are not qualified to perform the repair of this product properly and safely, you should not risk trying to do so and refer the repair to a qualified service technician.

WARNING

This product contains lead in solder and certain electrical parts contain chemicals which are known to the state of California to cause cancer, birth defects or other reproductive harm.
Health & Safety Code Section 25249.6 - Proposition 65

2. EXPLODED VIEWS AND PARTS LIST

2.1 PACKING

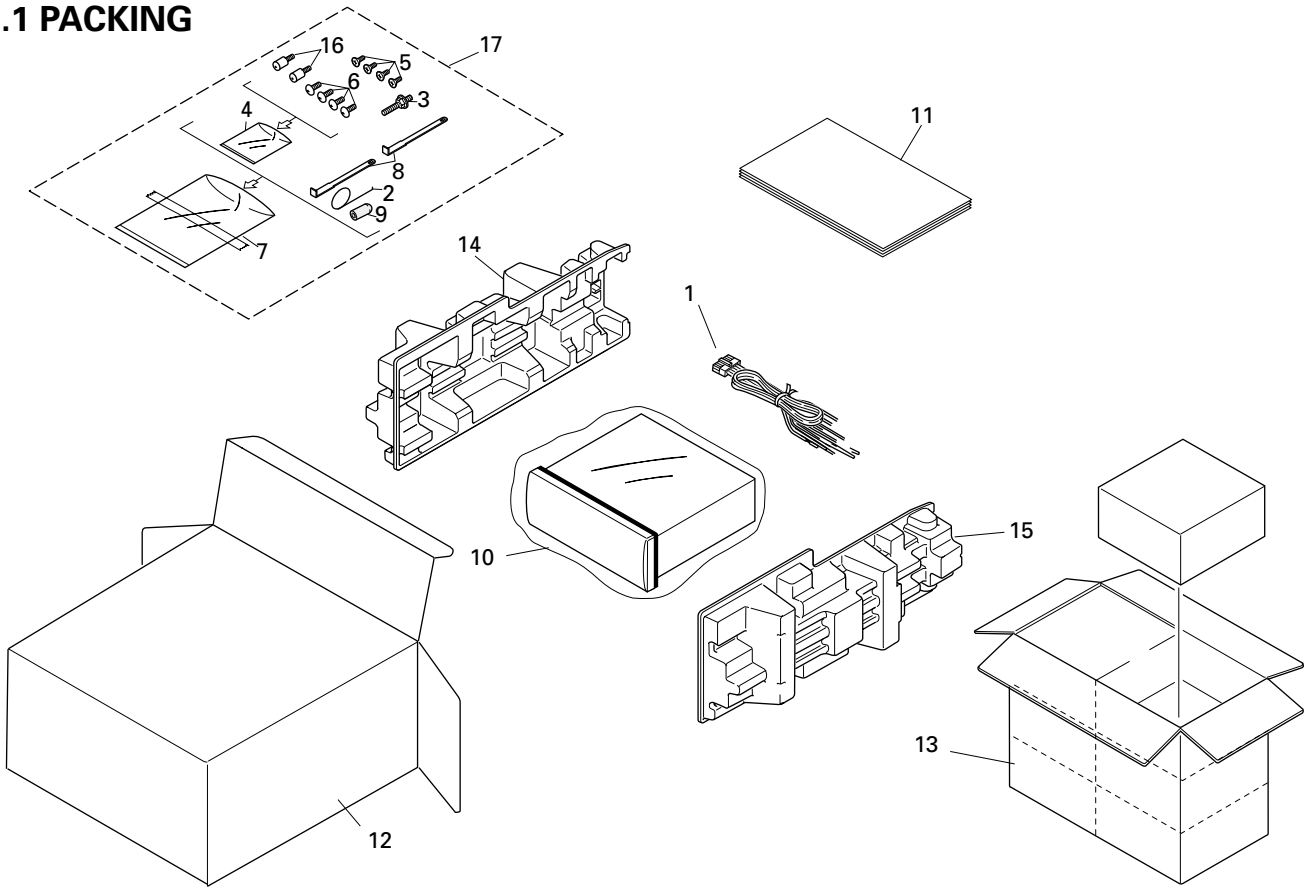

NOTE:

● Parts marked by "*" are generally unavailable because they are not in our Master Spare Parts List.

● Screws adjacent to ∇ mark on the product are used for disassembly.

(1) PACKING SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Cord Assy	CDE6468
	2	Spring	CBH1650
	3	Screw	CBA1002
*	4	Polyethylene Sheet	CNM4338
	5	Screw	CRZ50P090FMC
	6	Screw	TRZ50P080FMC
*	7	Polyethylene Bag	CEG-158
	8	Handle	CNC5395
	9	Bush	CNV3930
	10	Polyethylene Bag	CEG1173
	11-1	Owner's Manual	CRD3487
	11-2	Installation Manual	CRD3492
*	11-3	Card	ARY1048
	12	Carton	See Contrast table(2)
	13	Contain Box	See Contrast table(2)
	14	Protector	CHP2421
	15	Protector	CHP2422
	16	Screw(M3x4)	CBA1488
	17	Accessory Assy	CEA2781

(2) CONTRAST TABLE

DEH-1400/XM/UC and DEH-14/XM/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1400/XM/UC	DEH-14/XM/UC
12	Carton	CHG4489	CHG4493
13	Contain Box	CHL4489	CHL4493

● Owner's Manual, Installation Manual

Model	Part No.	Language
DEH-1400/XM/UC	CRD3487	English, French, Spanish
DEH-14/XM/UC	CRD3492	

2.2 EXTERIOR

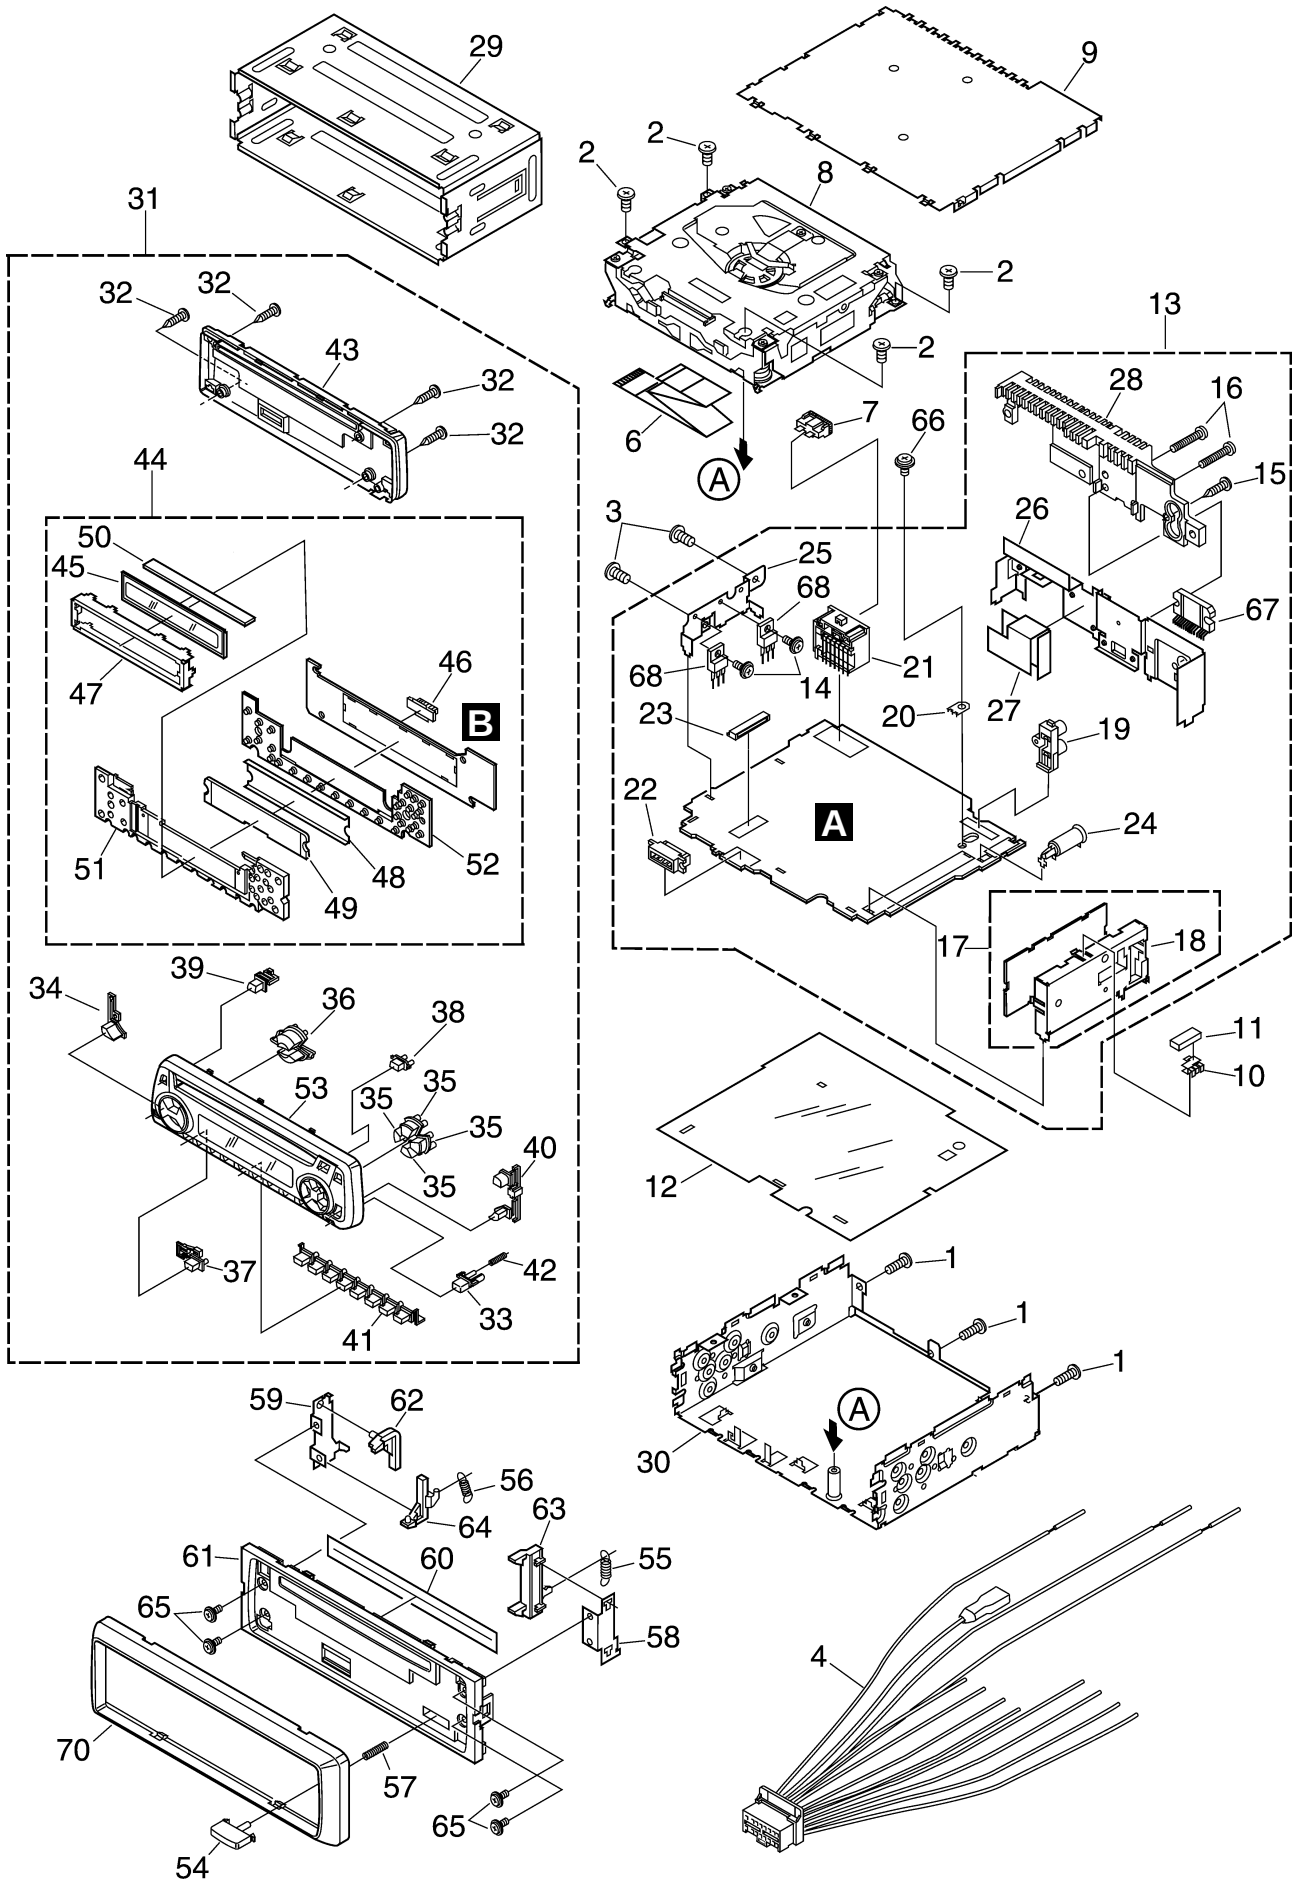
29
9
2
2
8
31
2
32
32
43
32
32
44
13
28
16
15
26
67
50
45
47
46
B
51
48
49
52
3
25
68
68
14
21
23
20
27
19
22
A
24
17
18
11
10
12
39
34
36
38
53
35
35
35
35
40
37
42
33
41
1
1
1
30
59
62
56
64
63
61
60
55
65
58
70
57
65
54
4
6
7
66

(1) EXTERIOR SECTION PARTS LIST

Mark No.	Description	Part No.
1	Screw	BMZ30P100FMC
2	Screw	BSZ26P060FMC
3	Screw	BSZ30P060FMC
4	Cord Assy	CDE6468
5	•••••	
6	Cable	CDE6610
7	Fuse(10A)	CEK1136
8	CD Mechanism Module(S9ANA)	CXK5501
9	Case	CNB2686
10	Holder	CNC5704
11	Cushion	CNM4870
12	Insulator	CNM7622
13	Tuner Amp Unit	CWM7942
14	Screw	ASZ26P060FMC
15	Screw	BPZ26P120FMC
16	Screw	BSZ26P160FMC
17	FM/AM Tuner Unit	CWE1563
18	Holder	CNC8815
19	Pin Jack(CN351)	CKB1035
20	Terminal(CN404)	CKF1059
21	Plug(CN901)	CKM1330
22	Connector(CN751)	CKS3581
23	Connector(CN501)	CKS3835
24	Antenna Jack(CN402)	CKX1056
25	Holder	CNC8615
26	Holder	CNC9619
27	Insulator	CNM6949
28	Heat Sink	CNR1583
29	Holder Unit	CXB6681
30	Chassis Unit	CXB7816
31	Detach Grille Assy	See Contrast table(2)
32	Screw	BPZ20P100FZK
33	Button(DETACH)	CAC5789
34	Button(EQ)	CAC7186
35	Button(SELECT)	CAC7181
36	Button(VOL+,-)	CAC7182
37	Button(SRC)	CAC7187
38	Button(EJECT)	CAC7183
39	Button(CLOCK)	CAC7298
40	Button(A,LD)	CAC7184
41	Button(1-6)	CAC7180
42	Spring	CBH2210
43	Cover	CNS6720
44	Keyboard Unit	See Contrast table(2)
45	LCD	See Contrast table(2)
46	Connector(CN1800)	CKS3580
47	Holder	CNC9617
48	Sheet	CNM7057
49	Lighting Conductor	CNV6476
50	Connector	CNV6868
51	Lighting Conductor	CNV6869
52	Rubber	CNV6905
53	Grille Unit	See Contrast table(2)
54	Button	CAC4836
55	Spring	CBH1835
56	Spring	CBH2208
57	Spring	CBH2367
58	Bracket	CNC6791
59	Holder	CNC8042
60	Cover	CNM6276
61	Panel	CNS6722
62	Arm	CNV4692
63	Arm	CNV4728
64	Arm	CNV5576
65	Screw	IMS20P030FZK
66	Screw	ISS26P055FUC
67	IC(IC361)	TDA7386
68	Transistor(Q501,910)	2SD2396
69	•••••	
70	Panel	CNS6344

(2) CONTRAST TABLE

DEH-1400/XM/UC and DEH-14/XM/UC are constructed the same except for the following:

Mark No.	Symbol and Description	Part No.	
		DEH-1400/XM/UC	DEH-14/XM/UC
31	Detach Grille Assy	CXB8748	CXB8749
44	Keyboard Unit	CWM7955	CWM7956
45	LCD	CAW1723	CAW1716
53	Grille Unit	CXB8745	CXB8746

2.3 CD MECHANISM MODULE

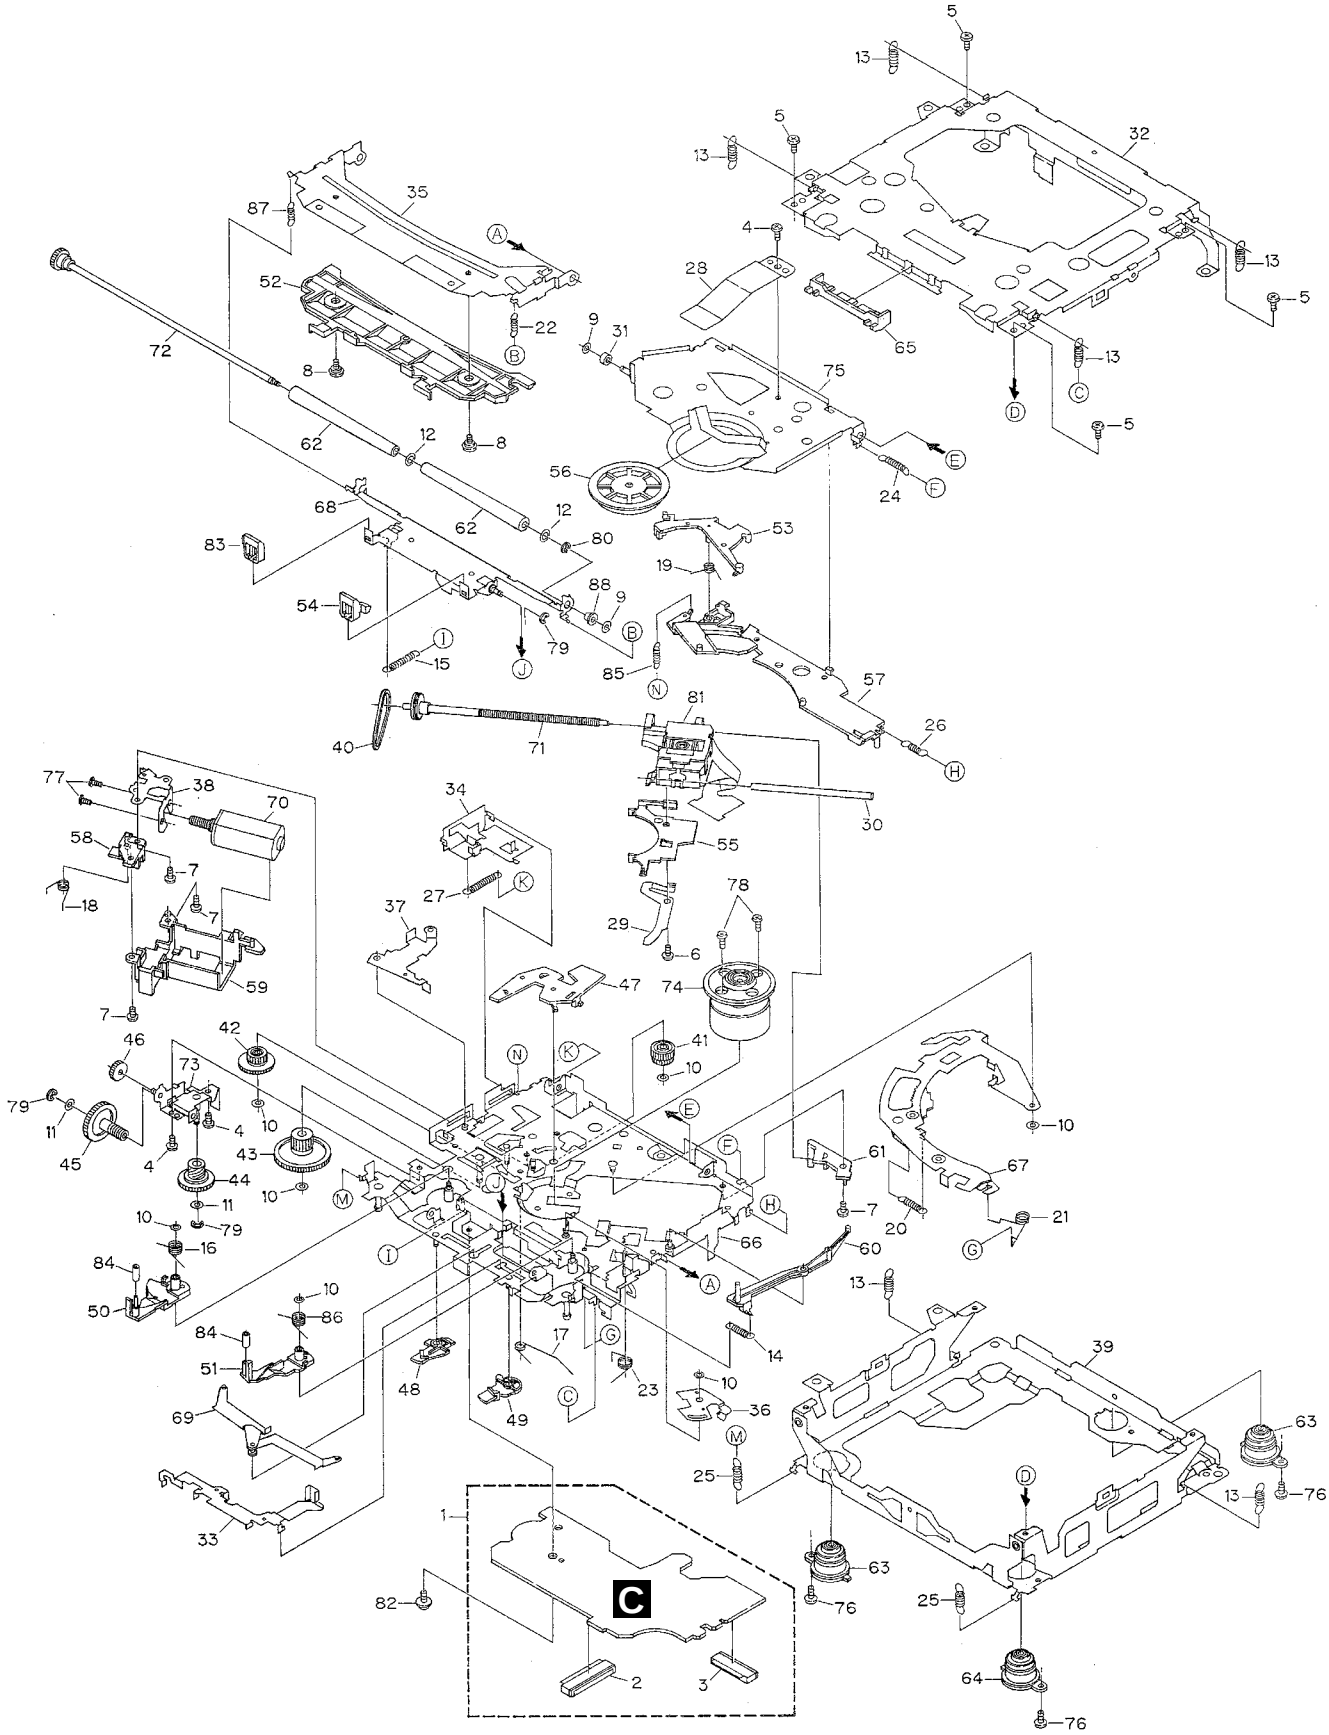

● CD MECHANISM MODULE SECTION PARTS LIST

Mark	No.	Description	Part No.
	1	Control Unit	CWX2481
	2	Connector(CN701)	CKS1959
	3	Connector(CN101)	CKS3486
	4	Screw	BMZ20P025FMC
	5	Screw	BSZ20P040FMC
	6	Screw(M2x4)	CBA1362
	7	Screw(M2x3)	CBA1527
	8	Screw	CBA1545
	9	Washer	CBF1037
	10	Washer	CBF1038
	11	Washer	CBF1039
	12	Washer	CBF1060
	13	Spring	CBH2378
	14	Spring	CBH2379
	15	Spring	CBH2514
	16	Spring	CBH2533
	17	Spring	CBH2382
	18	Spring	CBH2383
	19	Spring	CBH2384
	20	Spring	CBH2527
	21	Spring	CBH2386
	22	Spring	CBH2537
	23	Spring	CBH2390
	24	Spring	CBH2391
	25	Spring	CBH2523
	26	Spring	CBH2426
	27	Spring	CBH2444
	28	Spring	CBL1561
	29	Spring	CBL1553
	30	Shaft	CLA3845
	31	Roller	CLA3910
	32	Frame	CNC9654
	33	Lever	CNC9664
	34	Lever	CNC8949
	35	Arm	CNC9661
	36	Arm	CNC9016
	37	Arm	CNC9017
	38	Bracket	CNC9123
	39	Frame	CNC9656
	40	Belt	CNT1086
	41	Gear	CNV6886
	42	Gear	CNV6316
	43	Gear	CNV6317
	44	Gear	CNV6318
	45	Gear	CNV6319
	46	Gear	CNV6320
	47	Arm	CNV6322
	48	Arm	CNV6323
	49	Arm	CNV6324
	50	Arm	CNV6888
	51	Arm	CNV6889
	52	Guide	CNV6327
	53	Arm	CNV6924
	54	Guide	CNV6921
	55	Rack	CNV6923
	56	Clamper	CNV6331
	57	Arm	CNV6332
	58	Guide	CNV6333
	59	Cover	CNV6334
	60	Arm	CNV6335
	61	Guide	CNV6336
	62	Roller	CNV6338
	63	Damper	CNV6339
	64	Damper	CNV6340
	65	Guide	CNV6925
	66	Chassis Unit	CXB7980
*	67	Arm Unit	CXB7983
	68	Arm Unit	CXB7984
	69	Arm Unit	CXB7985
	70	Motor Unit(M2)	CXB5903
	71	Screw Unit	CXB5904
	72	Gear Unit	CXB8076
	73	Bracket Unit	CXB7982
	74	Motor Unit(M1)	CXB6007
	75	Arm Unit	CXB8504
	76	Screw(M2x5)	EBA1028
	77	Screw	JFZ20P020FMC
	78	Screw	JGZ17P020FZK
	79	Washer	YE15FUC
	80	Washer	YE20FUC
	81	Pickup Unit(Service)(P9)	CXX1480
	82	Screw	IMS26P030FMC
	83	Guide	CNV6922
	84	Roller	CNV6887
	85	Spring	CBH2509
	86	Spring	CBH2512
	87	Spring	CBH2536
	88	Collar	CNV6906

3. BLOCK DIAGRAM AND SCHEMATIC DIAGRAM

3.1 BLOCK DIAGRAM

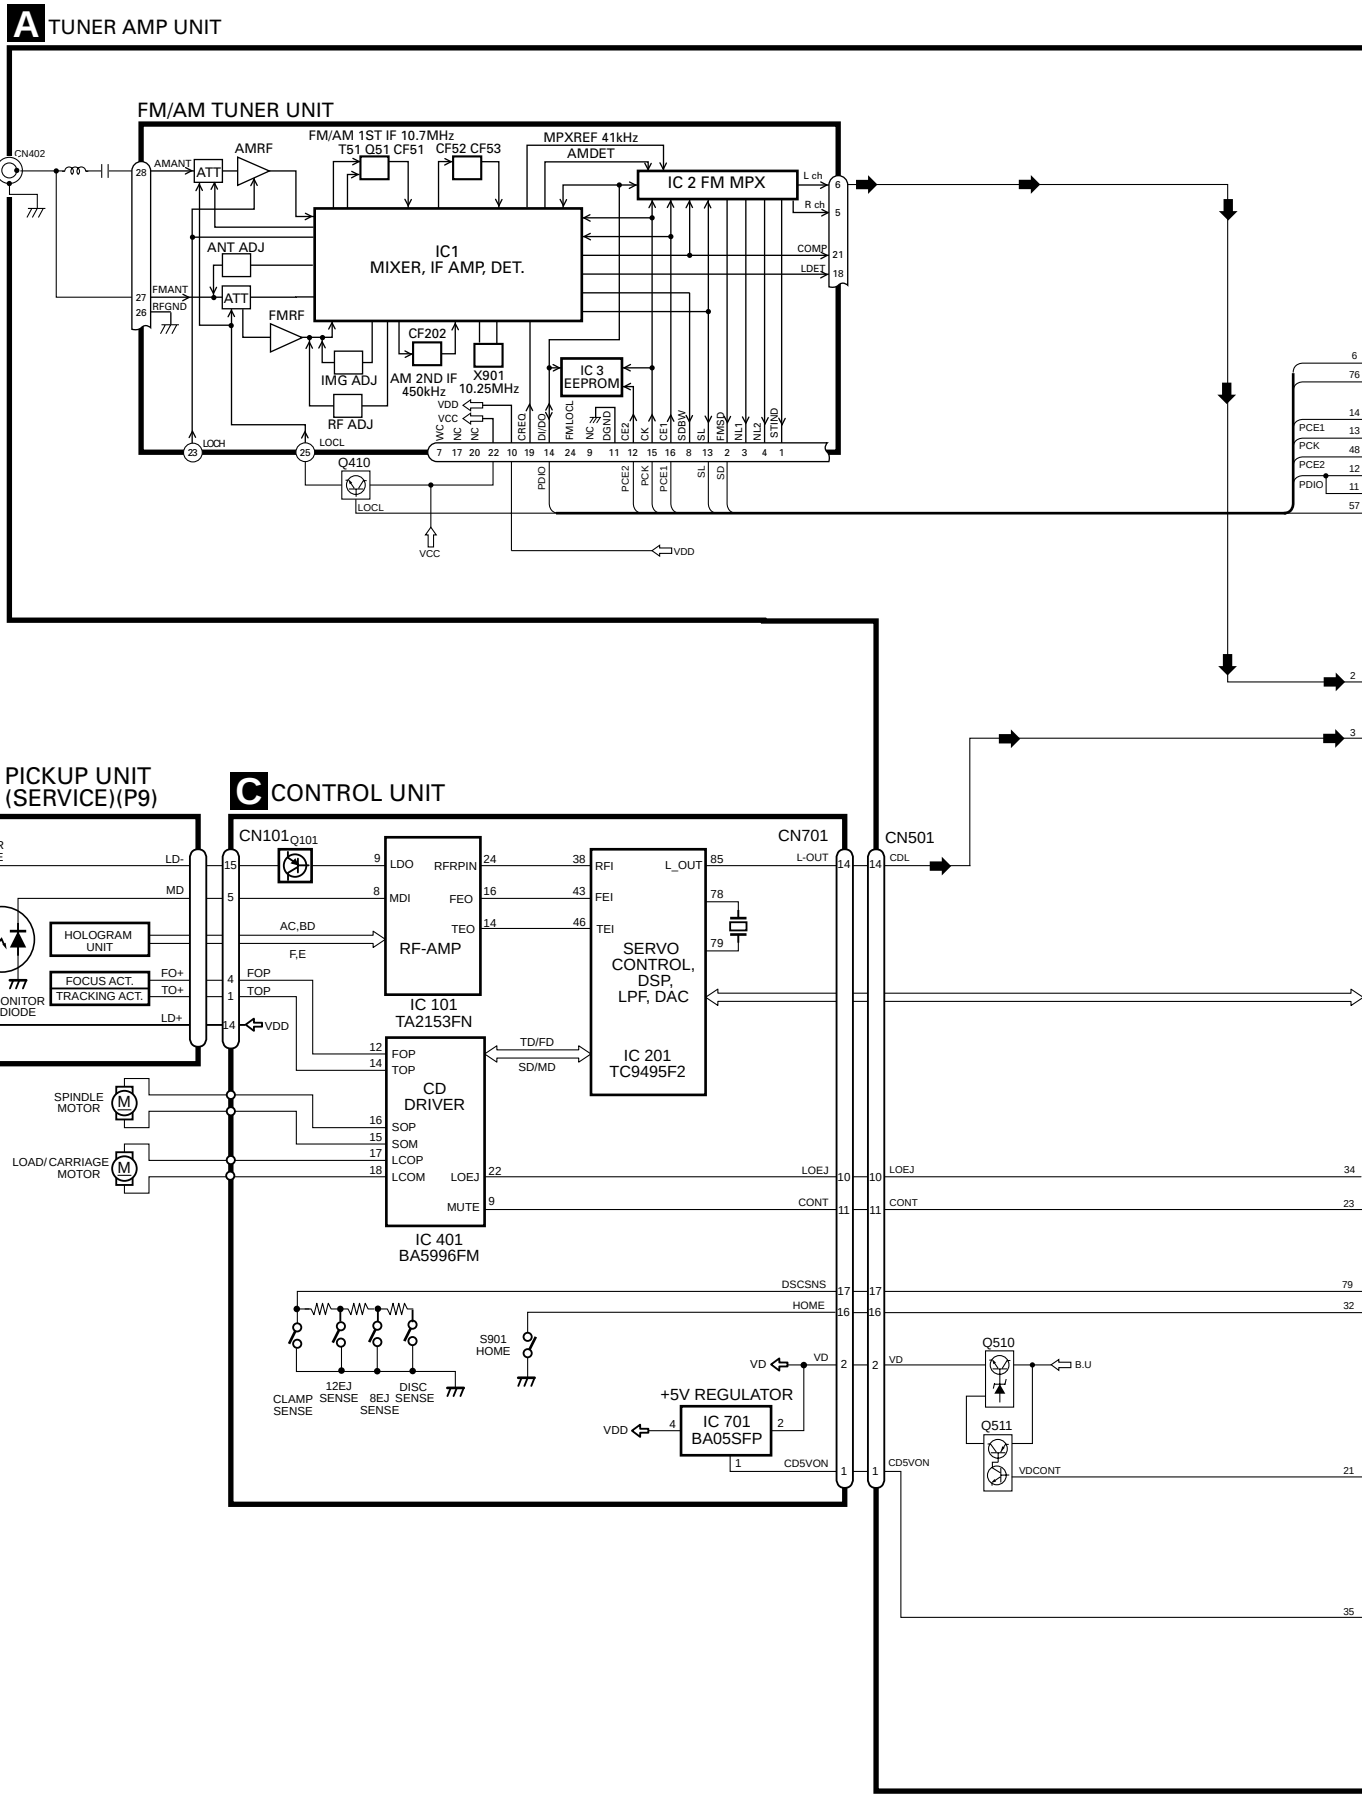

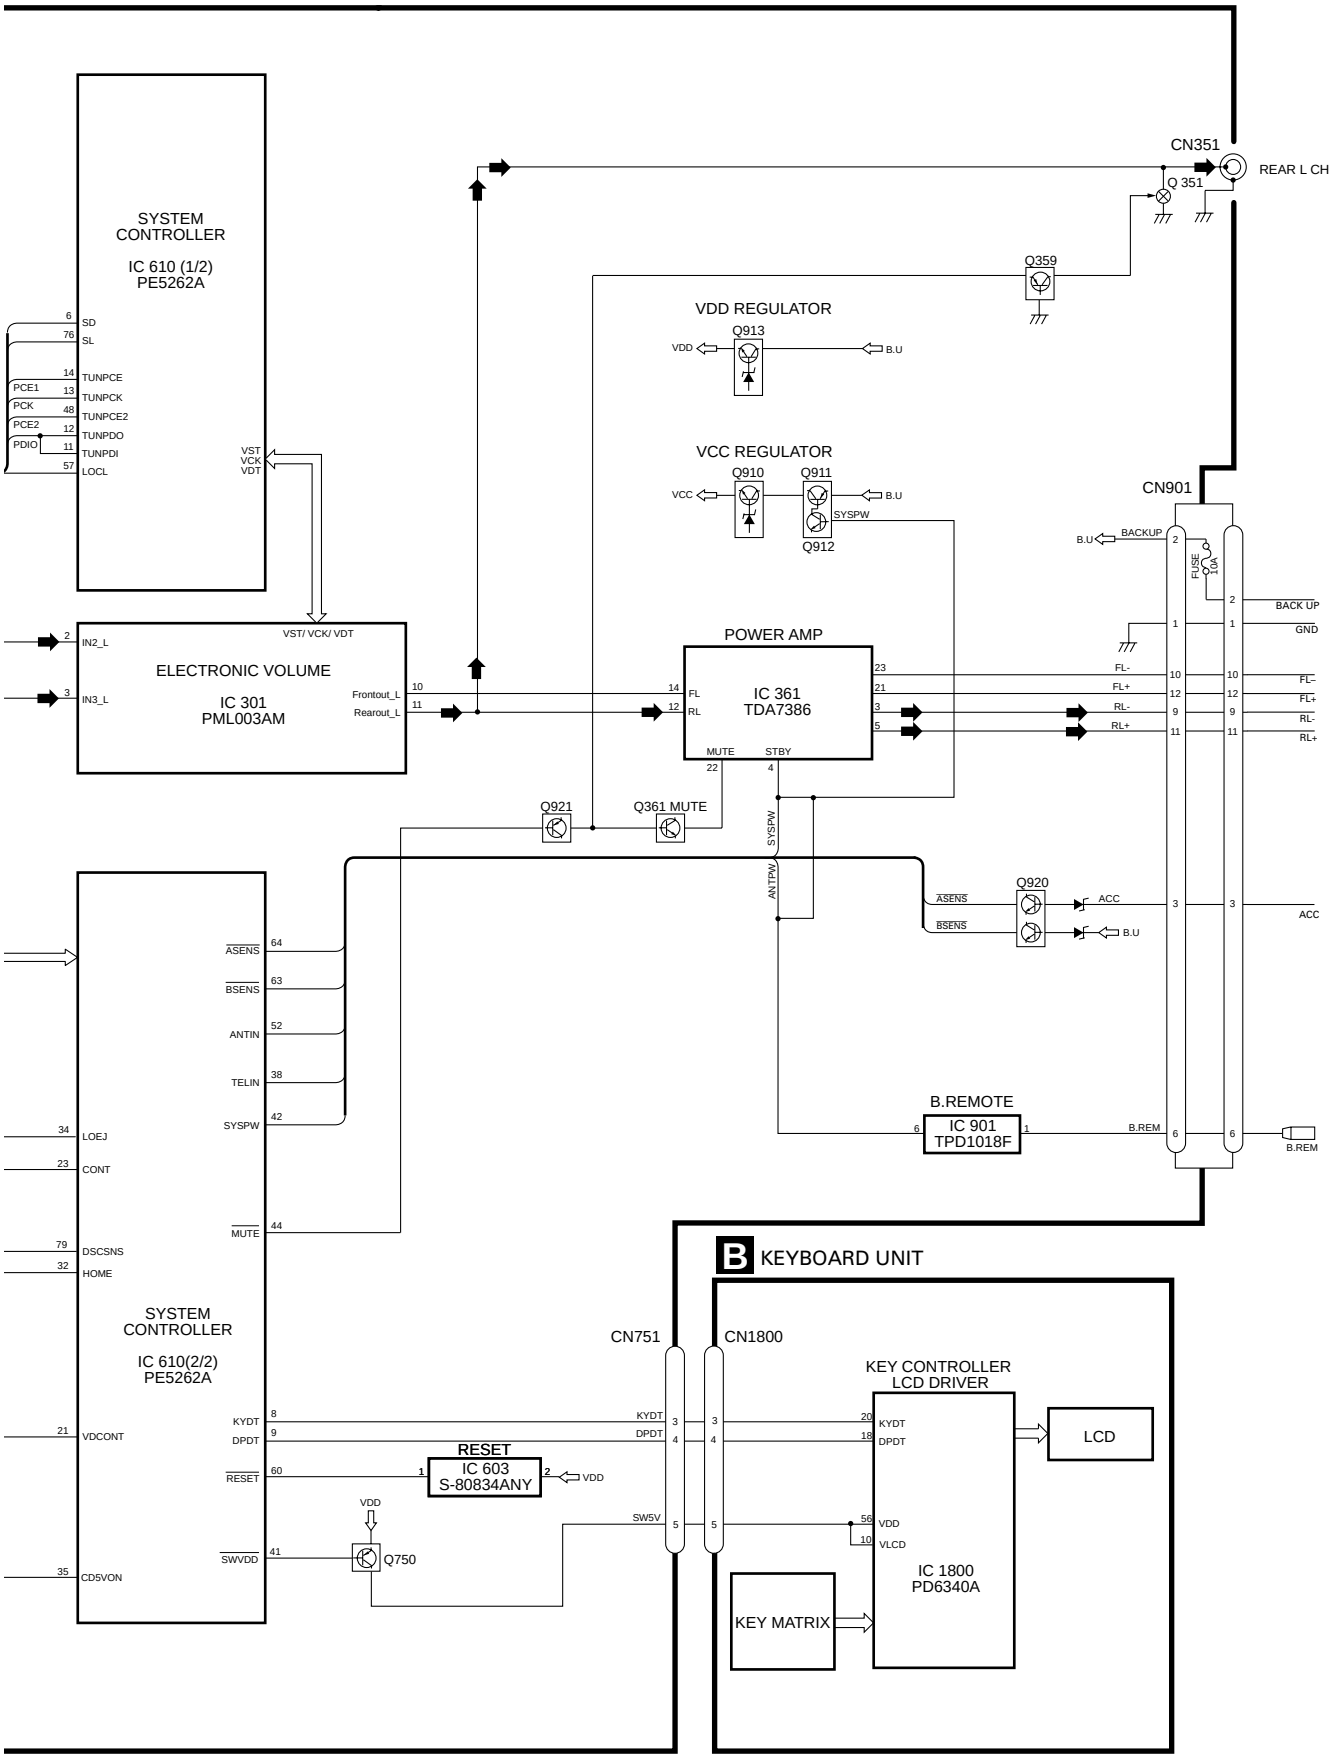
SYSTEM CONTROLLER
IC 610 (1/2) PE5262A
SD
SL
TUNPCE
TUNPCK
TUNPCE2
TUNPDO
TUNPDI
LOCL
PCE1
PCK
PCE2
PDIO
VST
VCK
VDT
VST/ VCK/ VDT
ELECTRONIC VOLUME
IC 301 PML003AM
IN2_L
IN3_L
Frontout_L
Rearout_L
POWER AMP
IC 361 TDA7386
FL
RL
MUTE
STBY
VDD REGULATOR
Q913
VCC REGULATOR
Q910
Q911
Q912
SYSPW
CN351
REAR L CH
Q 351
Q359
CN901
BACKUP
FUSE 10A
BACK UP
GND
FL-
FL+
RL-
RL+
ACC
Q921
Q361 MUTE
ANTPW
Q920
ASENS
BSENS
B.REMOTE
IC 901 TPD1018F
B.REM
B KEYBOARD UNIT
CN751
CN1800
KEY CONTROLLER LCD DRIVER
IC 1800 PD6340A
KEY MATRIX
LCD
KYDT
DPDT
VDD
VLCD
SW5V
SYSTEM CONTROLLER
IC 610(2/2) PE5262A
ANTIN
TELIN
LOEJ
CONT
MUTE
DSCSNS
HOME
VDCONT
RESET
IC 603 S-80834ANY
SWVDD
Q750
CD5VON

3.2 OVERALL CONNECTION DIAGRAM(GUIDE PAGE)

Note: When ordering service parts, be sure to refer to "EXPLODED VIEWS AND PARTS LIST" or "ELECTRICAL PARTS LIST".

A-a

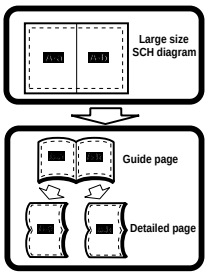

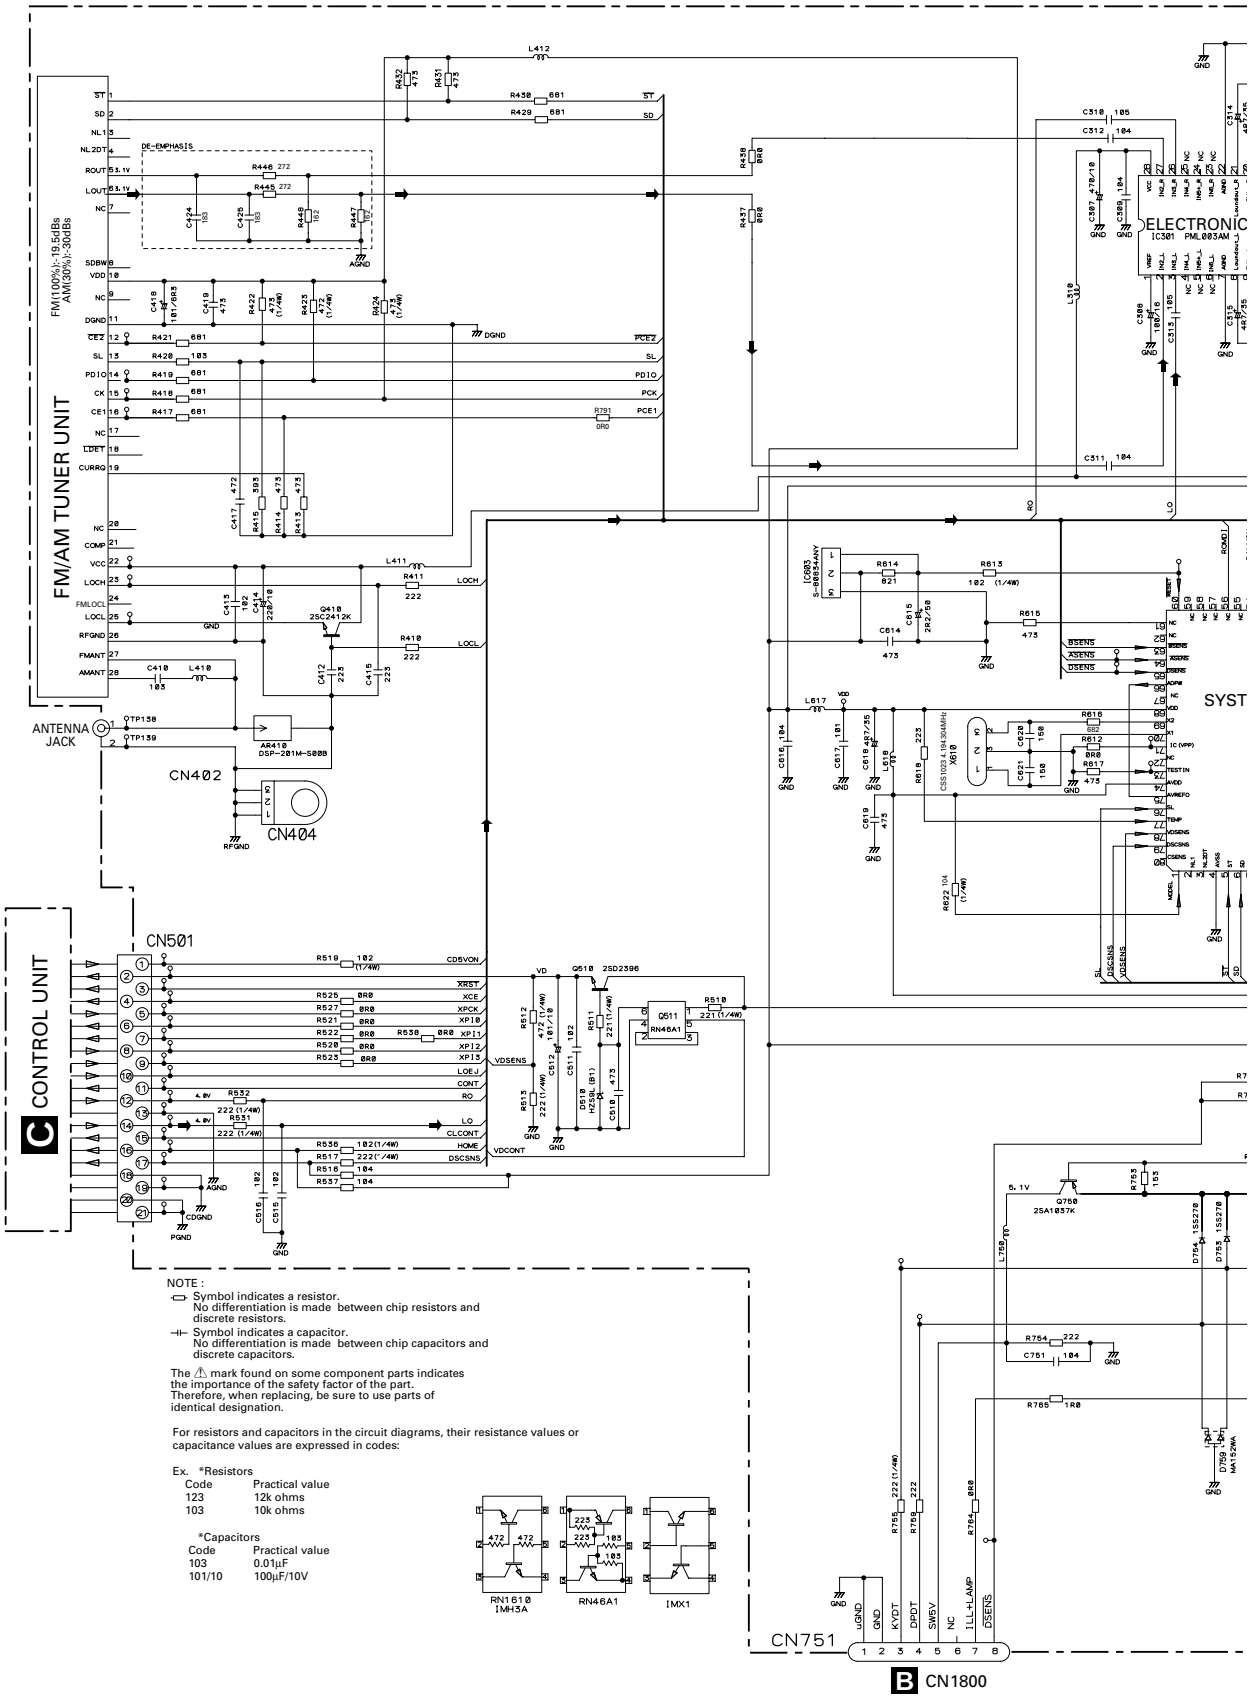

A-b

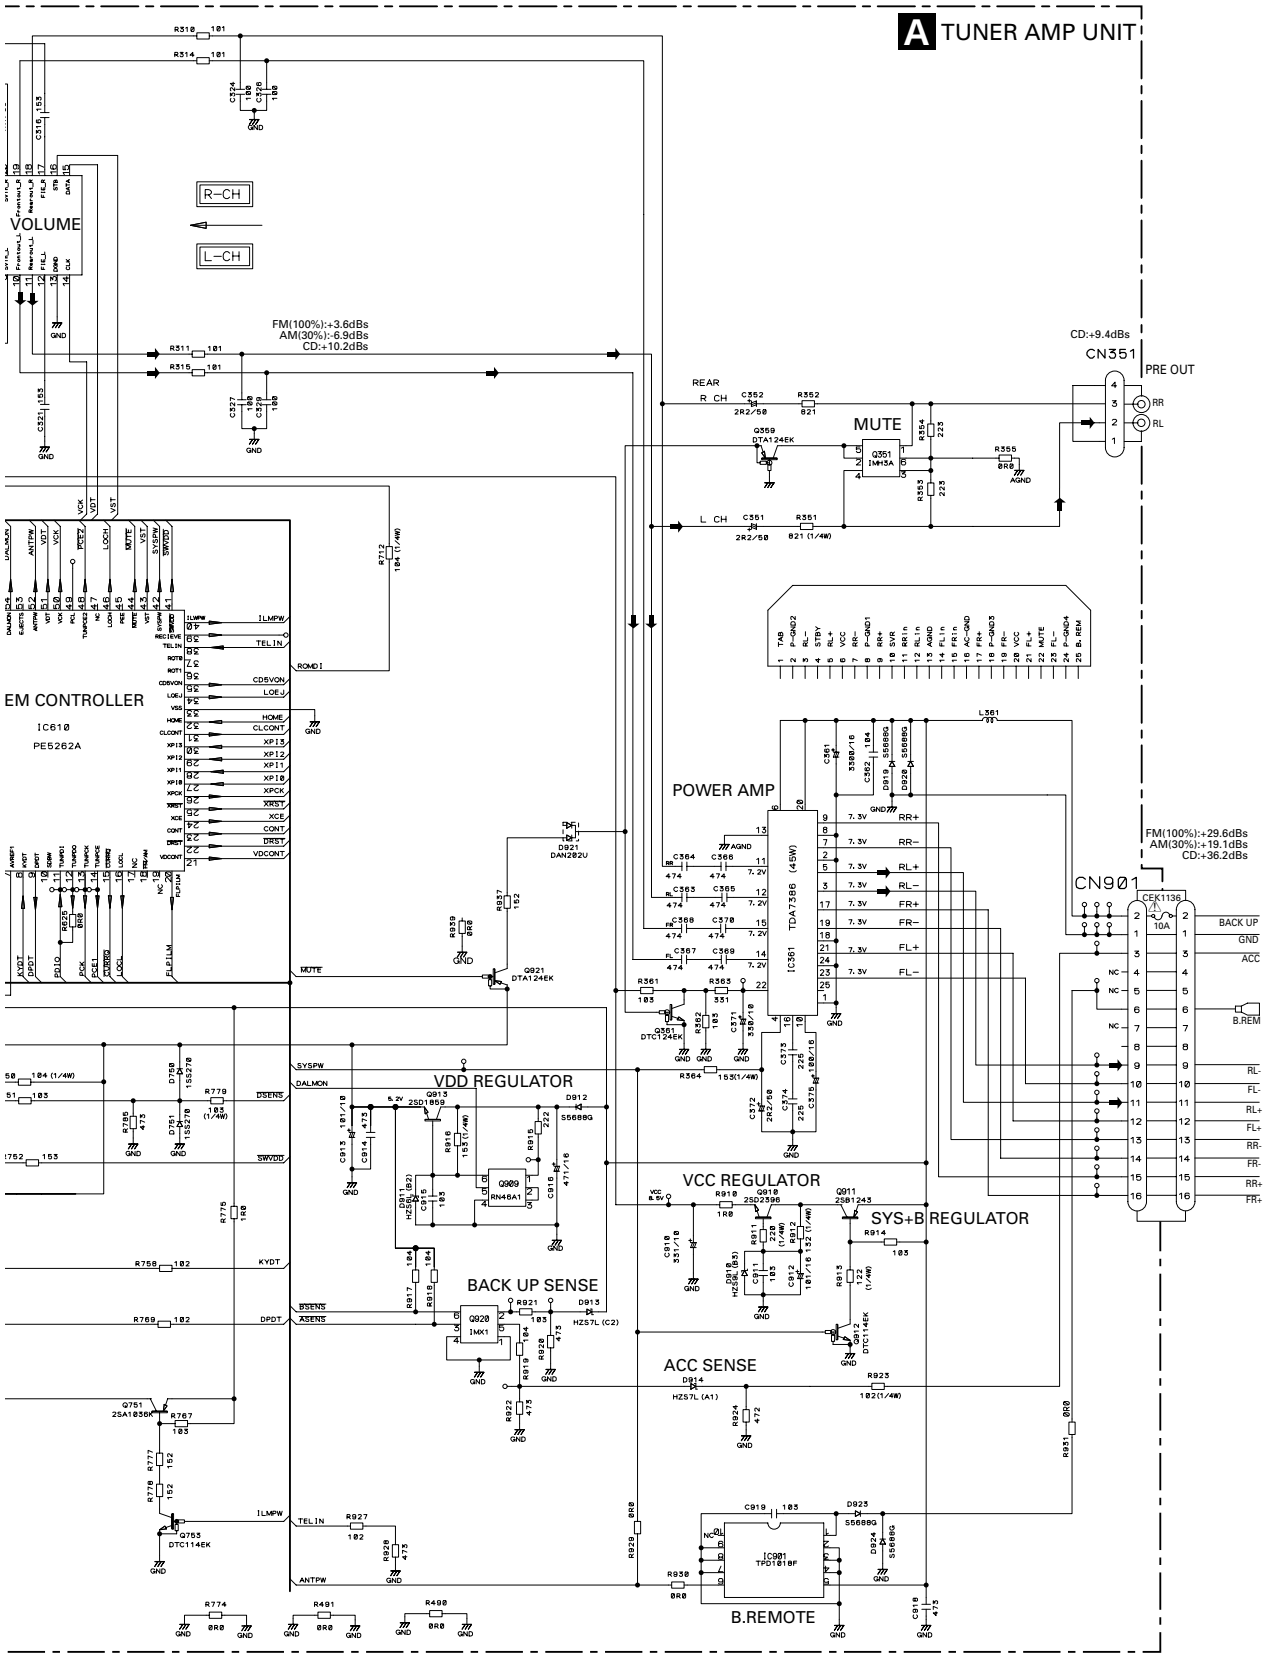
A TUNER AMP UNIT
VOLUME
R-CH
L-CH
EM CONTROLLER
IC610
PE5262A
FM(100%):+3.6dBs
AM(30%):-6.9dBs
CD:+10.2dBs
CD:+9.4dBs
CN351
PRE OUT
REAR
MUTE
POWER AMP
TDA7386 (45W)
IC351
VDD REGULATOR
VCC REGULATOR
SYS+B REGULATOR
BACK UP SENSE
ACC SENSE
B.REMOTE
IC901
TPD1018F
FM(100%):+29.6dBs
AM(30%):+19.1dBs
CD:+36.2dBs
CN901
BACK UP
GND
ACC
B.REM
RL-
FL-
RL+
FL+
RR-
FR-
RR+
FR+

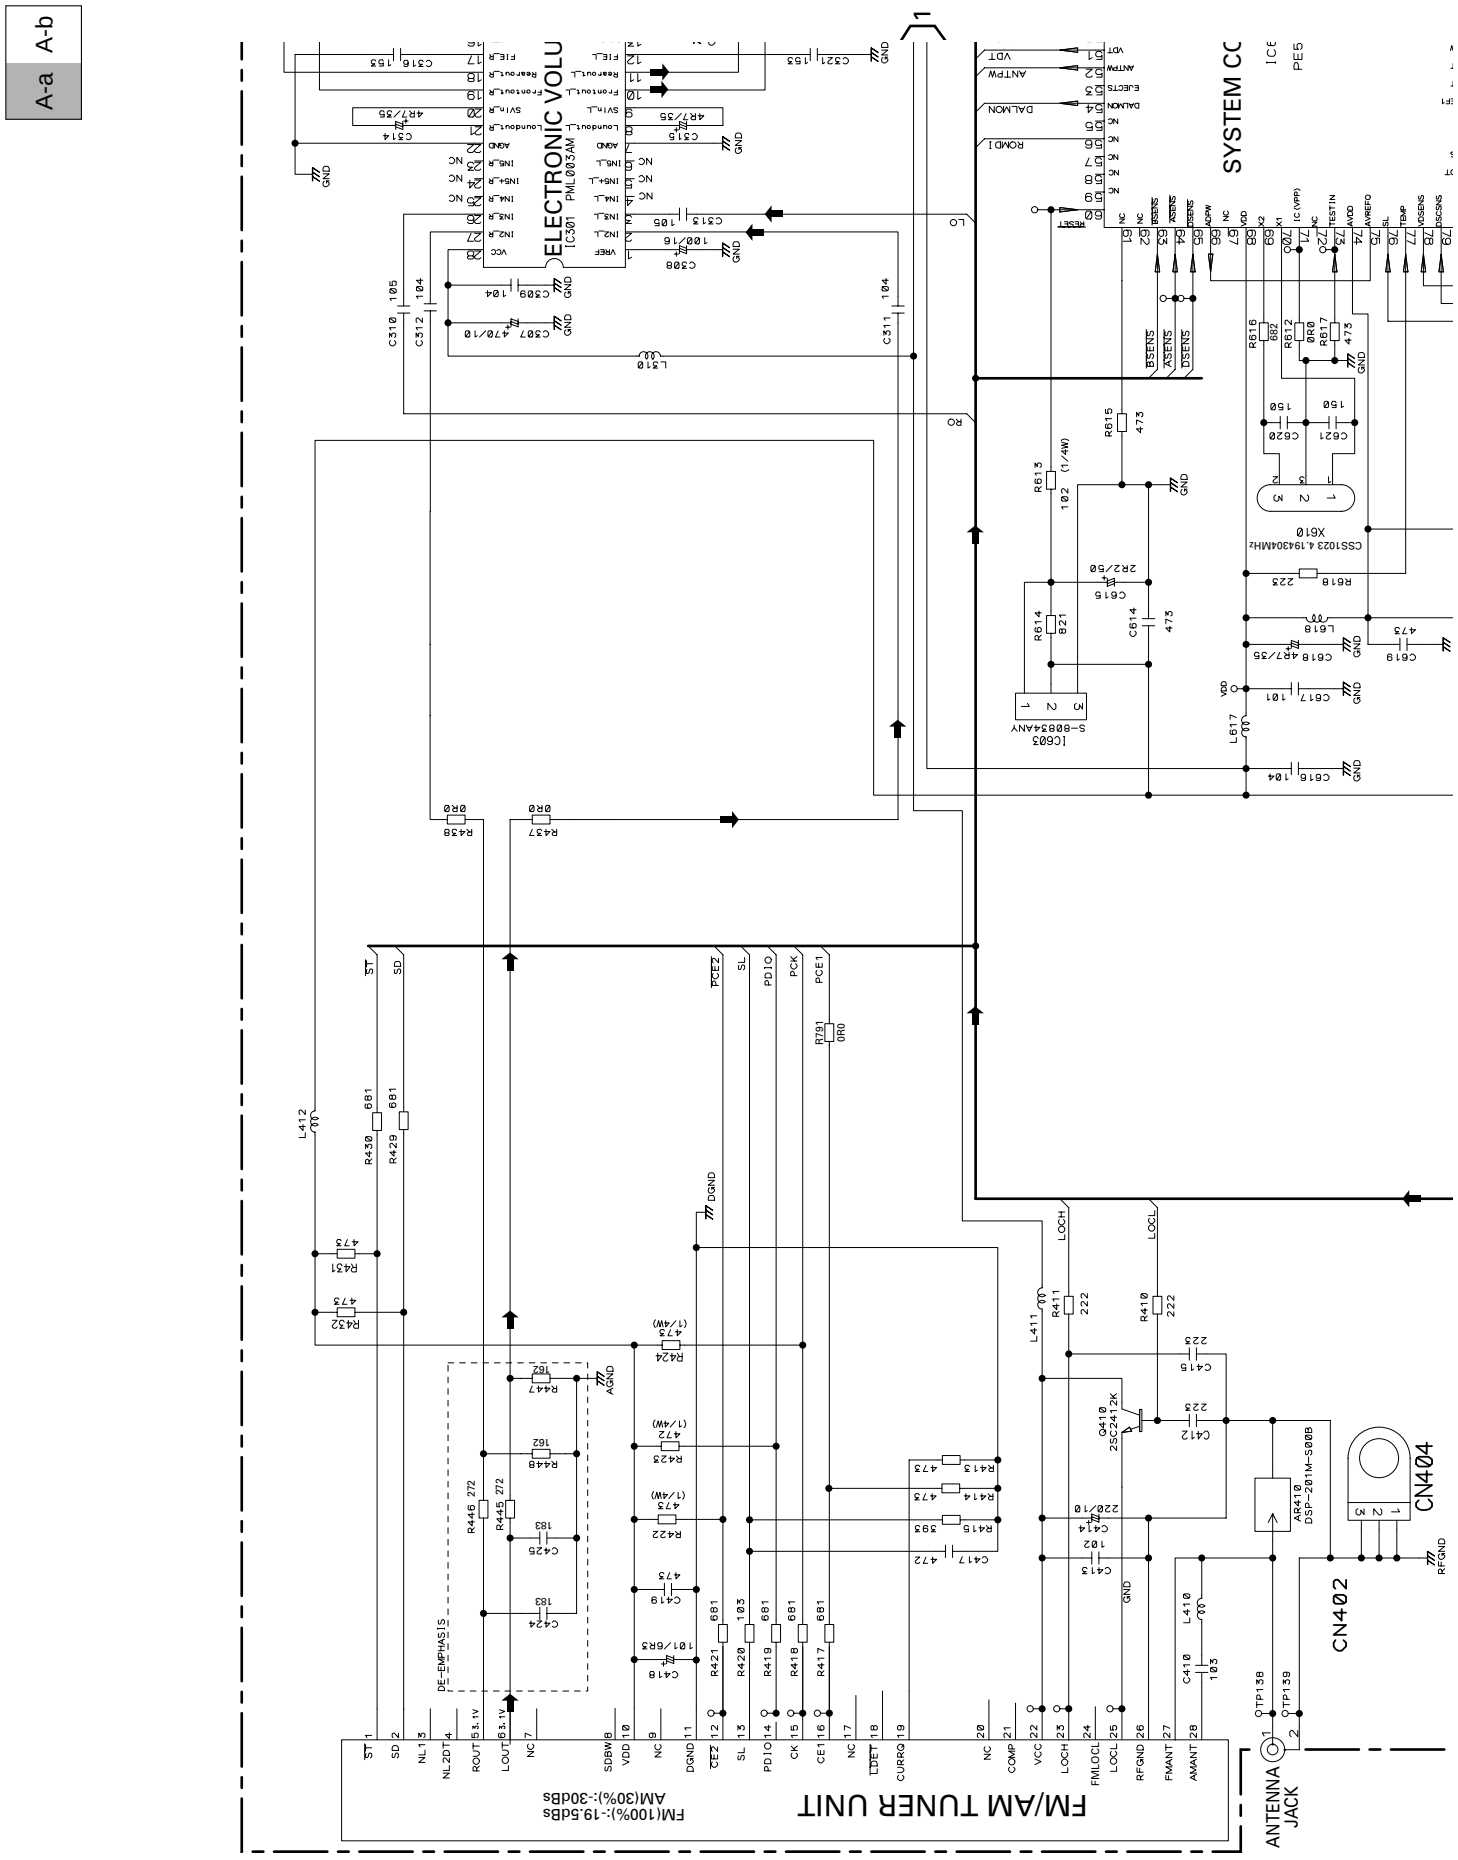
A-b
A-a
ELECTRONIC VOLU
IC301
PML0035AM
SYSTEM CC
IC603
S-80834ANV
X610
CSS1023 4.19430MHz
CN404
CN402
ANTENNA JACK
FM/AM TUNER UNIT
FM(100%):-19.5dBs
AM(30%):-30dBs
DE-EMPHASIS
ST
SD
NL 1
NL 2DT 4
ROUT 5
LOUT 6
NC 7
SDBW 8
VDD 10
NC 9
DGND 11
CEZ 12
SL 13
PDIO 14
CK 15
CE1 16
NC 17
LDET 18
CURRQ 19
NC 20
COMP 21
VCC 22
LOCH 23
FMLOCL 24
LOCL 25
RFGND 26
FMANT 27
AMANT 28
PCE2
PCK
PCE1
DGND
AGND
LOCH
LOCL
RFGND
GND
VDD
R791 0R0
R438 0R0
R437 0R0
L412
R430 681
R429 681
R431 473
R432 473
R424 473 (1/4W)
R423 472 (1/4W)
R422 473 (1/4W)
R447 162
R448 162
R446 272
R445 272
C425 183
C424 183
C419 473
C418 101/6R3
R421 681
R420 103
R419 681
R418 681
R417 681
R413 473
R414 473
R415 393
C417 472
L411
R411 222
R410 222
C416 223
C412 223
Q410 2SC2412K
C414 220/10
C413 102
AR410 DSP-201M-S00B
L410
C410 103
TP138
TP139
R615 473
R613 102 (1/4W)
C615 2R2/50
R614 821
C614 473
R616 682
R612 0R0
R617 473
C620 150
C621 150
R618 223
L618
C618 4R7/35
C619 473
C617 101
L617
C616 104
C321 153
C316 153
C315 4R7/35
C314 4R7/35
C313 105
C308 100/16
C309 104
C307 470/10
C310 105
C312 104
C311 104
L310
LO
RO
BSENS
ASENS
DSENS
RESET
ROMDI
DALMON
ANTPW
VDT
EJECTS

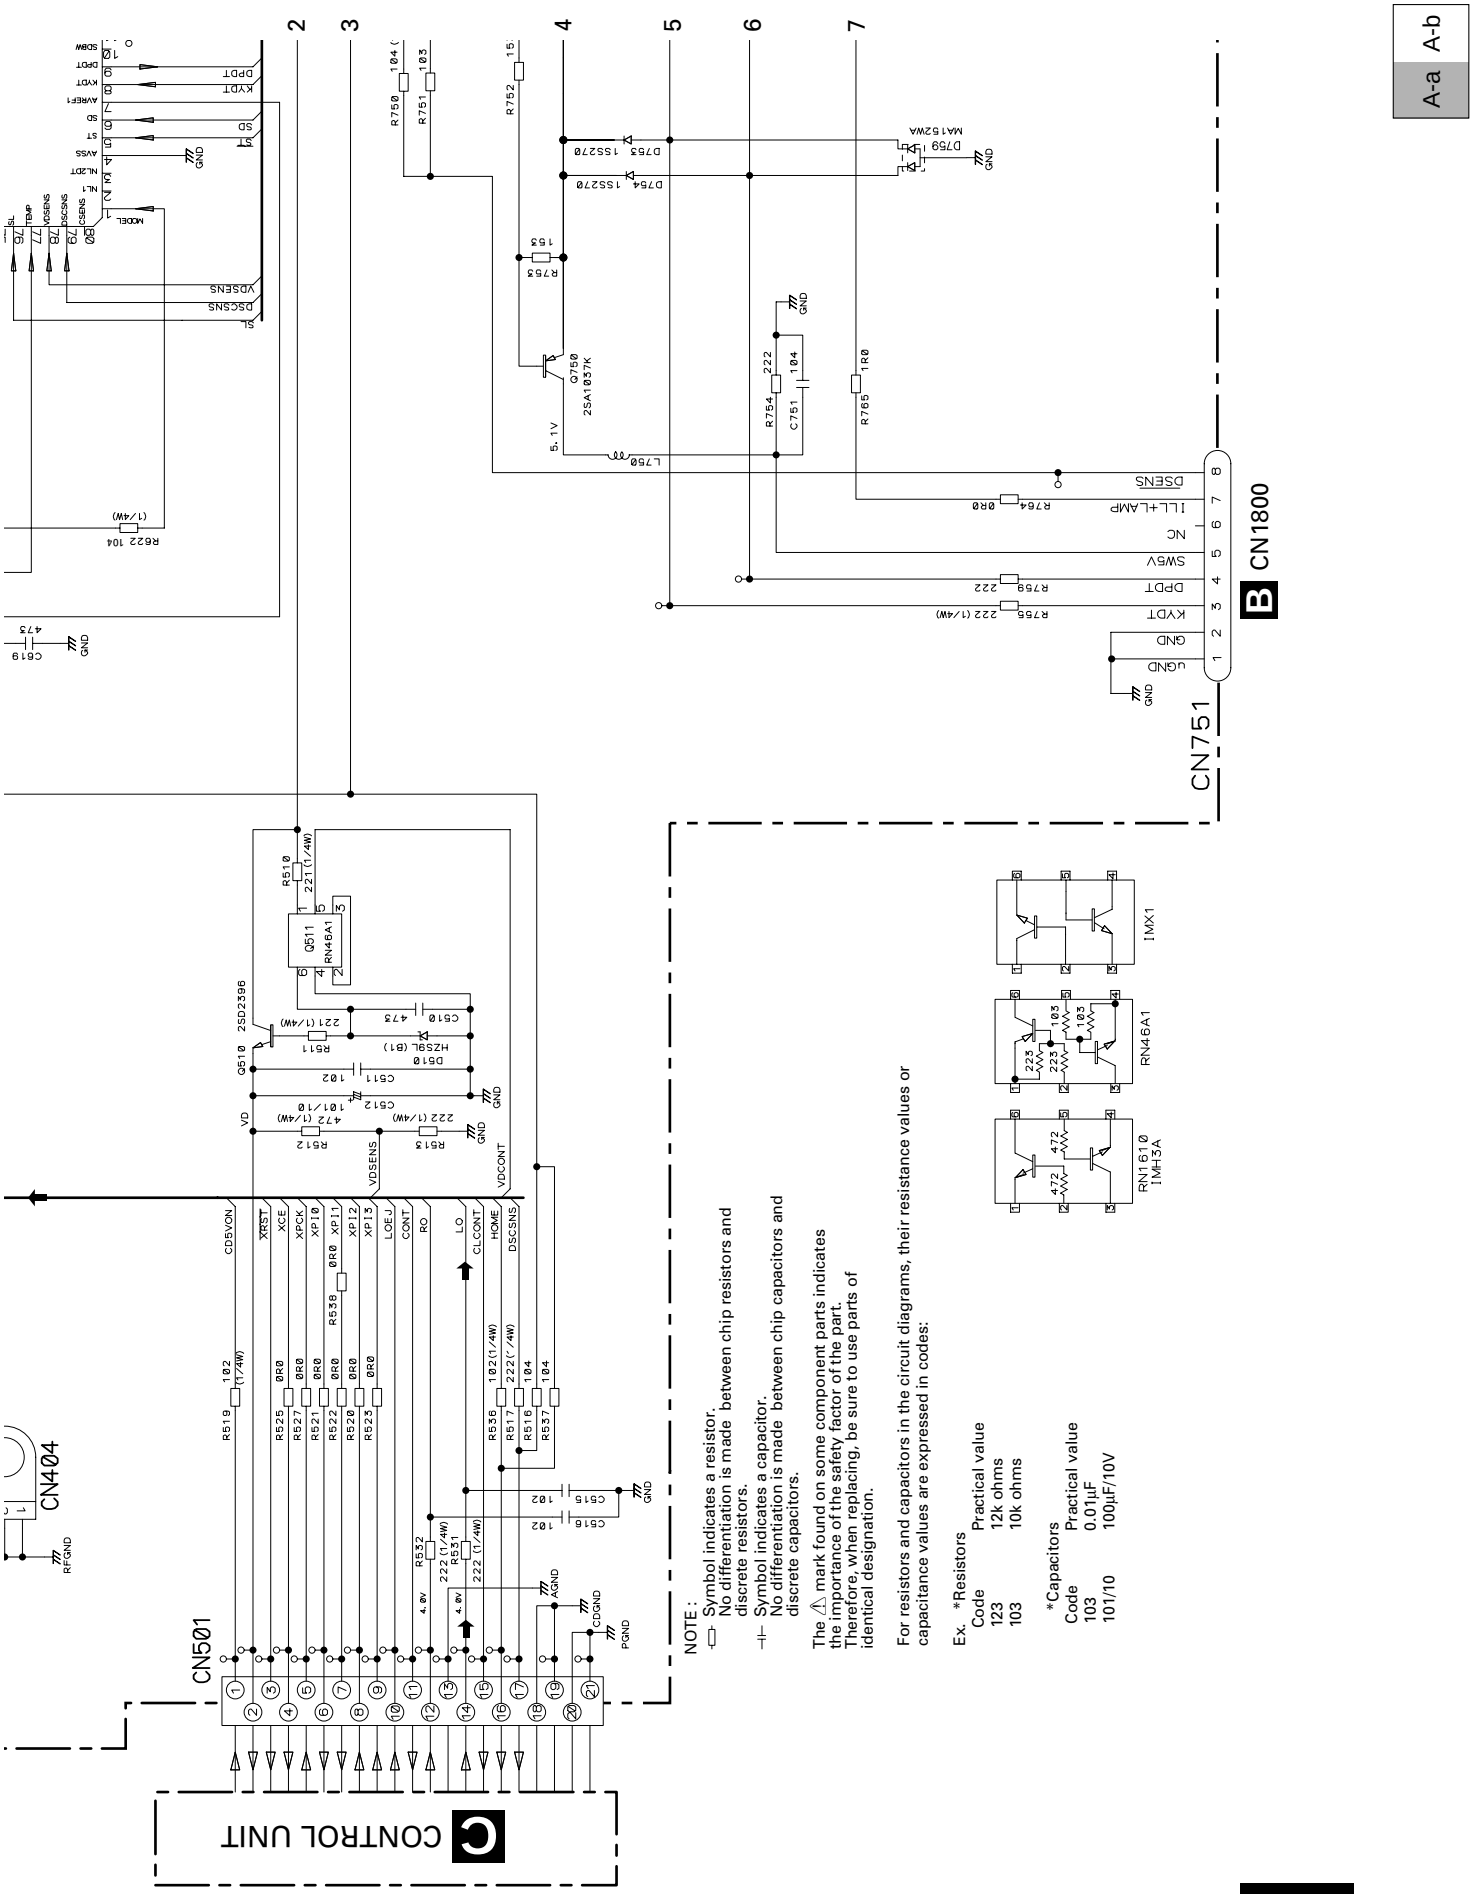
CONTROL UNIT
CN501
CN404
CN751
CN1800
NOTE :
Symbol indicates a resistor.
No differentiation is made between chip resistors and discrete resistors.
Symbol indicates a capacitor.
No differentiation is made between chip capacitors and discrete capacitors.
The ⚠ mark found on some component parts indicates the importance of the safety factor of the part.
Therefore, when replacing, be sure to use parts of identical designation.
For resistors and capacitors in the circuit diagrams, their resistance values or capacitance values are expressed in codes:
Ex. *Resistors
Code Practical value
123 12k ohms
103 10k ohms
*Capacitors
Code Practical value
103 0.01µF
101/10 100µF/10V

A-a A-b

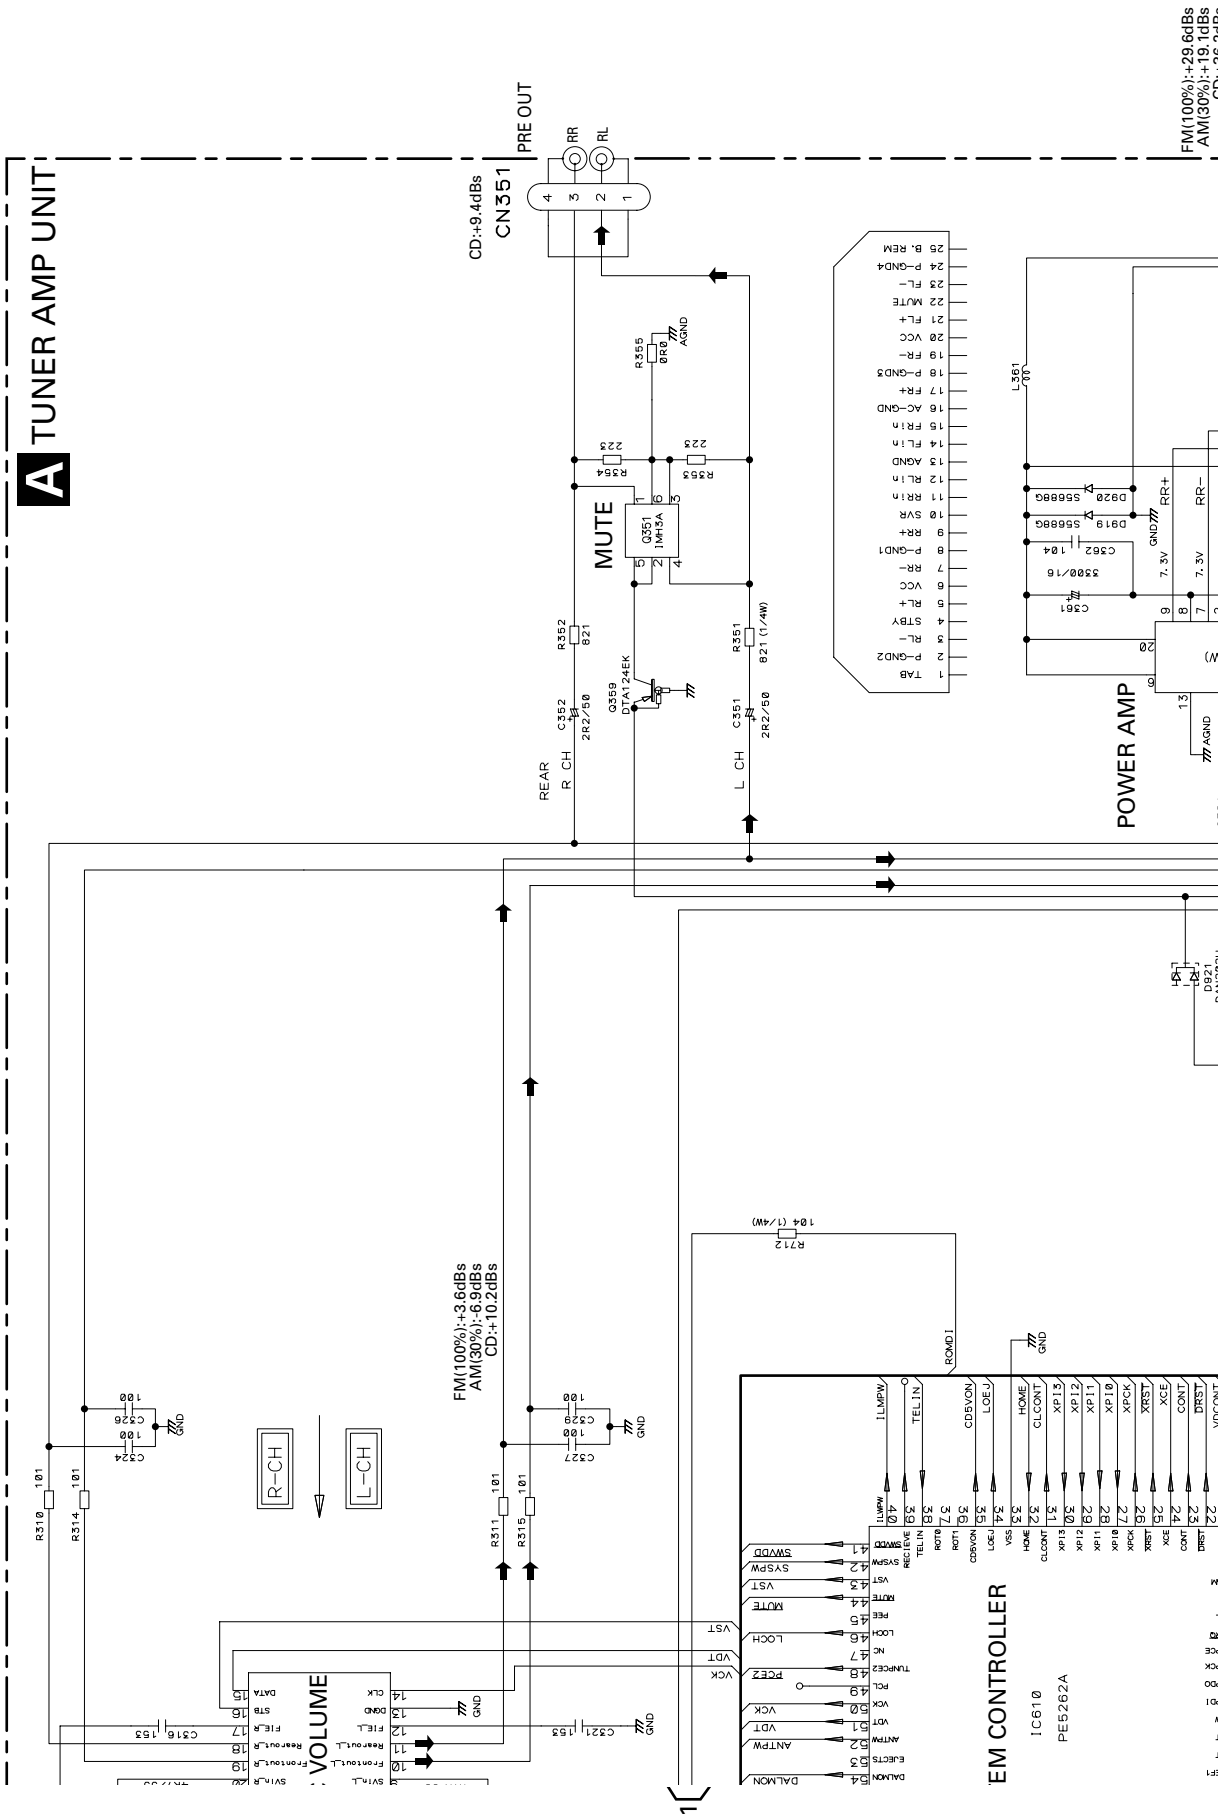
A TUNER AMP UNIT
PRE OUT
RR
RL
CD:+9.4dBs
CN351
FM(100%):+29.6dBs
AM(30%):+19.1dBs
MUTE
Q351
1MH5A
R355
0R0
AGND
R354
22Ω
R353
22Ω
R352
821
R351
821 (1/4W)
Q359
DTA124EK
C352
2R2/50
C351
2R2/50
REAR
R CH
L CH
POWER AMP
TAB
P-GND2
STBY
RL+
RL-
VCC
RR-
P-GND1
SVR
RR+
AGND
RR1n
RL1n
FL1n
FR1n
AC-GND
P-GND3
FR+
FR-
VCC
FL+
FL-
MUTE
P-GND4
B. REM
L361
10Ω
D920
D919
SS688G
C362
104
3300/16
C361
7.3V
GND
RR+
RR-
FM(100%):+3.6dBs
AM(30%):-6.9dBs
CD:+10.2dBs
R212
104 (1/4W)
R310
R314
R311
R315
101
C324
C325
C327
C329
100
GND
R-CH
L-CH
VOLUME
C316
C321
153
DATA
STB
CLK
DGND
FILR
FILL
RearOutR
RearOutL
FrontOutR
FrontOutL
SubwR
SubwL
EM CONTROLLER
IC610
PE5262A
ILMPW
TEL1N
CD5VON
LOEU
HOME
CLCONT
XPI3
XPI2
XPI1
XPI0
XPCK
XRST
XCE
CONT
DRST
SWDD
SYSPW
VST
ROTE
PEE
LOCH
NC
TUNPCE2
PCL
VCK
VDT
ANTPW
EJECTS
DALMON
ROMD1
VSS
RECIEVE
ROT0
ROT1
VDT
VCK
PCE2
1

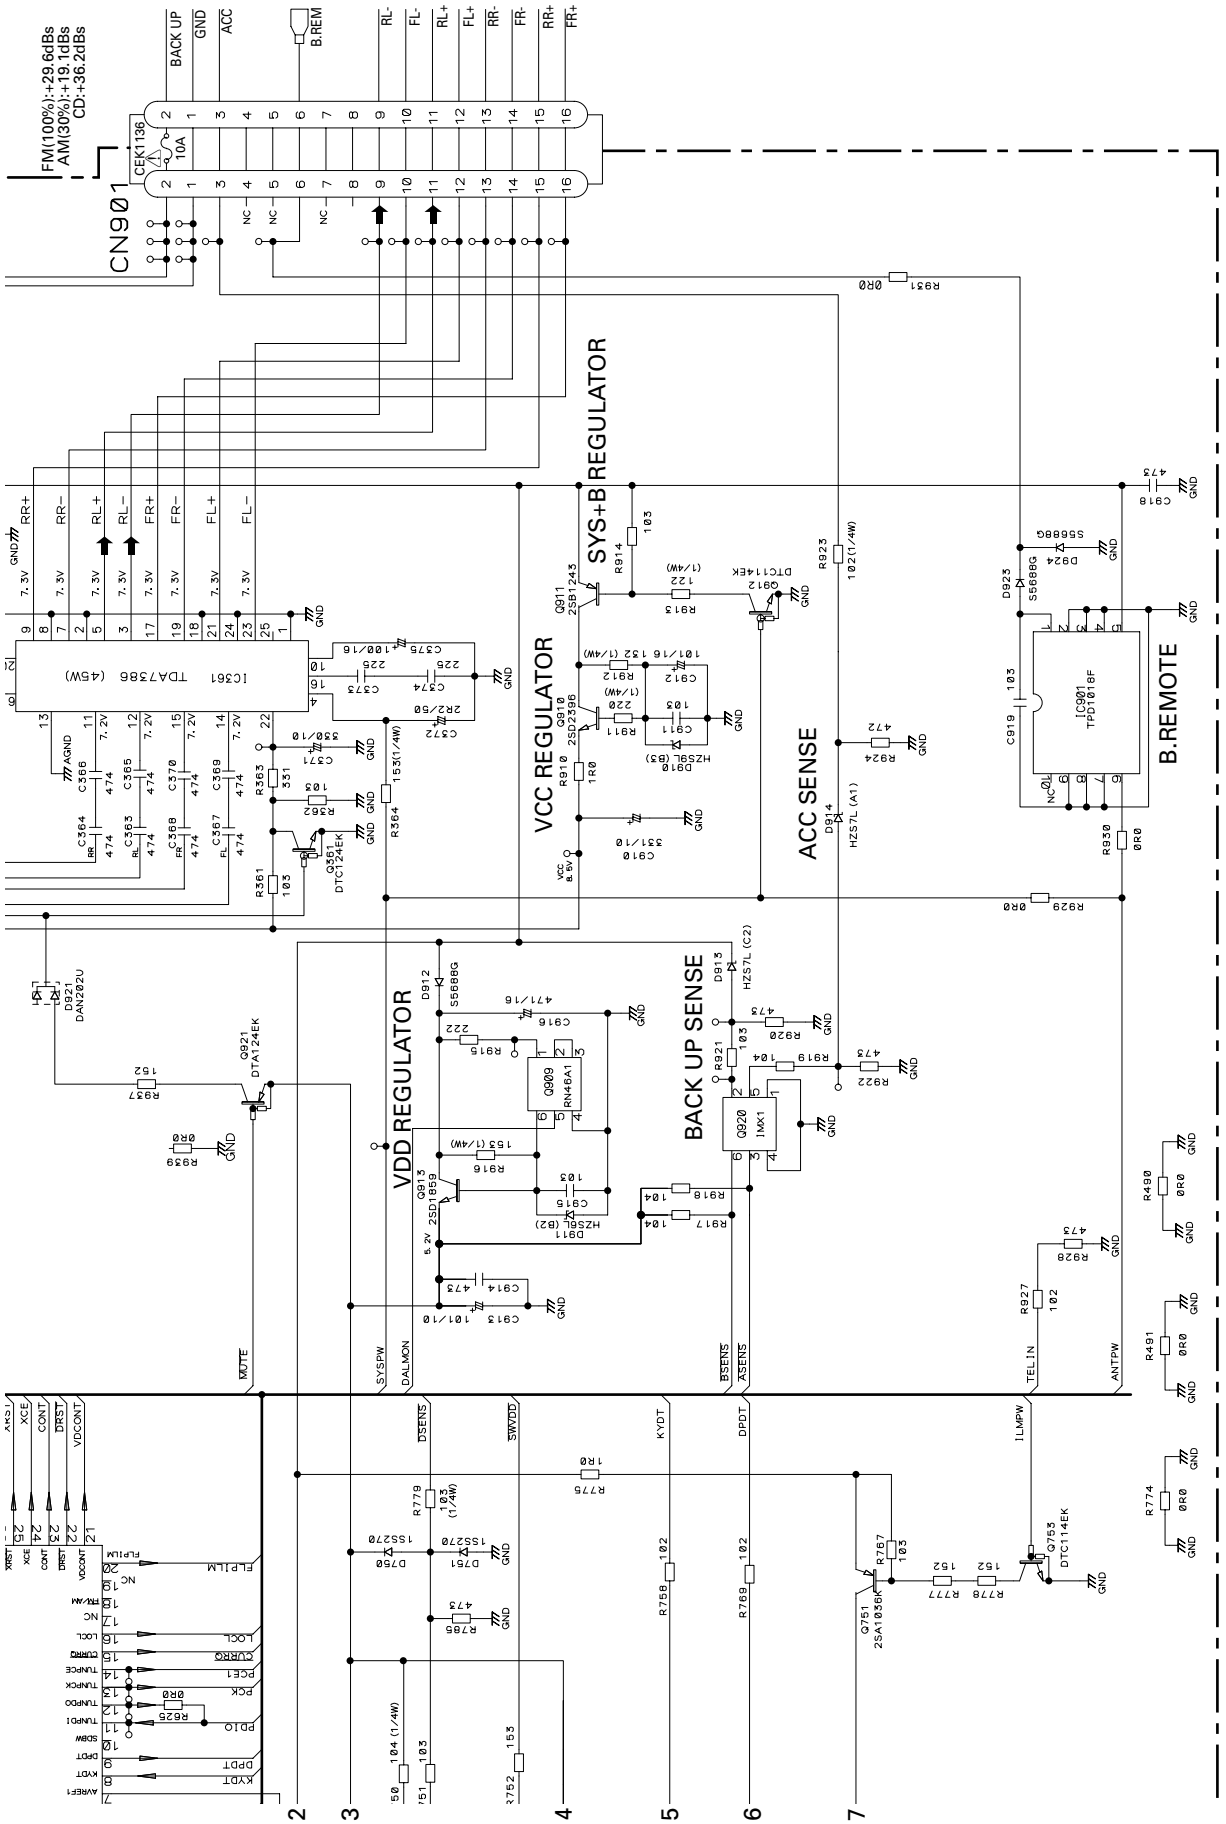
CN901
CEK1136
10A
FM(100%):+29.6dBs
AM(30%):+19.1dBs
CD:+36.2dBs
BACK UP
GND
ACC
B.REM
RL-
FL-
RL+
FL+
RR-
FR-
RR+
FR+
SYS+B REGULATOR
VCC REGULATOR
ACC SENSE
BACK UP SENSE
VDD REGULATOR
B.REMOTE
IC361 TDA7386 (45W)
IC901 TPD1018F
Q911 2SB1243
Q910 2SD2396
Q912 DTC114EK
Q351 DTC124EK
Q921 DTA124EK
Q909 RN46A1
Q920 1MX1
Q913 2SD1859
Q751 2SA1036K
Q753 DTC114EK
D921 DAN202U
D912 S5688G
D913 HZS7L (C2)
D914 HZS7L (A1)
D923 S5688G
D924 S5688G
D910 HZS6L (B3)
D911 HZS6L (B2)
D750 1SS270
D751 1SS270
R931 0R0
R914 103
R913 122 (1/4W)
R923 102(1/4W)
R912 101/16 152 (1/4W)
R911 220 (1/4W)
R910 1R0
R924 472
R930 0R0
R929 0R0
R363 331
R362 103
R364 153(1/4W)
R361 103
R937 152
R939 0R0
R915 222
R916 153 (1/4W)
R918 104
R917 104
R919 104
R921 103
R920 473
R922 473
R928 473
R927 102
R490 0R0
R491 0R0
R774 0R0
R925 0R0
R775 1R0
R779 103 (1/4W)
R785 473
R758 102
R769 102
R767 103
R777 152
R778 152
R825 0R0
C918 473
C919 103
C372 2R2/50
C373 225
C374 225
C375 100/16
C910 331/10
C911 103
C912 101/16
C913 101/10
C914 473
C915 103
C916 471/16
C917 473
C361 330/10
C362 103
C364 474
C365 474
C366 474
C367 474
C368 474
C369 474
C370 474
C371 331
7.3V
7.2V
AGND
MUTE
SYSPW
DALMON
BSENS
ASENS
TELIN
ANTPW
DSENS
SWVDD
KYDT
DPDT
ILMPW
XRST
XCE
CONT
DRST
VDCONT
FLPLLM
LOCL
CUSRQ
PCE1
PCK
PDIO
DPDT
KYDT
AVREF1
TUNPCE
TUNPCK
TUNPDO
TUNPDI
SDBW
RR+
RR-
RL+
RL-
FR+
FR-
FL+
FL-

3.3 KEYBOARD UNIT

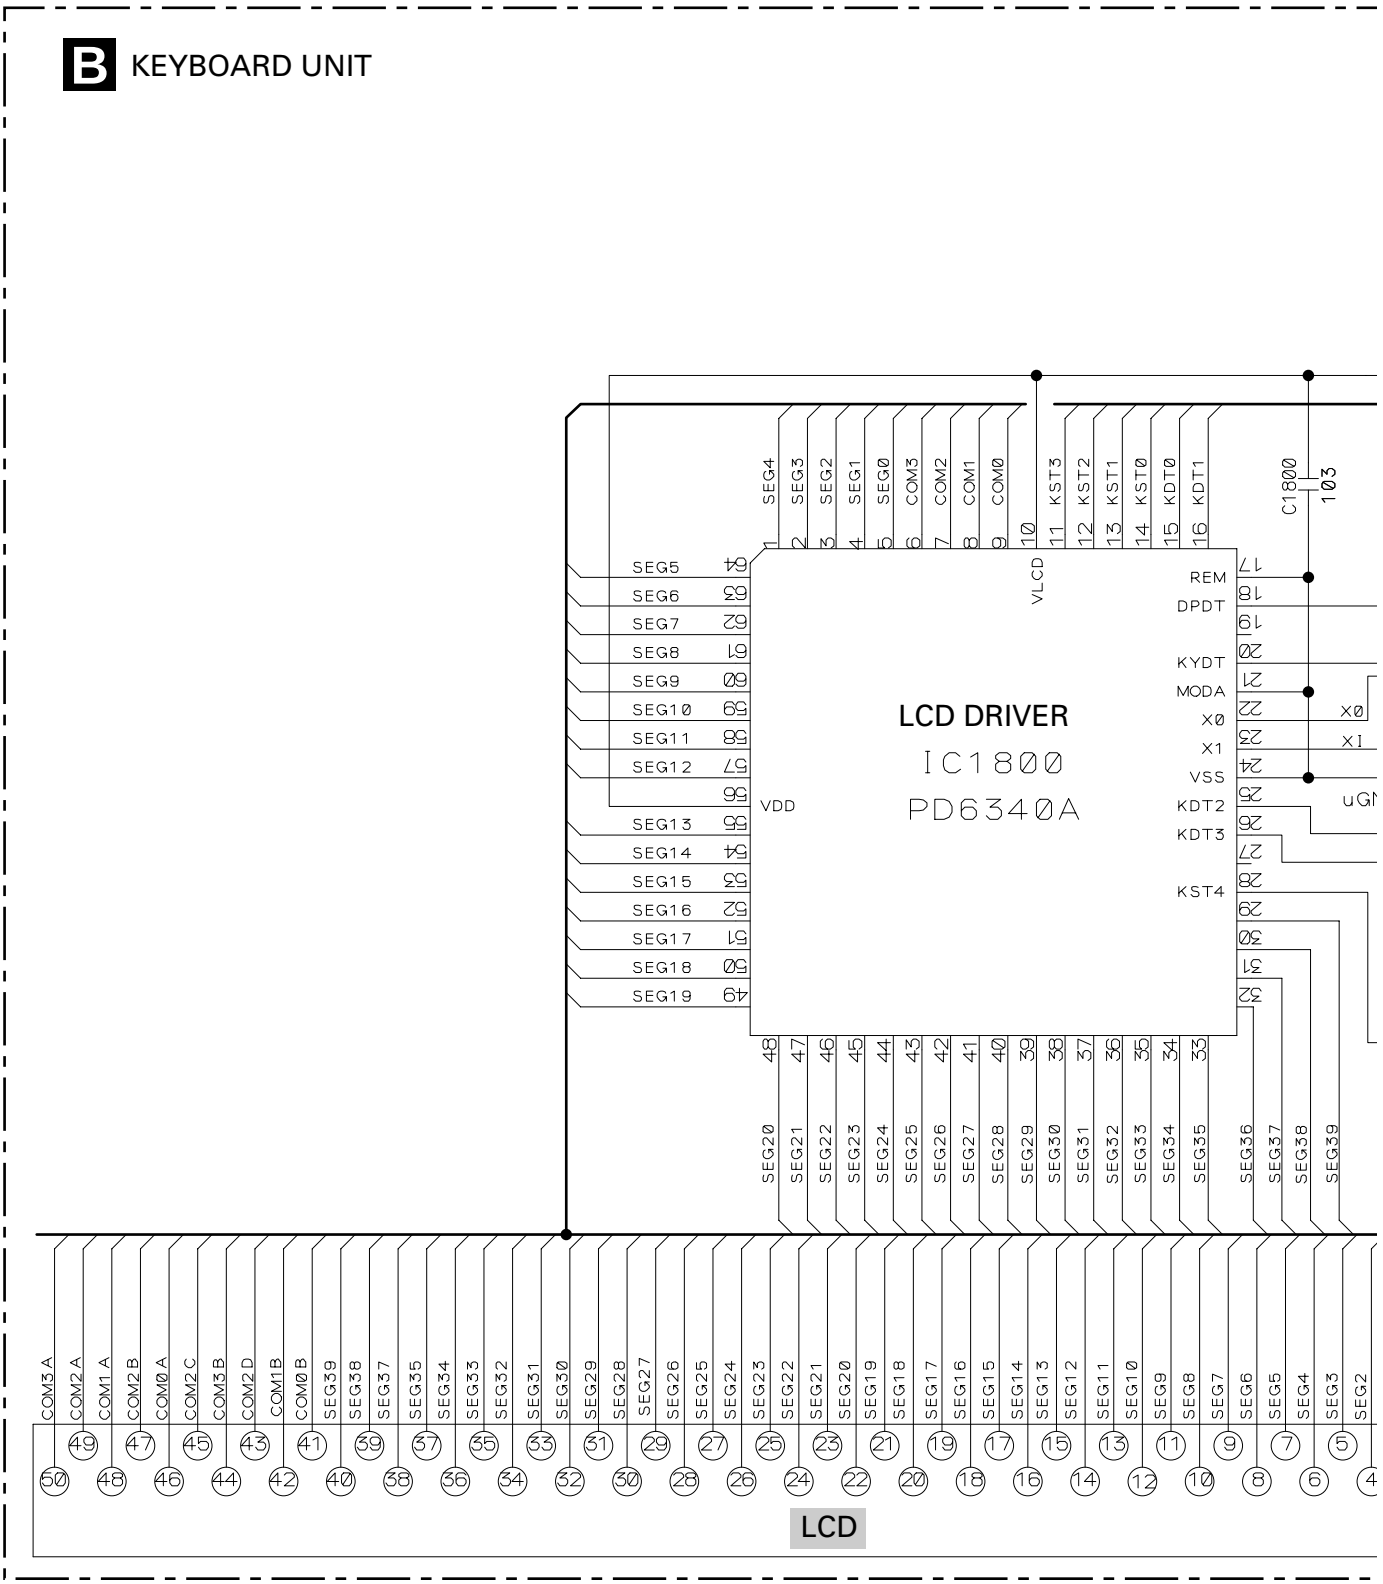

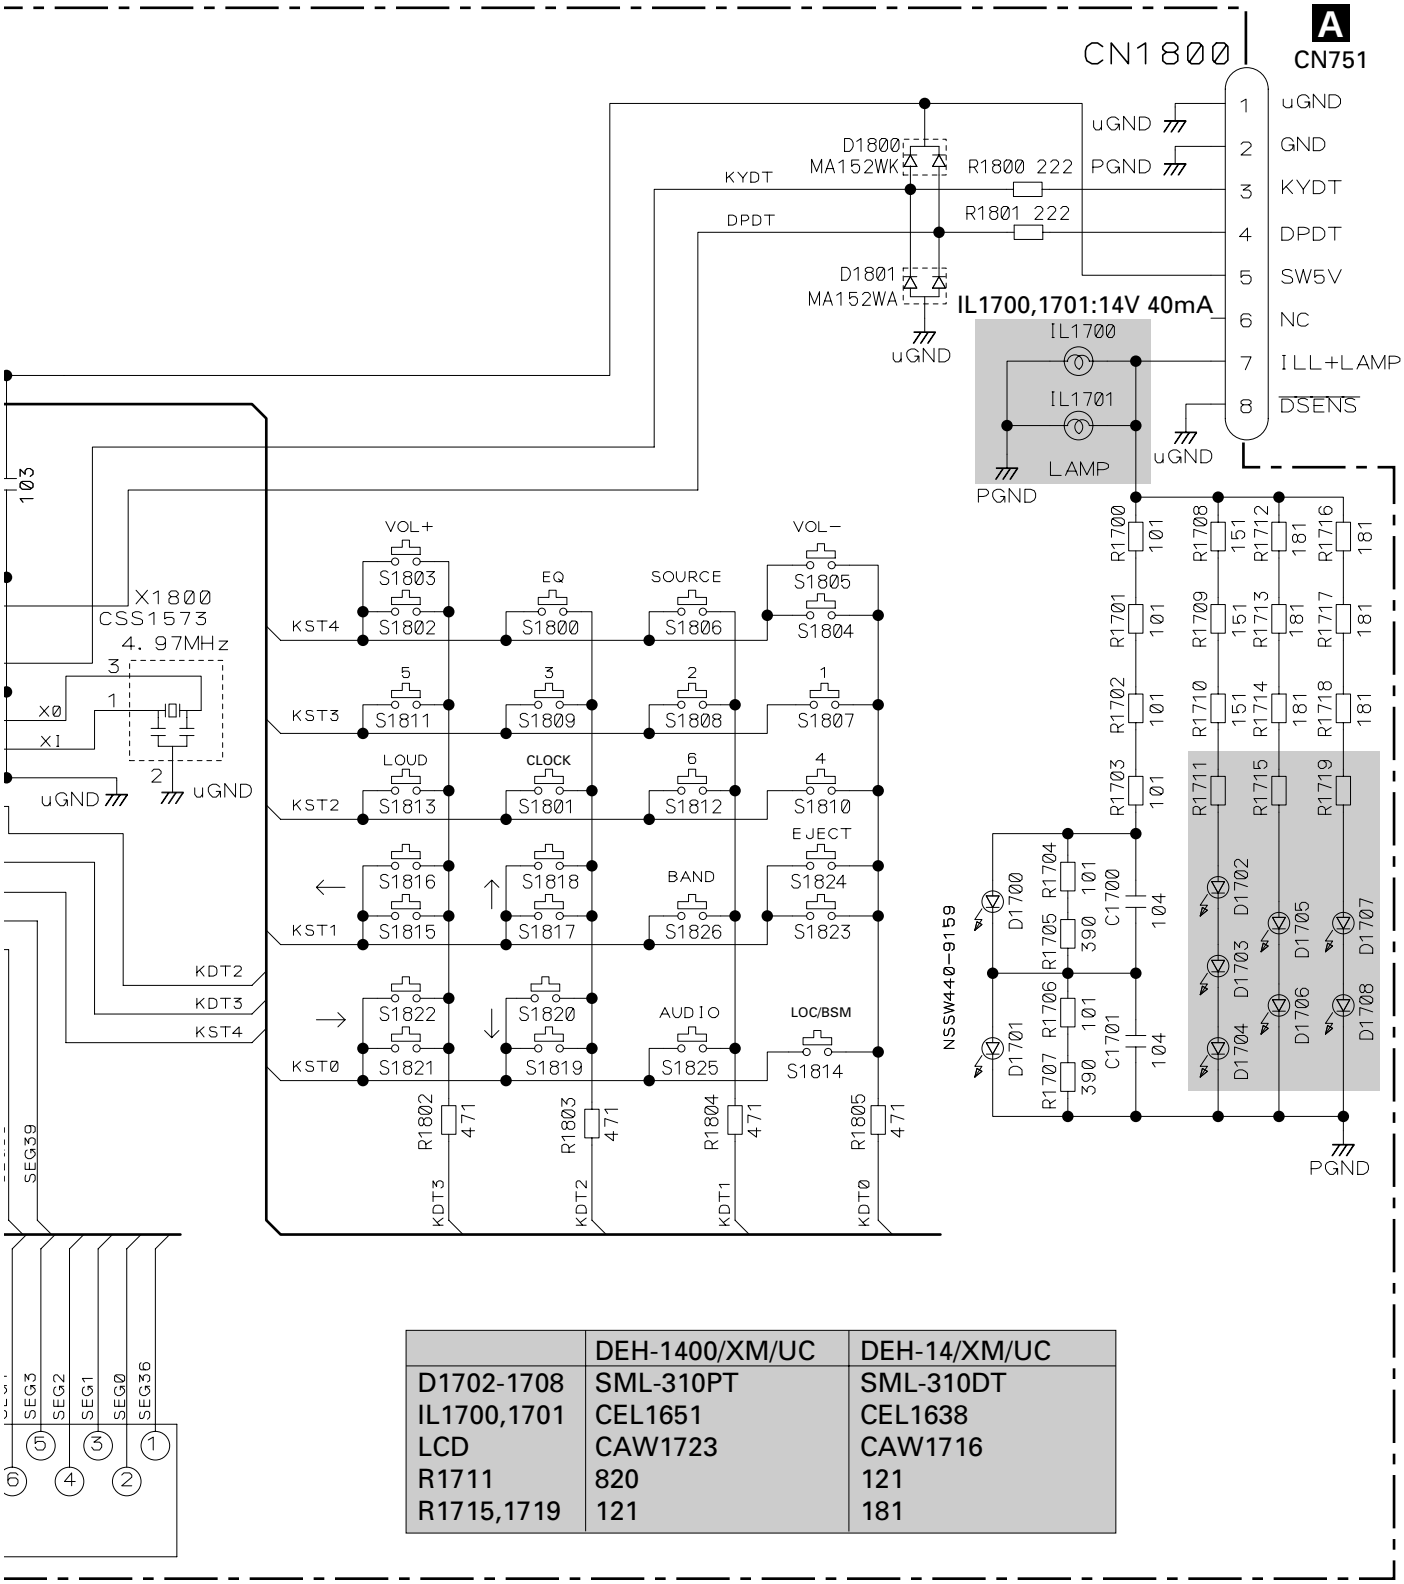

	DEH-1400/XM/UC	DEH-14/XM/UC
D1702-1708	SML-310PT	SML-310DT
IL1700,1701	CEL1651	CEL1638
LCD	CAW1723	CAW1716
R1711	820	121
R1715,1719	121	181

3.4 CD MECHANISM MODULE C CONTROL UNIT

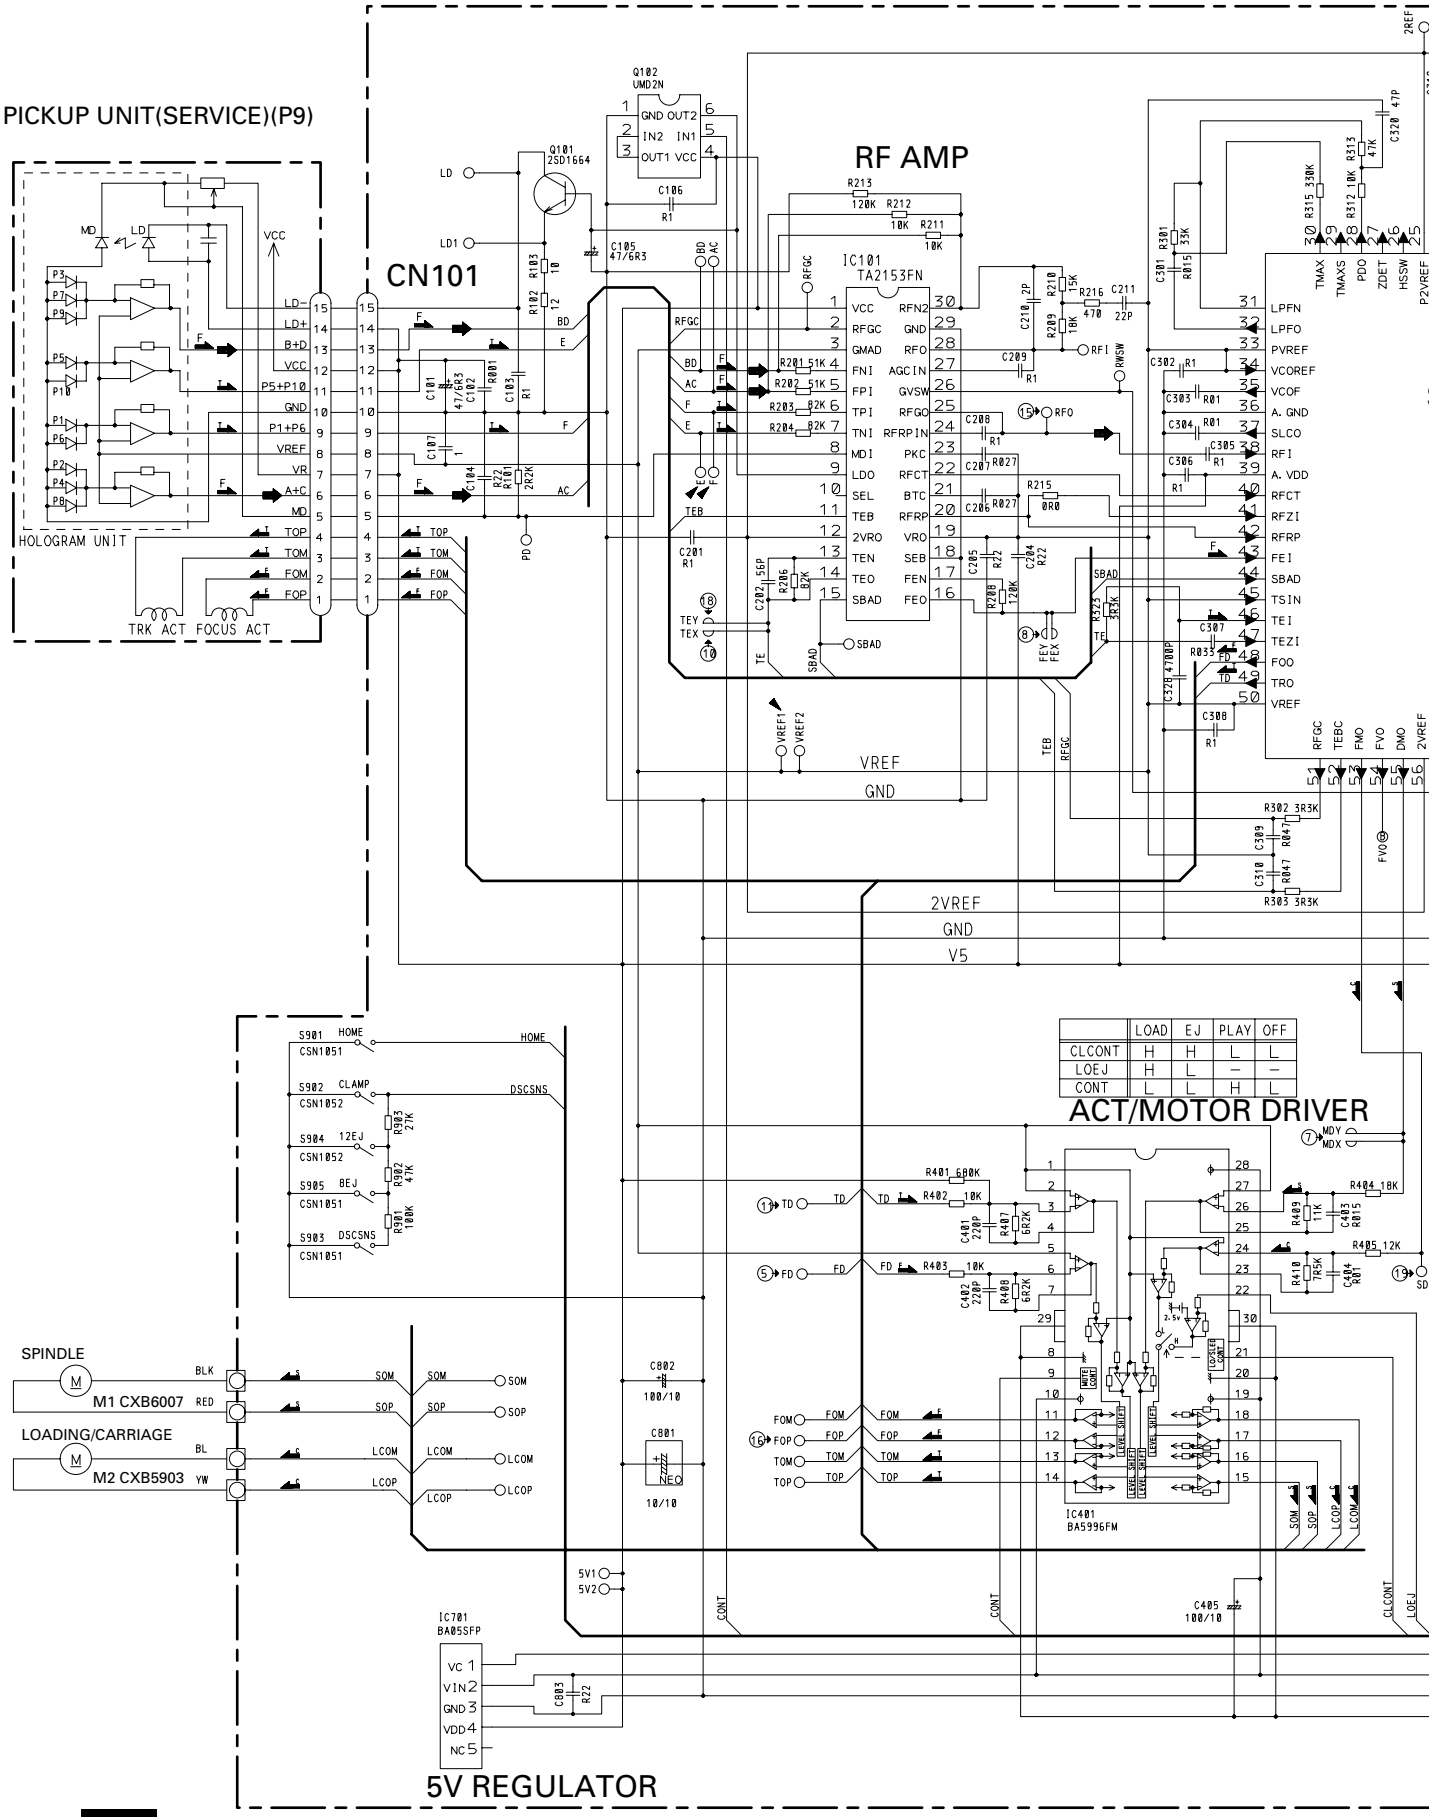

	LOAD	EJ	PLAY	OFF
CLCONT	H	H	L	L
LOEJ	H	L	–	–
CONT	L	L	H	L

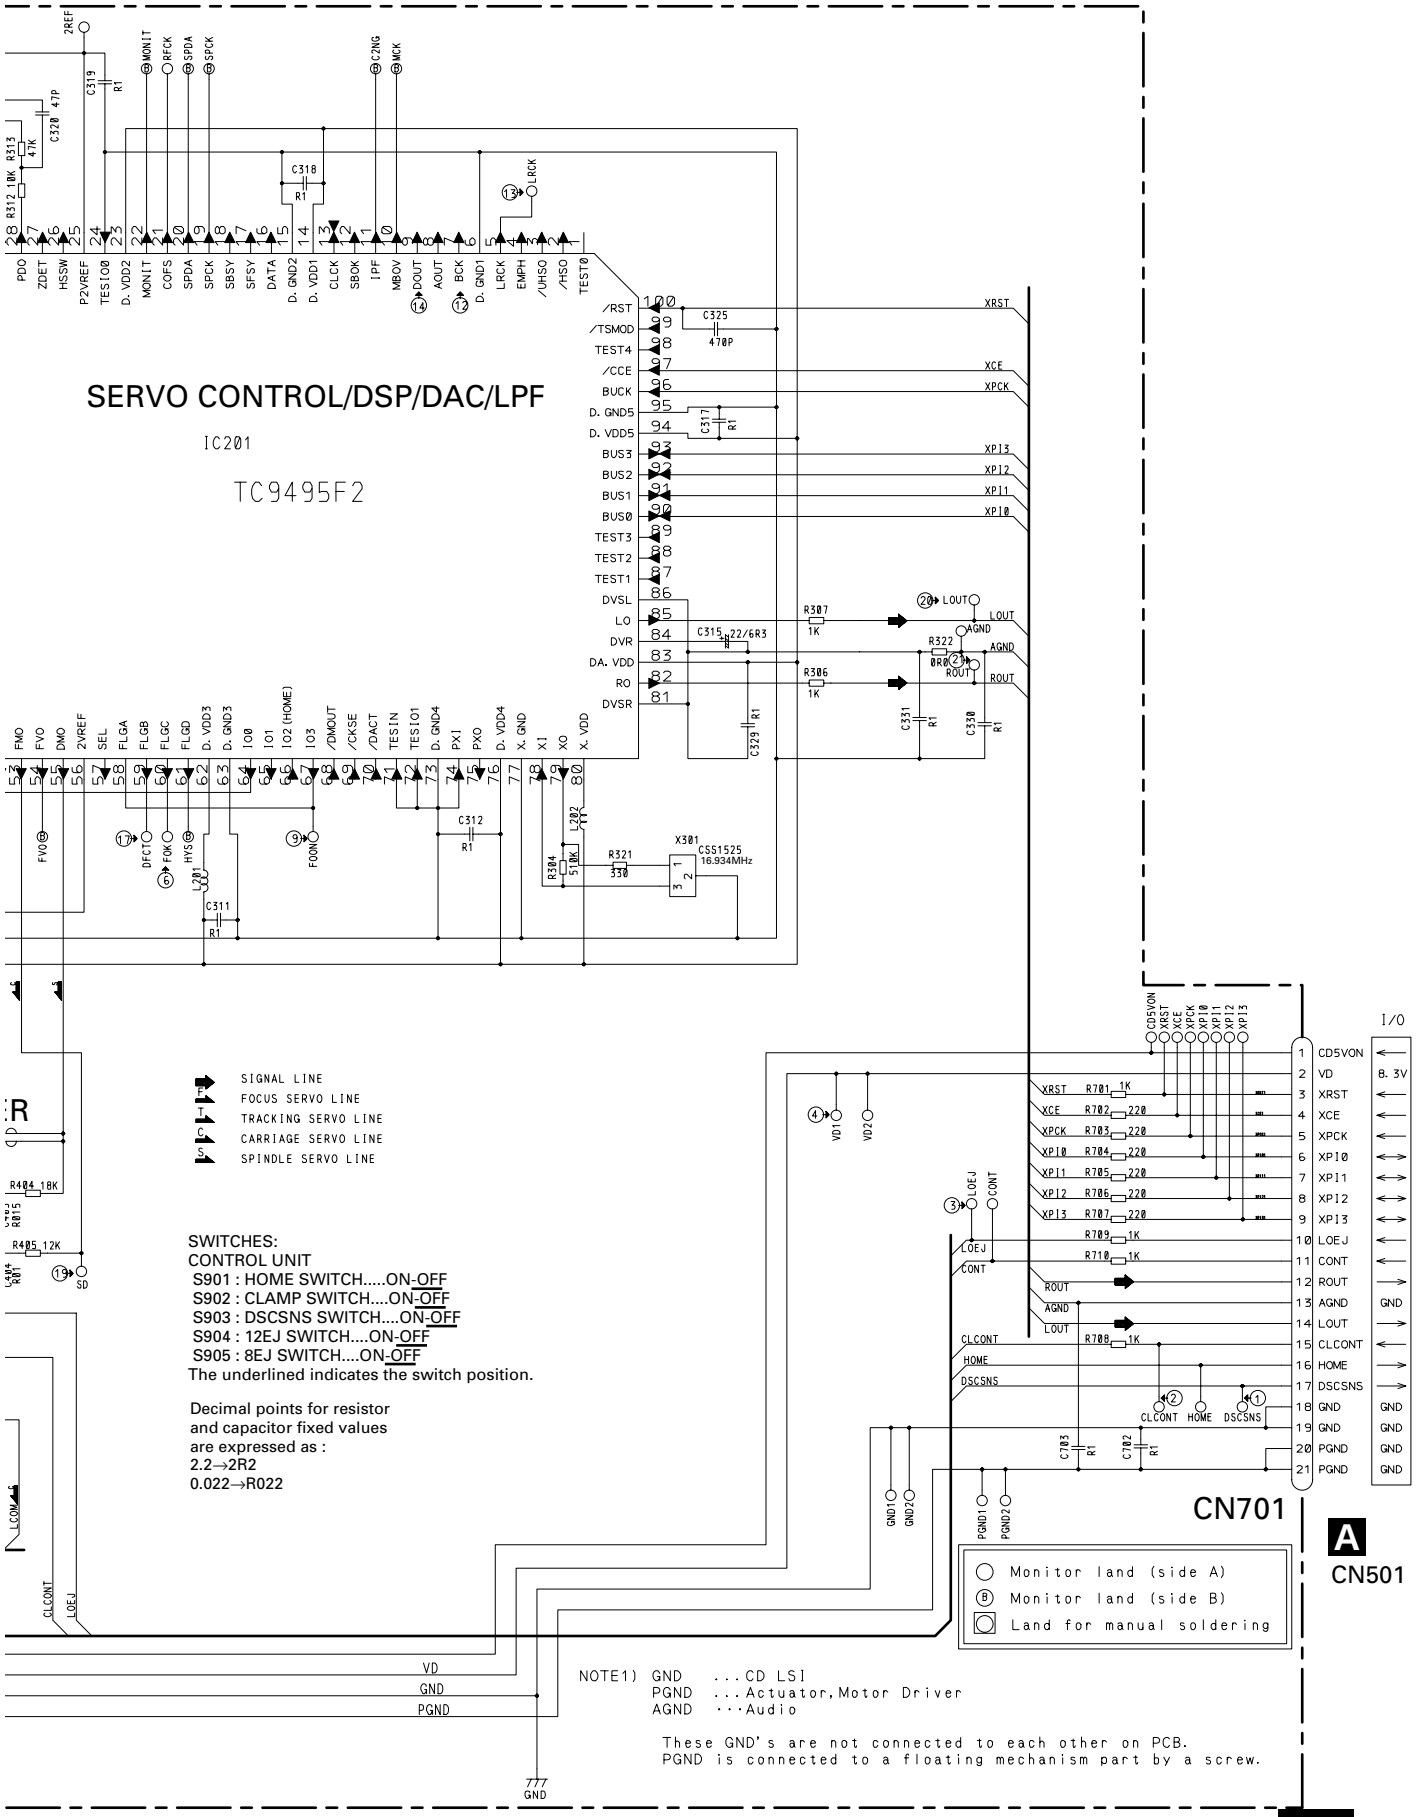
SERVO CONTROL/DSP/DAC/LPF
IC201
TC9495F2
SIGNAL LINE
FOCUS SERVO LINE
TRACKING SERVO LINE
CARRIAGE SERVO LINE
SPINDLE SERVO LINE
SWITCHES:
CONTROL UNIT
S901 : HOME SWITCH.....ON-OFF
S902 : CLAMP SWITCH....ON-OFF
S903 : DSCSNS SWITCH....ON-OFF
S904 : 12EJ SWITCH....ON-OFF
S905 : 8EJ SWITCH....ON-OFF
The underlined indicates the switch position.
Decimal points for resistor and capacitor fixed values are expressed as :
2.2→2R2
0.022→R022
CN701
CN501
Monitor land (side A)
Monitor land (side B)
Land for manual soldering
NOTE1) GND ...CD LSI
PGND ...Actuator,Motor Driver
AGND ···Audio
These GND's are not connected to each other on PCB.
PGND is connected to a floating mechanism part by a screw.

Note:1. The encircled numbers denote measuring pointes in the circuit diagram.
2. Reference voltage
VREF:2.1V

● Waveforms

① CH1:DSCSNS 5V/div.
② CH2:CLCONT 5V/div.
③ CH3:LOEJ 5V/div. 500ms/div.
④ CH4:VD 10V/div.
When loading (12 cm CD)

Ref. : GND
Mode : Normal

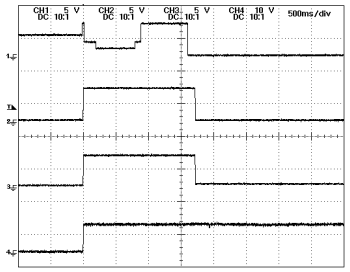

① CH1:DSCSNS 5V/div.
② CH2:CLCONT 5V/div.
③ CH3:LOEJ 5V/div. 500ms/div.
④ CH4:VD 10V/div.
When loading (8 cm CD)

Ref. : GND
Mode : Normal

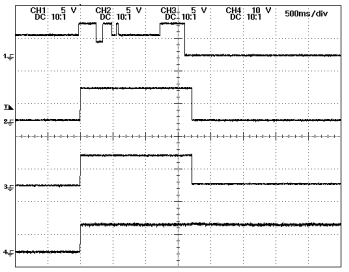

⑤ CH1:FD 500mV/div.
⑥ CH2:FOK 5V/div. 500ms/div.
⑦ CH3:MD 5V/div.

When setting up "Source On"

Ref. : VREF
Mode : Normal

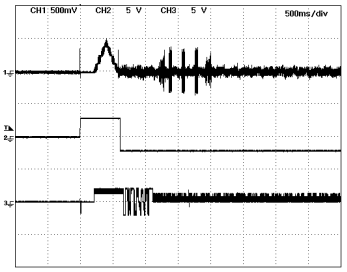

⑤ CH1:FD 500mV/div.
⑥ CH2:FOK 5V/div. 100ms/div.
⑦ CH3:MD 5V/div.

Magnified drawing for "time"

Ref. : VREF
Mode : Normal

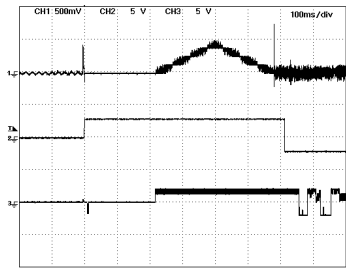

⑧ CH1:FE 500mV/div.
⑨ CH2:FOON 5V/div. 500ms/div.

When setting up "Source On"

Ref. : VREF
Mode : Normal

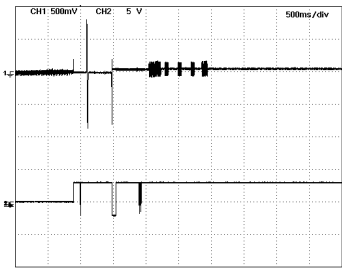

⑩ CH1:TE 500mV/div.
⑧ CH2:FE 500mV/div. 200ms/div.

When setting up "Source On"

Ref. : VREF
Mode : Normal

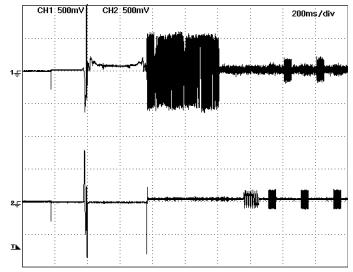

⑧ CH1:FE 500mV/div.
⑤ CH2:FD 500mV/div.
⑩ CH3:TE 500mV/div. 1ms/div.
⑪ CH4:TD 500mV/div.
During "Play"

Ref. : VREF
Mode : Normal

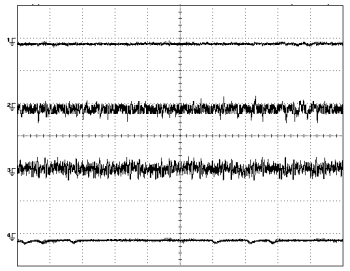

⑫ CH1:BCK 2V/div. 1µs/div.

During "Play"

Ref. : VREF
Mode : Normal

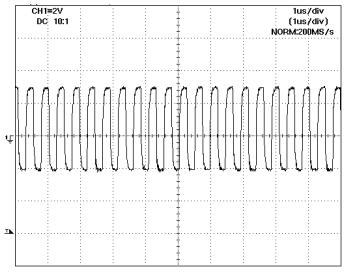

⑬ CH1:LRCK 2V/div.
⑭ CH2:DOUT 2V/div. 10µs/div.

During "Play"

Ref. : VREF
Mode : Normal

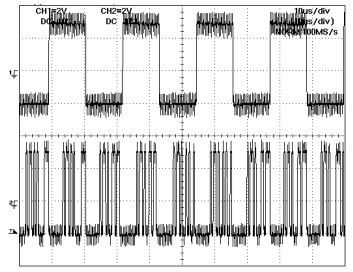

⑦ CH1:MD 500mV/div. 10µs/div.

During "Play"

Ref. : VREF
Mode : Normal

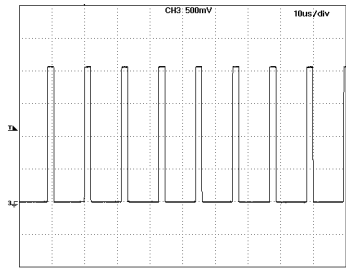

⑮ CH1:RFO 500mV/div. 0.5µs/div.

During "Play"

Ref. : VREF
Mode : Normal

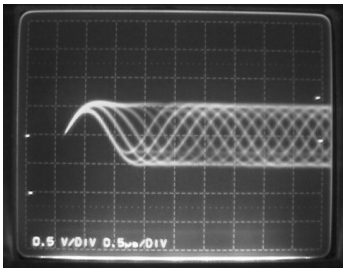

⑮ CH1:RFO 500mV/div.
⑩ CH2:TE 500mV/div. 2ms/div.

During "Tracking Open"

Ref. : VREF
Mode : Test

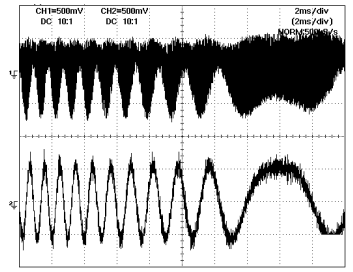

⑤ CH1:FD 1V/div.
⑯ CH2:FOP 2V/div. 200ms/div.

With no disk inserted
During "Focus Close"

Ref. : VREF
Mode : Test

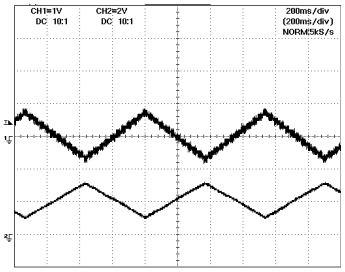

⑮ CH1:RFO 1V/div.
⑩ CH2:TE 500mV/div. 500µs/div.
⑪ CH3:TD 1V/div.

1 Track Jump

Ref. : VREF
Mode : Test

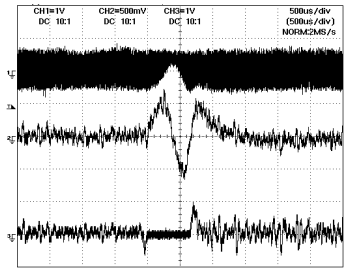

⑮ CH1:RFO 1V/div.
⑩ CH2:TE 1V/div. 5ms/div.
⑪ CH3:TD 1V/div.

32 Track Jump

Ref. : VREF
Mode : Test

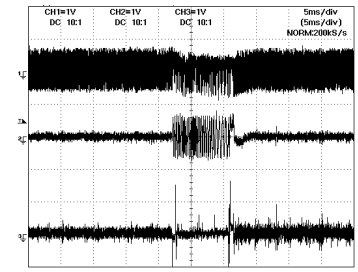

⑮ CH1:RFO 1V/div.
⑩ CH2:TE 1V/div. 5ms/div.
⑪ CH3:TD 1V/div.

100 Track Jump

Ref. : VREF
Mode : Test

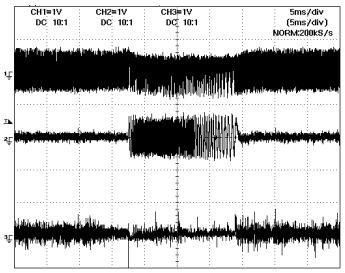

⑮ CH1:RFO 2V/div.
⑰ CH2:DFCT 5V/div. 500µs/div.
⑤ CH3:FD 1V/div.
⑪ CH4:TD 2V/div.

When reproducing black dots (800µm)

Ref. : VREF
Mode : Normal

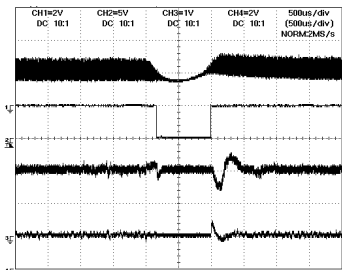

⑮ CH1:RFO 1V/div.
⑩ CH2:TE 500mV/div. 200ms/div.
⑰ CH3:DFCT 5V/div.

During inside/outside search

Ref. : VREF
Mode : Normal

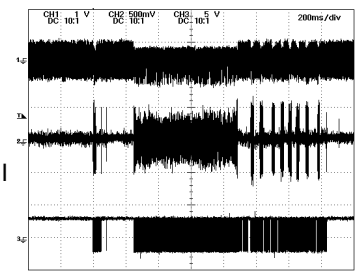

⑱ CH1:TEY 500mV/div. 200ms/div.
⑲ CH2:SD 2V/div.

During inside/outside search

Ref. : VREF
Mode : Normal

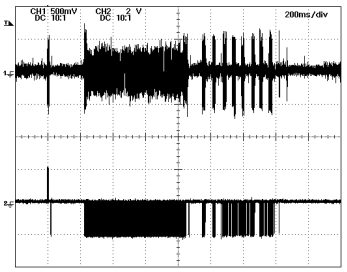

① CH1:DSCSNS 5V/div.
② CH2:CLCONT 5V/div. 200ms/div.
③ CH3:LOEJ 5V/div.

When "Eject" (12 cm CD)

Ref. : GND
Mode : Normal

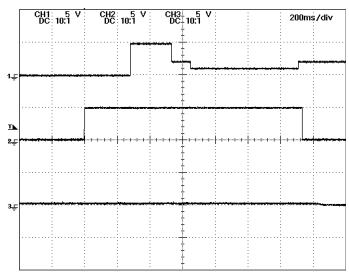

① CH1:DSCSNS 5V/div.
② CH2:CLCONT 5V/div. 200ms/div.
③ CH3:LOEJ 5V/div.

When "Eject" (8cm CD)

Ref. : GND
Mode : Normal

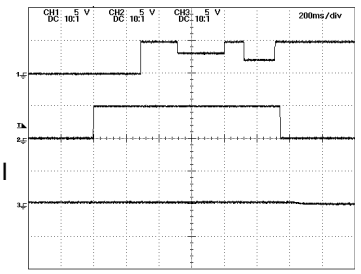

⑳ CH1:LOUT 2V/div.
㉑ CH2:ROUT 2V/div. 200µs/div.

"Play" in 1kHz, 0dB

Ref. : GND
Mode : Normal

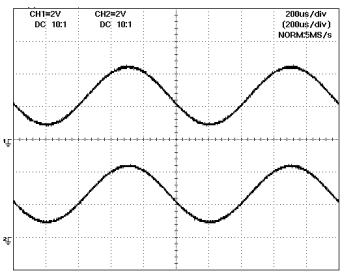

4. PCB CONNECTION DIAGRAM

4.1 TUNER AMP UNIT

A TUNER AMP UNIT

NOTE FOR PCB DIAGRAMS

1. The parts mounted on this PCB include all necessary parts for several destination.
   For further information for respective destinations, be sure to check

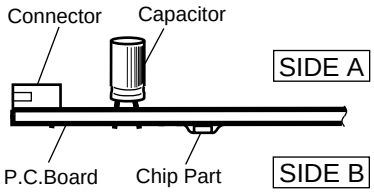

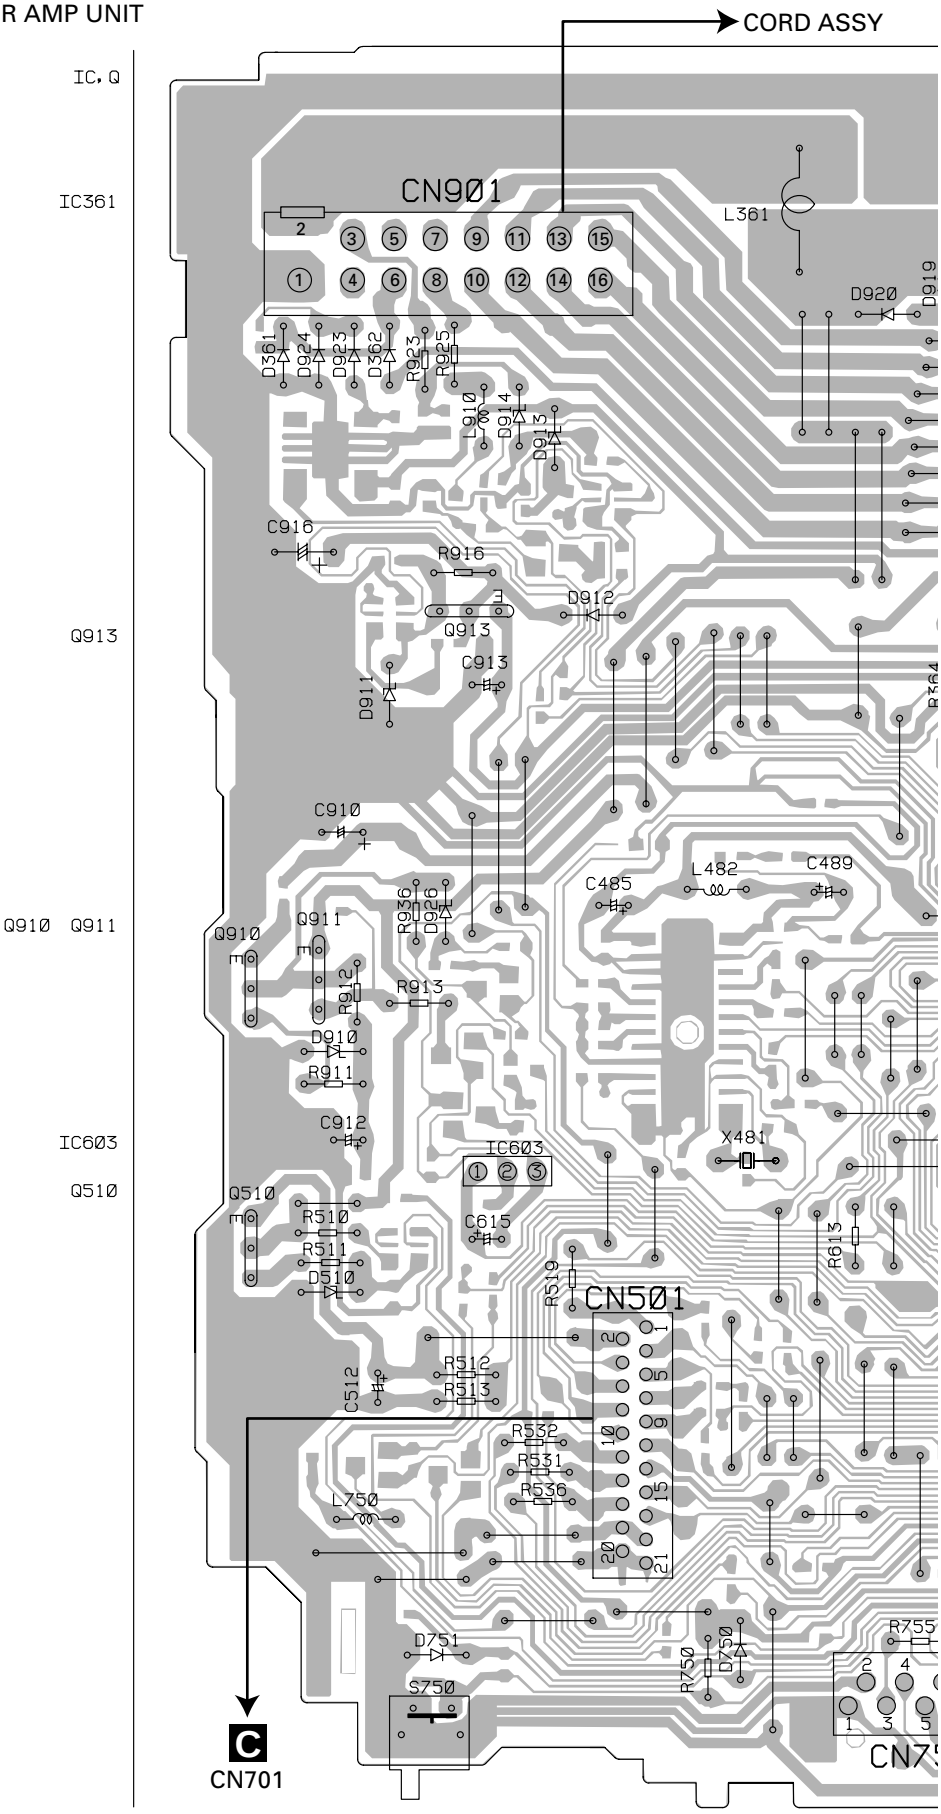

SIDE A

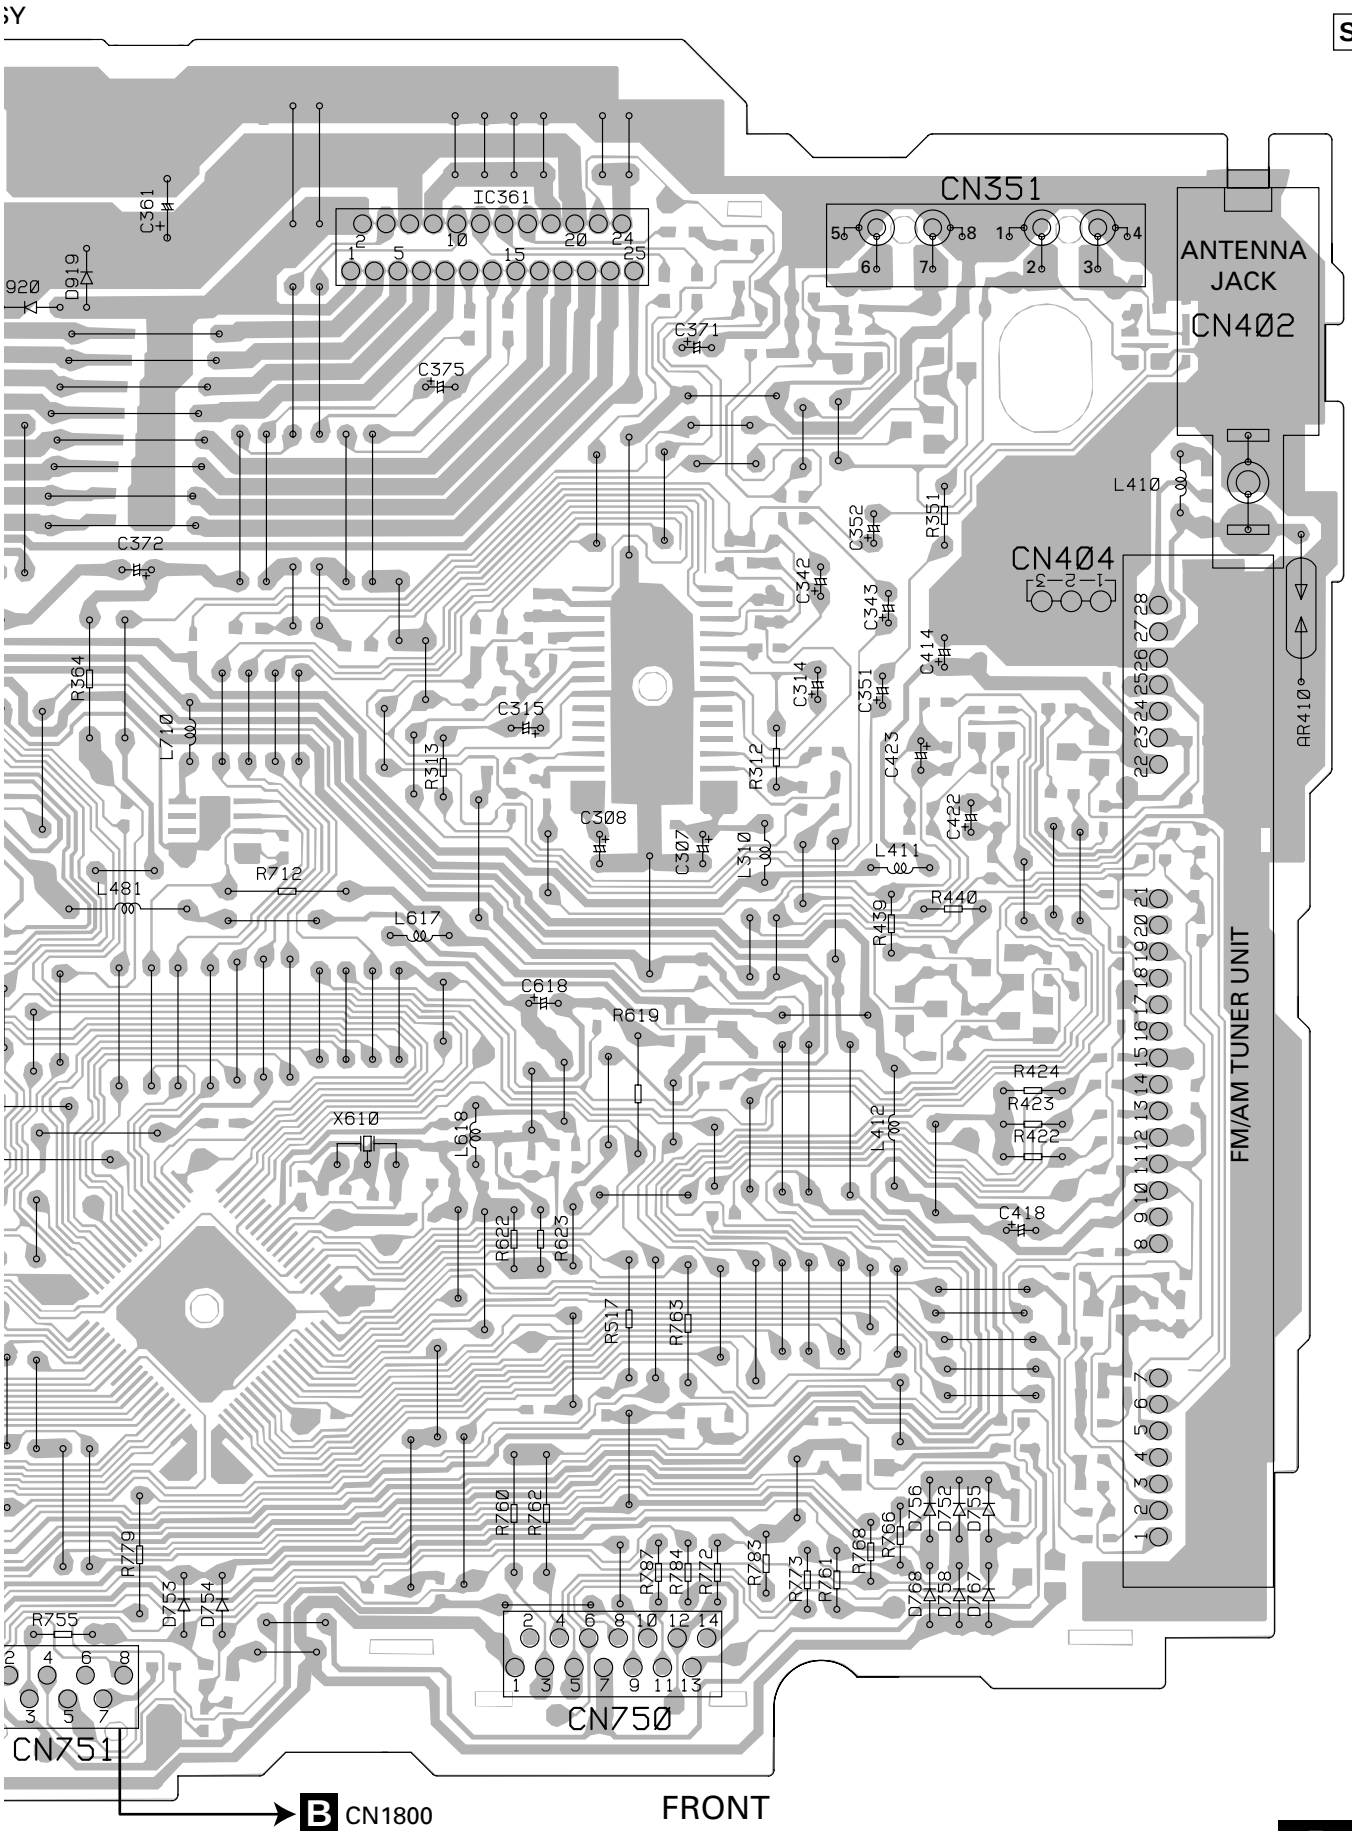
IC361
CN351
ANTENNA JACK
CN402
CN404
FM/AM TUNER UNIT
CN750
CN751
B CN1800
FRONT
C361
D919
C375
C371
C372
C352
R351
L410
C342
C343
C414
R364
L710
C315
C314
C351
C423
R313
R312
C308
C307
L310
C422
L411
L481
R712
R440
L617
R439
C618
R619
R424
R423
R422
X610
L618
L412
C418
R622
R623
R517
R763
R760
R762
R779
D753
D754
R755
R787
R784
R772
R783
R773
R761
R768
R766
D756
D752
D755
D768
D758
D767

A TUNER AMP UNIT

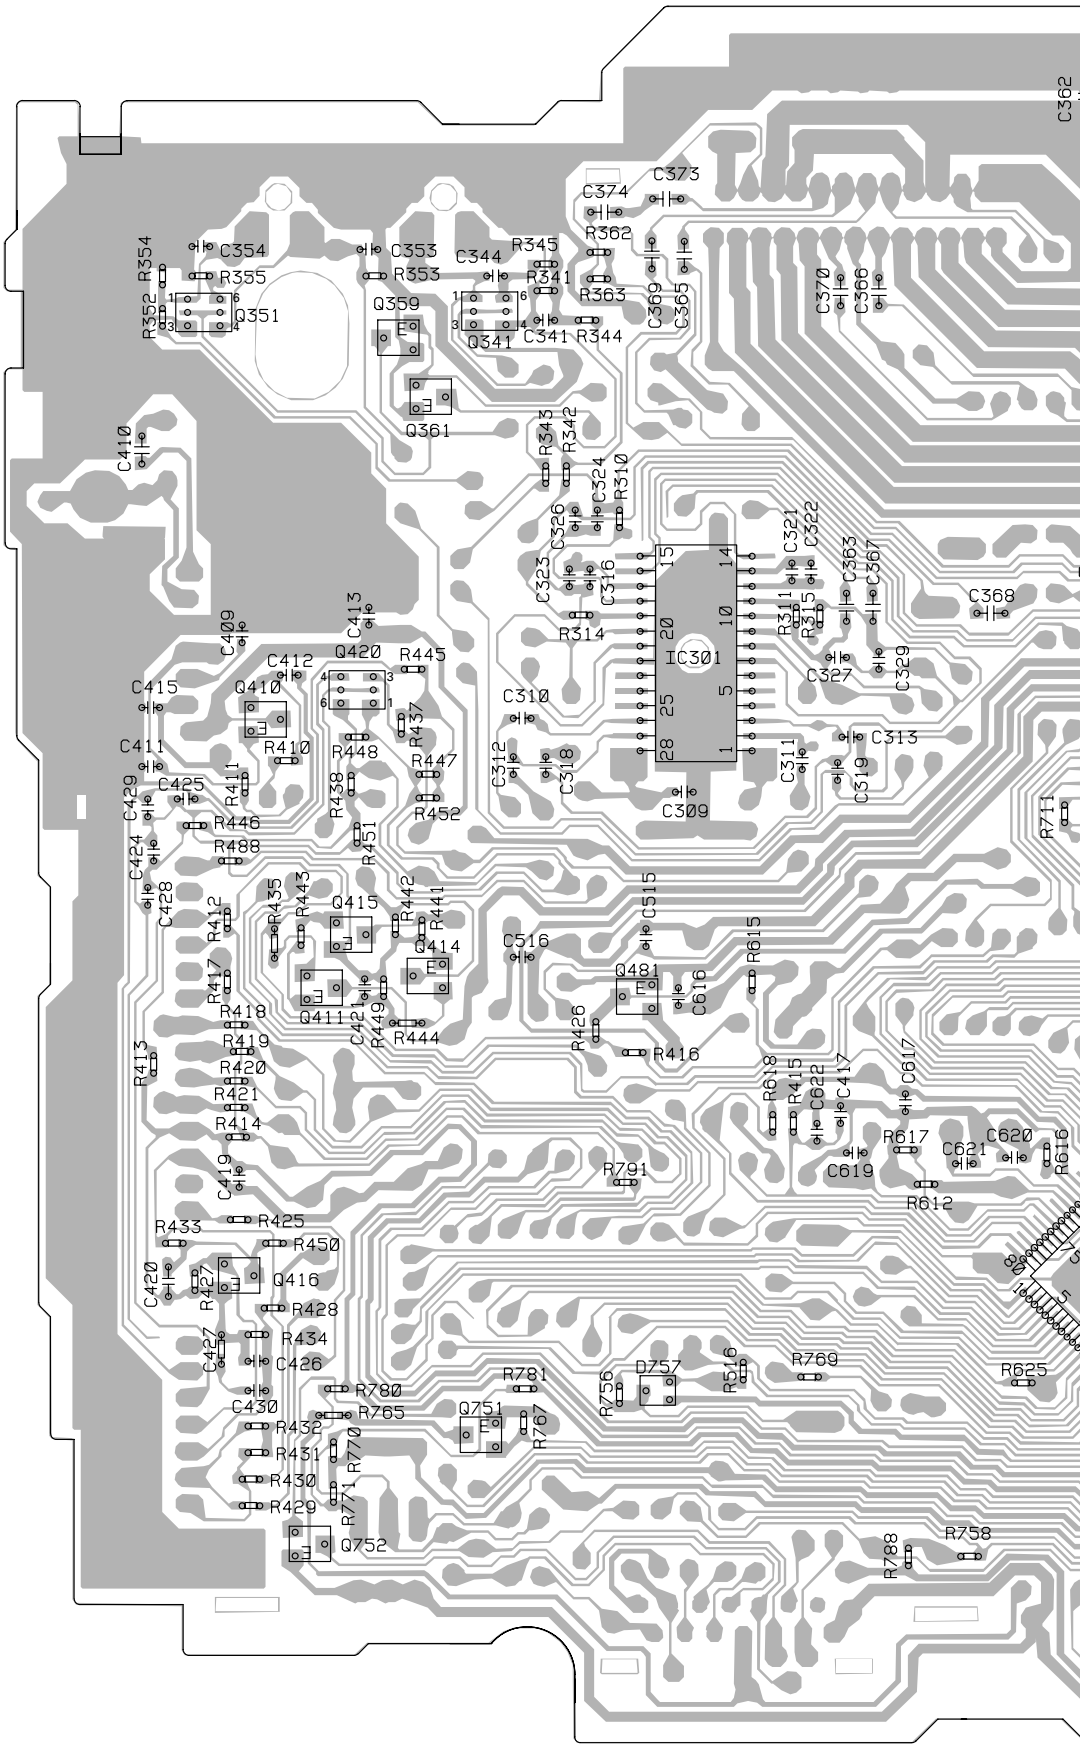

SIDE B

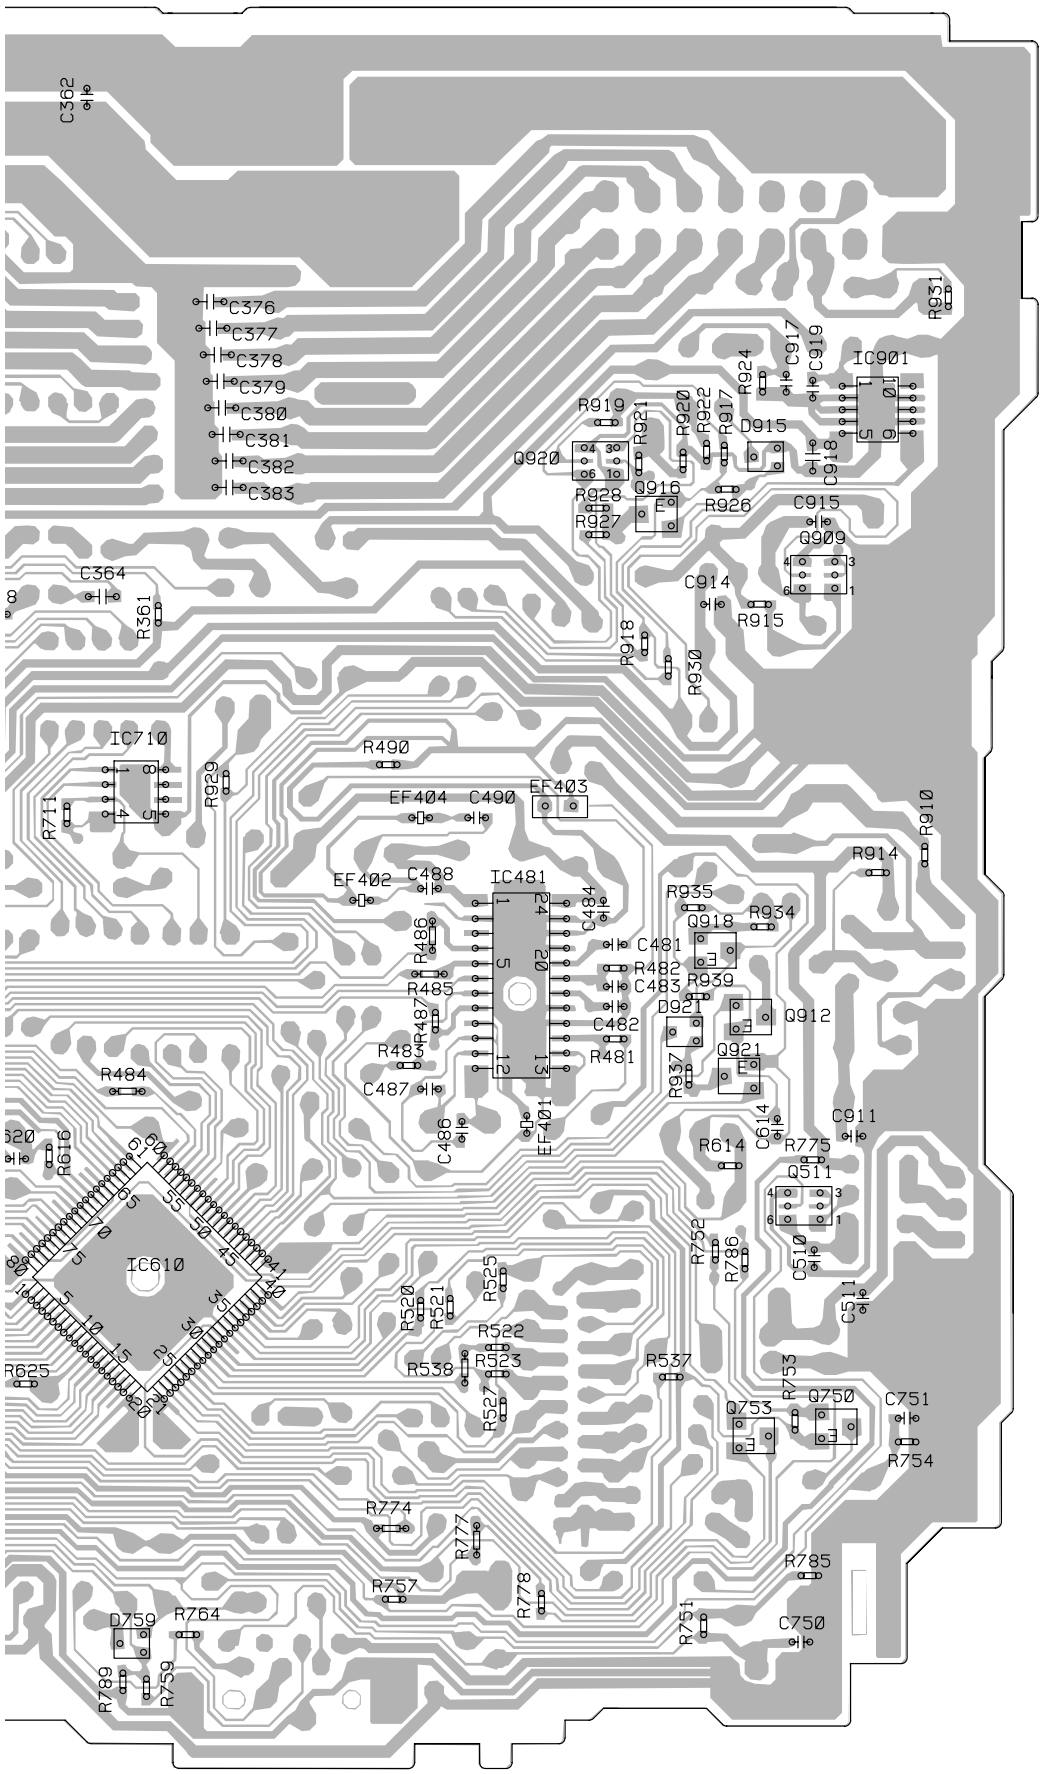

IC, Q

A

Q351 Q359

Q341
IC901

Q361
Q920

Q916

Q909

B

IC301
Q420
Q410

IC710

IC481
Q415
Q918
Q414
Q481

Q411 Q912
Q921

C

Q511

IC610
Q416

Q751 Q753
Q750

Q752

D

4.2 KEYBOARD UNIT

SIDE A

B KEYBOARD UNIT

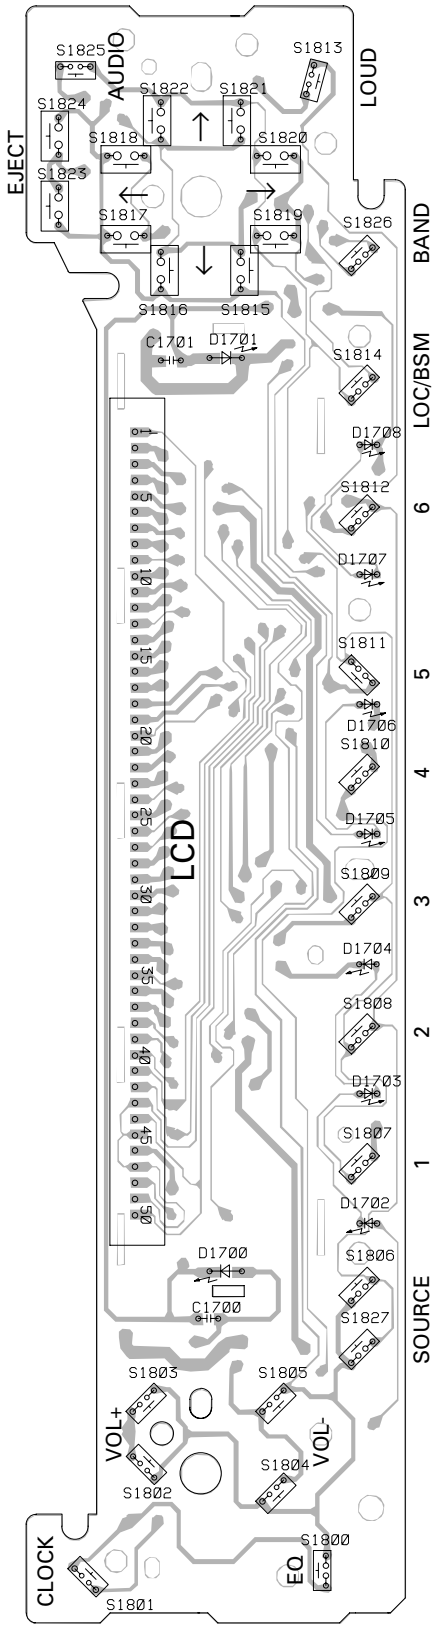

SIDE B

B KEYBOARD UNIT

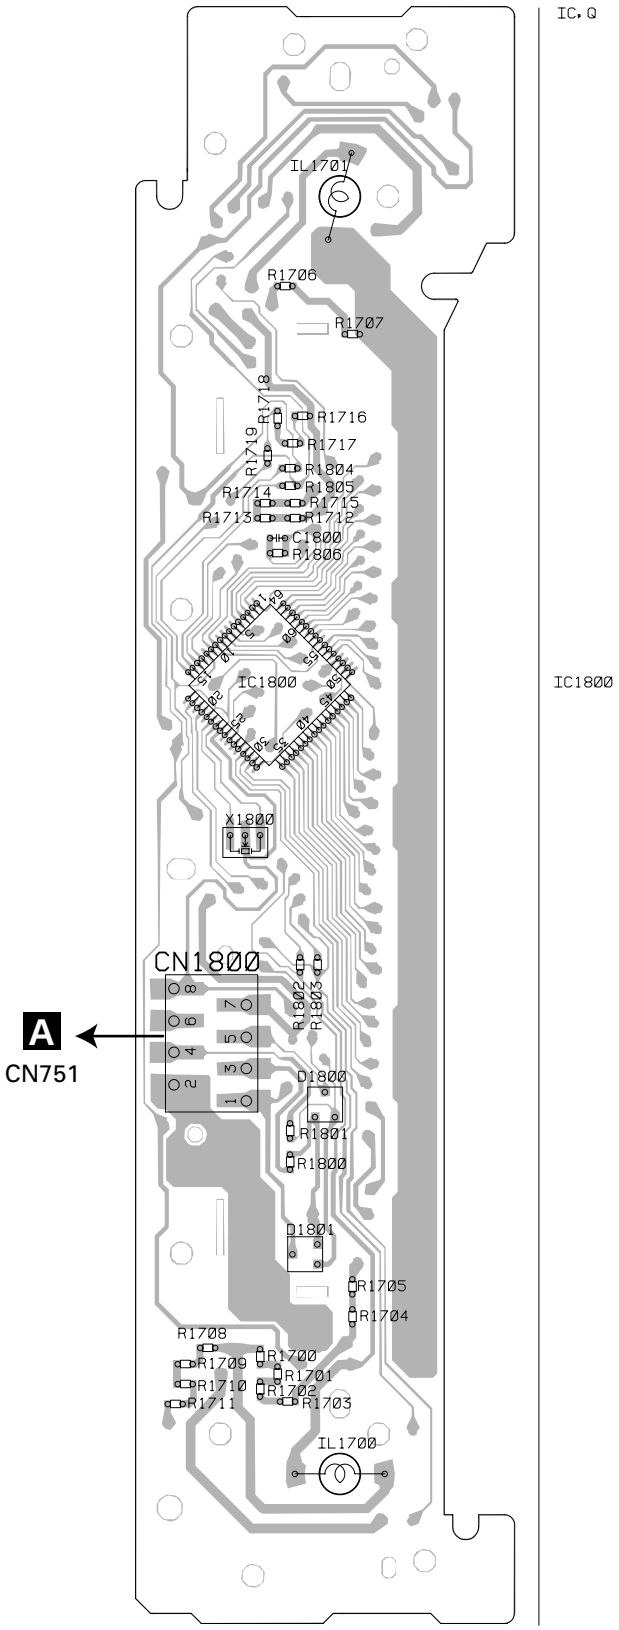

4.3 CD MECHANISM MODULE

C CONTROL UNIT

SIDE A

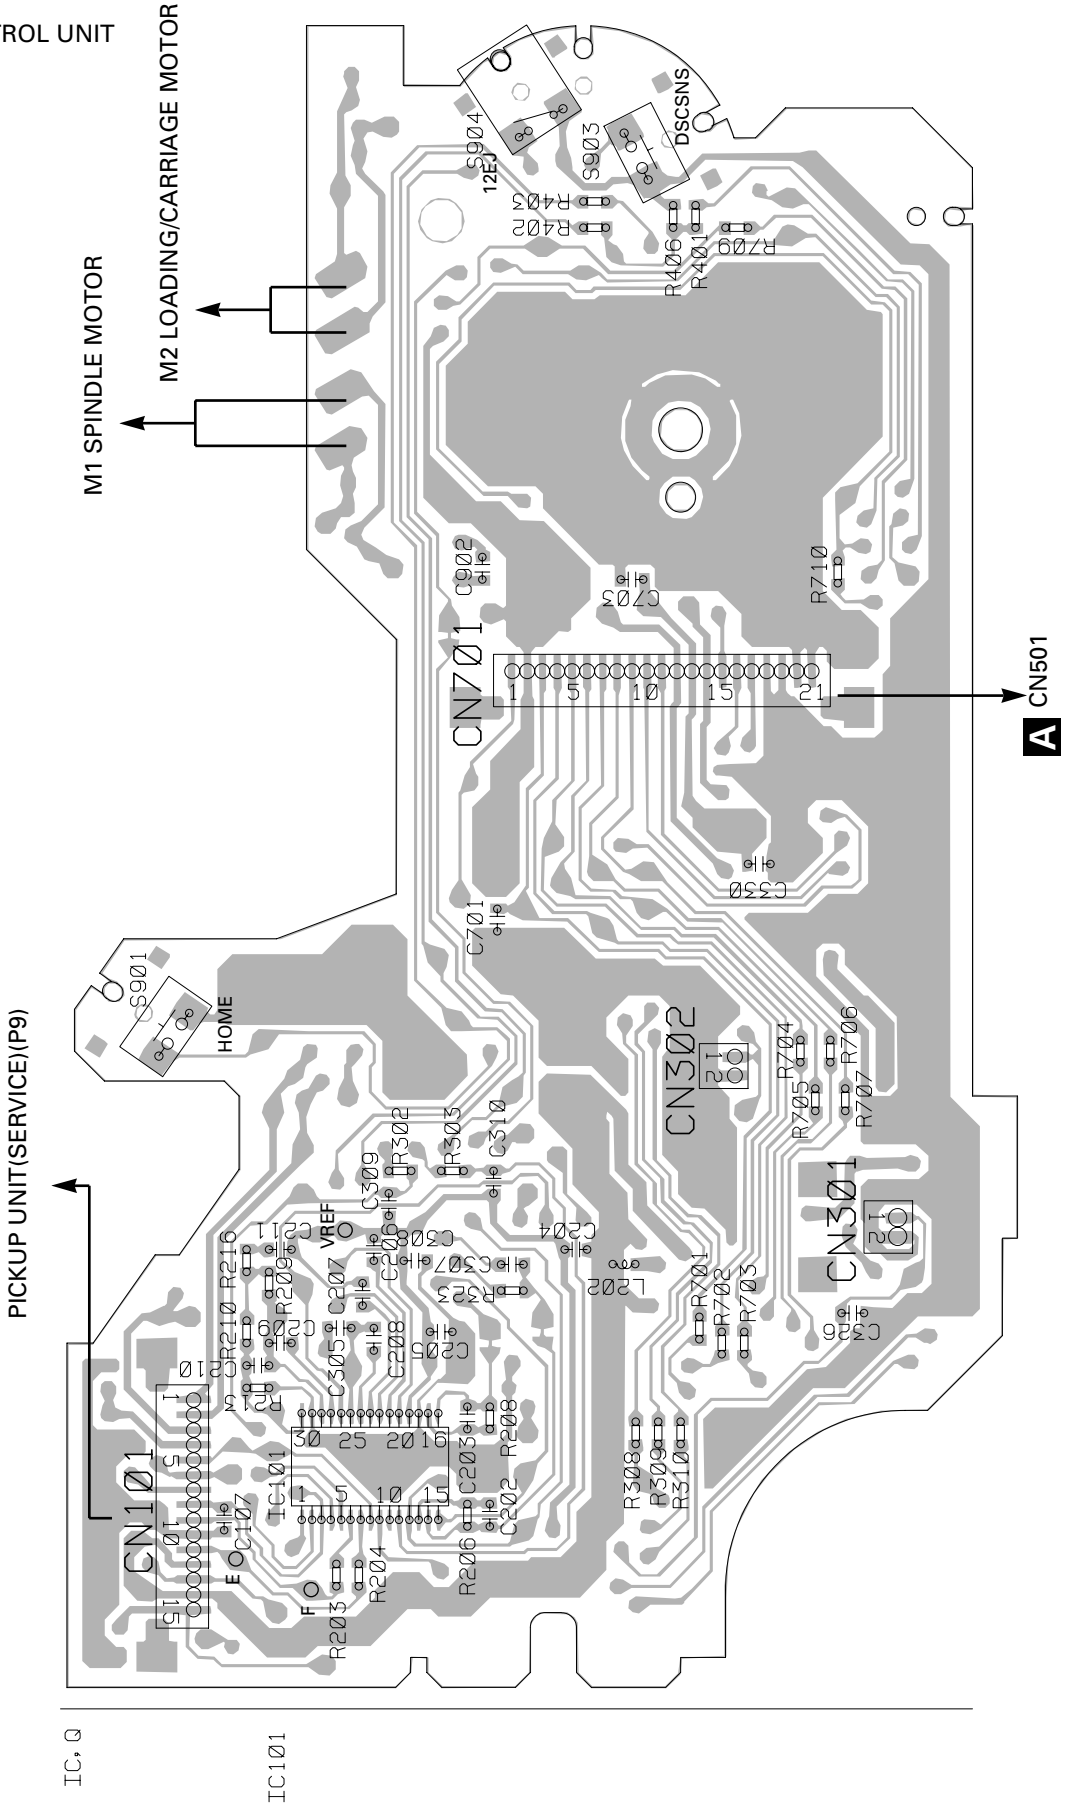

C CONTROL UNIT

SIDE B

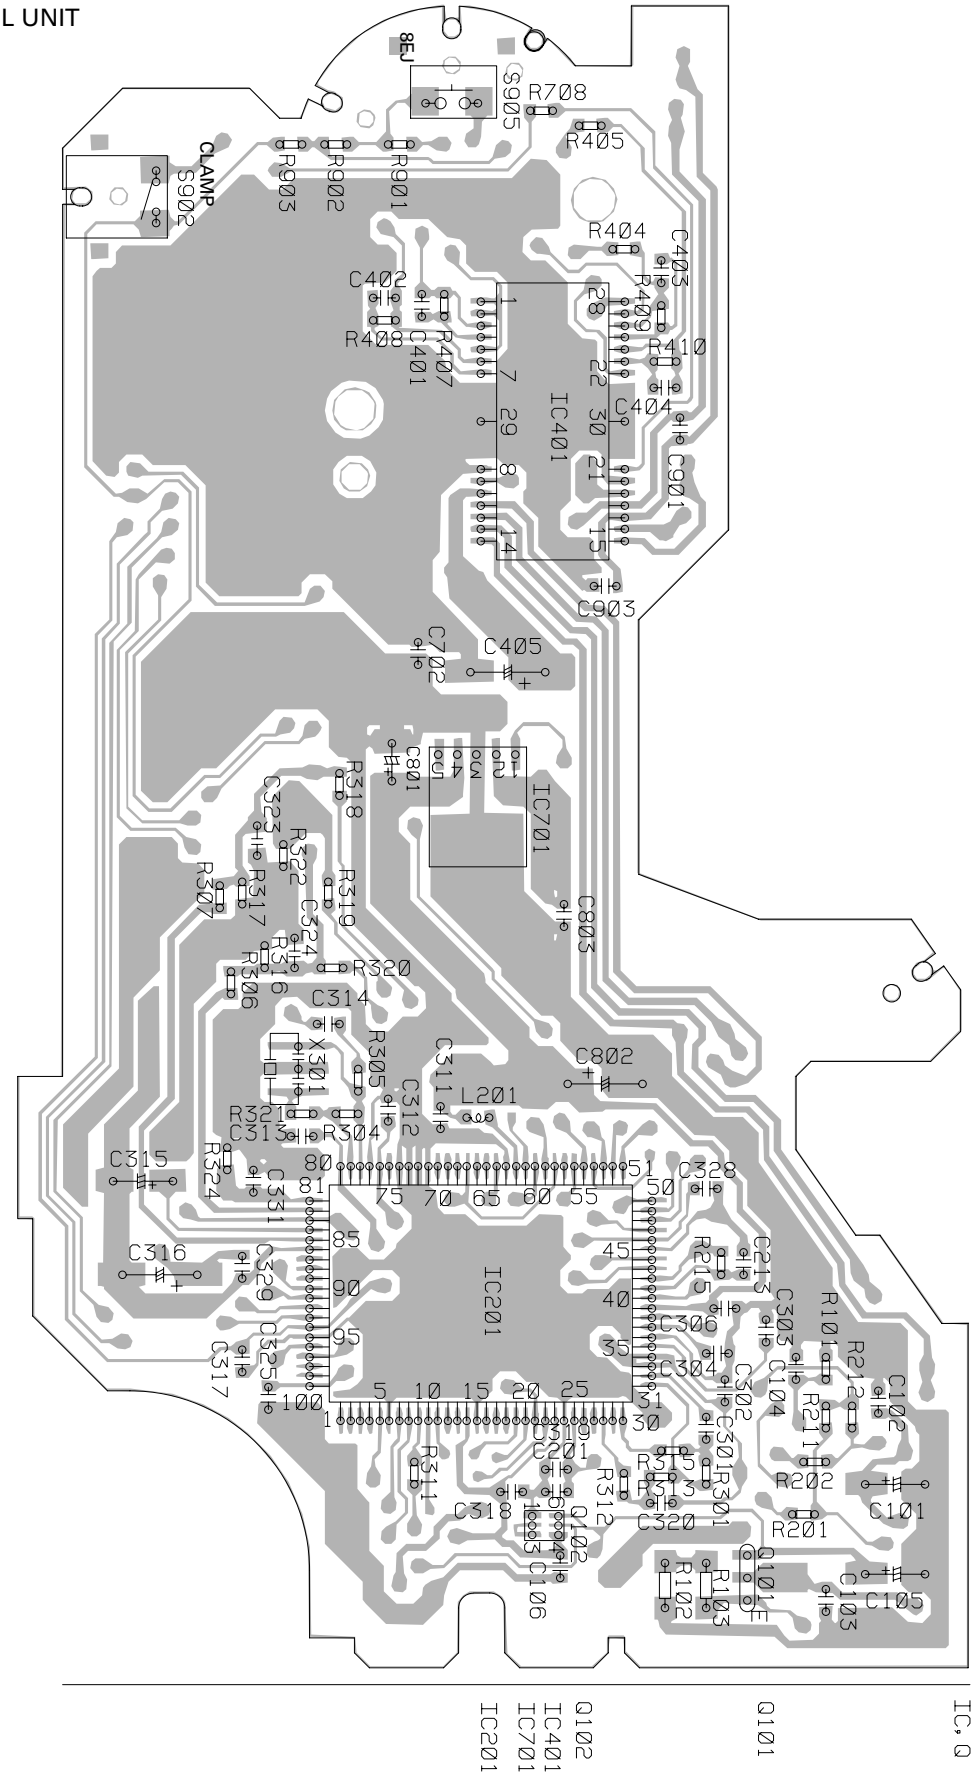

5. ELECTRICAL PARTS LIST

NOTES:

● Parts whose parts numbers are omitted are subject to being not supplied.

● The part numbers shown below indicate chip components.

Chip Resistor

RS1/○S○○○J,RS1/○○S○○○J

Chip Capacitor (except for CQS.....)

CKS....., CCS....., CSZS.....

A Unit Number : CWM7942
Unit Name : Tuner Amp Unit

MISCELLANEOUS

=====Circuit Symbol and No.		===Part Name	Part No.
IC	301	IC	PML003AM
IC	361	IC	TDA7386
IC	603	IC	S-80834ANY
IC	610	IC	PE5262A
IC	901	IC	TPD1018F
Q	351	Transistor	IMH3A
Q	359	Transistor	DTA124EK
Q	361	Transistor	DTC124EK
Q	410	Transistor	2SC2412K
Q	510	Transistor	2SD2396
Q	511	Transistor	RN46A1
Q	750	Transistor	2SA1037K
Q	751	Transistor	2SA1036K
Q	753	Transistor	DTC114EK
Q	909	Transistor	RN46A1
Q	910	Transistor	2SD2396
Q	911	Transistor	2SB1243
Q	912	Transistor	DTC114EK
Q	913	Transistor	2SD1859
Q	920	Transistor	IMX1
Q	921	Transistor	DTA124EK
D	510	Diode	HZS9L(B1)
D	750	Diode	1SS270
D	751	Diode	1SS270
D	753	Diode	1SS270
D	754	Diode	1SS270
D	759	Diode	MA152WA
D	910	Diode	HZS9L(B3)
D	911	Diode	HZS6L(B2)
D	912	Diode	S5688G
D	913	Diode	HZS7L(C2)
D	914	Diode	HZS7L(A1)
D	919	Diode	S5688G
D	920	Diode	S5688G
D	921	Diode	DAN202U
D	923	Diode	S5688G
D	924	Diode	S5688G
L	310	Inductor	LAU1R0K
L	361	Choke Coil 600µH	CTH1221
L	410	Ferri-Inductor	LAU4R7K
L	411	Ferri-Inductor	LAU2R2K
L	412	Ferri-Inductor	LAU2R2K
L	617	Ferri-Inductor	LAU101K
L	618	Ferri-Inductor	LAU2R2K
L	750	Ferri-Inductor	LAU2R2K
X	610	Crystal Resonator 4.194304MHz	CSS1023
AR	410	Surge Protector	DSP-201M-S00B
		FM/AM Tuner Unit	CWE1563

RESISTORS

=====Circuit Symbol and No.		===Part Name	Part No.
R	310		RS1/16S101J
R	311		RS1/16S101J
R	314		RS1/16S101J
R	315		RS1/16S101J
R	351		RD1/4PU821J
R	352		RS1/16S821J
R	353		RS1/16S223J
R	354		RS1/16S223J
R	355		RS1/16S0R0J
R	361		RS1/16S103J
R	362		RS1/16S103J
R	363		RS1/16S331J
R	364		RD1/4PU153J
R	410		RS1/16S222J
R	411		RS1/16S222J
R	413		RS1/16S473J
R	414		RS1/16S473J
R	415		RS1/16S393J
R	417		RS1/16S681J
R	418		RS1/16S681J
R	419		RS1/16S681J
R	420		RS1/16S103J
R	421		RS1/16S681J
R	422		RD1/4PU473J
R	423		RD1/4PU472J
R	424		RD1/4PU473J
R	429		RS1/16S681J
R	430		RS1/16S681J
R	431		RS1/16S473J
R	432		RS1/16S473J
R	437		RS1/16S0R0J
R	438		RS1/16S0R0J
R	445		RS1/16S272J
R	446		RS1/16S272J
R	447		RS1/16S162J
R	448		RS1/16S162J
R	490		RS1/16S0R0J
R	510		RD1/4PU221J
R	511		RD1/4PU221J
R	512		RD1/4PU472J
R	513		RD1/4PU222J
R	516		RS1/16S104J
R	517		RD1/4PU222J
R	519		RD1/4PU102J
R	520		RS1/16S0R0J
R	521		RS1/16S0R0J
R	522		RS1/16S0R0J
R	523		RS1/16S0R0J
R	525		RS1/16S0R0J
R	527		RS1/16S0R0J

=====Circuit Symbol and No.		===Part Name	Part No.
R	531		RD1/4PU222J
R	532		RD1/4PU222J
R	536		RD1/4PU102J
R	537		RS1/16S104J
R	538		RS1/16S0R0J
R	612		RS1/16S0R0J
R	613		RD1/4PU102J
R	614		RS1/16S821J
R	615		RS1/16S473J
R	616		RS1/16S682J
R	617		RS1/16S473J
R	618		RS1/16S223J
R	622		RD1/4PU104J
R	625		RS1/16S0R0J
R	712		RD1/4PU104J
R	750		RD1/4PU104J
R	751		RS1/16S103J
R	752		RS1/16S153J
R	753		RS1/16S153J
R	754		RS1/16S222J
R	755		RD1/4PU222J
R	758		RS1/16S102J
R	759		RS1/16S222J
R	764		RS1/16S0R0J
R	765		RS1/16S1R0J
R	767		RS1/16S103J
R	769		RS1/16S102J
R	774		RS1/16S0R0J
R	775		RS1/16S1R0J
R	777		RS1/16S152J
R	778		RS1/16S152J
R	779		RD1/4PU103J
R	791		RS1/16S0R0J
R	910		RS1/16S1R0J
R	911		RD1/4PU220J
R	912		RD1/4PU132J
R	913		RD1/4PU122J
R	914		RS1/16S103J
R	915		RS1/16S222J
R	916		RD1/4PU153J
R	917		RS1/16S104J
R	918		RS1/16S104J
R	919		RS1/16S104J
R	920		RS1/16S473J
R	921		RS1/16S103J
R	922		RS1/16S473J
R	923		RD1/4PU102J
R	924		RS1/16S472J
R	927		RS1/16S102J
R	928		RS1/16S473J
R	929		RS1/16S0R0J
R	930		RS1/16S0R0J
R	931		RS1/16S0R0J
R	937		RS1/16S152J
R	939		RS1/16S0R0J

CAPACITORS

C	307		CEJQ470M10
C	308		CEJQ100M16
C	309		CKSRYB104K25
C	310		CKSRYB105K6R3
C	311		CKSRYB104K25
C	312		CKSRYB104K25
C	313		CKSRYB105K6R3
C	314		CEJQ4R7M35
C	315		CEJQ4R7M35
C	316		CKSRYB153K25

=====Circuit Symbol and No.		===Part Name	Part No.
C	321		CKSRYB153K25
C	324		CCSRCH100D50
C	326		CCSRCH100D50
C	327		CCSRCH100D50
C	329		CCSRCH100D50
C	351		CEJQ2R2M50
C	352		CEJQ2R2M50
C	361	3300µF/16V	CCH1368
C	362		CKSRYB104K25
C	363		CKSQYB474K16
C	364		CKSQYB474K16
C	365		CKSQYB474K16
C	366		CKSQYB474K16
C	367		CKSQYB474K16
C	368		CKSQYB474K16
C	369		CKSQYB474K16
C	370		CKSQYB474K16
C	371		CEJQ330M10
C	372		CEJQ2R2M50
C	373		CKSQYB225K10
C	374		CKSQYB225K10
C	375		CEJQ100M16
C	410		CKSQYB103K25
C	412		CKSRYB223K50
C	413		CKSRYB102K50
C	414		CEJQ220M10
C	415		CKSRYB223K50
C	417		CKSRYB472K50
C	418		CEJQ101M6R3
C	419		CKSRYB473K50
C	424		CKSRYB183K25
C	425		CKSRYB183K25
C	510		CKSRYB473K50
C	511		CKSRYB102K50
C	512		CEJQ101M10
C	515		CKSRYB102K50
C	516		CKSRYB102K50
C	614		CKSRYB473K50
C	615		CEJQ2R2M50
C	616		CKSRYB104K25
C	617		CCSRCH101J50
C	618		CEJQ4R7M35
C	619		CKSRYB473K50
C	620		CCSRCH150J50
C	621		CCSRCH150J50
C	751		CKSRYB104K25
C	910	330µF/16V	CCH1326
C	911		CKSRYB103K50
C	912		CEJQ101M16
C	913		CEJQ101M10
C	914		CKSRYB473K50
C	915		CKSRYB103K50
C	916	470µF/16V	CCH1331
C	918		CKSQYB473K50
C	919		CKSRYB103K50

B Unit Number : CWM7955(DEH-1400/XM/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1800	IC	PD6340A
D	1700	LED	NSSW440-9159
D	1701	LED	NSSW440-9159
D	1702	LED	SML-310PT
D	1703	LED	SML-310PT

=====Circuit Symbol and No.		===Part Name	Part No.
D	1704	LED	SML-310PT
D	1705	LED	SML-310PT
D	1706	LED	SML-310PT
D	1707	LED	SML-310PT
D	1708	LED	SML-310PT
D	1800	Diode	MA152WK
D	1801	Diode	MA152WA
X	1800	Ceramic Resonator 4.97MHz	CSS1573
IL	1700	Lamp 14V 40mA	CEL1651
IL	1701	Lamp 14V 40mA	CEL1651
		LCD	CAW1723

RESISTORS

R	1700		RS1/16S101J
R	1701		RS1/16S101J
R	1702		RS1/16S101J
R	1703		RS1/16S101J
R	1708		RS1/16S151J
R	1709		RS1/16S151J
R	1710		RS1/16S151J
R	1711		RS1/16S820J
R	1712		RS1/16S181J
R	1713		RS1/16S181J
R	1714		RS1/16S181J
R	1715		RS1/16S121J
R	1716		RS1/16S181J
R	1717		RS1/16S181J
R	1718		RS1/16S181J
R	1719		RS1/16S121J
R	1800		RS1/16S222J
R	1801		RS1/16S222J
R	1802		RS1/16S471J
R	1803		RS1/16S471J
R	1804		RS1/16S471J
R	1805		RS1/16S471J

CAPACITORS

C	1700		CKSQYF104Z50
C	1701		CKSQYF104Z50
C	1800		CKSRYB103K50

B Unit Number : CWM7956(DEH-14/XM/UC)
Unit Name : Keyboard Unit

MISCELLANEOUS

IC	1800	IC	PD6340A
D	1700	LED	NSSW440-9159
D	1701	LED	NSSW440-9159
D	1702	LED	SML-310DT
D	1703	LED	SML-310DT
D	1704	LED	SML-310DT
D	1705	LED	SML-310DT
D	1706	LED	SML-310DT
D	1707	LED	SML-310DT
D	1708	LED	SML-310DT
D	1800	Diode	MA152WK
D	1801	Diode	MA152WA
X	1800	Ceramic Resonator 4.97MHz	CSS1573
IL	1700	Lamp 14V 40mA	CEL1638
IL	1701	Lamp 14V 40mA	CEL1638
		LCD	CAW1716

RESISTORS

R	1700		RS1/16S101J
R	1701		RS1/16S101J
R	1702		RS1/16S101J
R	1703		RS1/16S101J
R	1708		RS1/16S151J
R	1709		RS1/16S151J
R	1710		RS1/16S151J
R	1711		RS1/16S121J
R	1712		RS1/16S181J
R	1713		RS1/16S181J
R	1714		RS1/16S181J
R	1715		RS1/16S181J
R	1716		RS1/16S181J
R	1717		RS1/16S181J
R	1718		RS1/16S181J
R	1719		RS1/16S181J
R	1800		RS1/16S222J
R	1801		RS1/16S222J
R	1802		RS1/16S471J
R	1803		RS1/16S471J
R	1804		RS1/16S471J
R	1805		RS1/16S471J

CAPACITORS

C	1700		CKSQYF104Z50
C	1701		CKSQYF104Z50
C	1800		CKSRYB103K50

C Unit Number : CWX2481
Unit Name : Control Unit

MISCELLANEOUS

IC	101	IC	TA2153FN
IC	201	IC	TC9495F2
IC	401	IC	BA5996FM
IC	701	IC	BA05SFP
Q	101	Transistor	2SD1664
Q	102	Transistor	UMD2N
L	201	Inductor	CTF1546
L	202	Inductor	CTF1546
X	301	Ceramic Resonator 16.934MHz	CSS1525
S	901	Spring Switch(HOME)	CSN1051
S	902	Spring Switch(CLAMP)	CSN1052
S	903	Spring Switch(DSCSNS)	CSN1051
S	904	Spring Switch(12EJ)	CSN1052
S	905	Spring Switch(8EJ)	CSN1051

RESISTORS

R	101		RS1/16S222J
R	102		RS1/8S120J
R	103		RS1/8S100J
R	201		RS1/16S513J
R	202		RS1/16S513J
R	203		RS1/16S823J
R	204		RS1/16S823J
R	206		RS1/16S823J
R	208		RS1/16S124J
R	209		RS1/16S183J
R	210		RS1/16S153J
R	211		RS1/16S103J
R	212		RS1/16S103J
R	213		RS1/16S124J
R	215		RS1/16S0R0J
R	216		RS1/16S471J
R	301		RS1/16S333J
R	302		RS1/16S332J
R	303		RS1/16S332J
R	304		RS1/16S514J
R	306		RS1/16S102J
R	307		RS1/16S102J
R	312		RS1/16S103J
R	313		RS1/16S473J
R	315		RS1/16S334J

=====Circuit Symbol and No.		===Part Name	Part No.
R	321		RS1/16S331J
R	322		RS1/16S0R0J
R	323		RS1/16S332J
R	401		RS1/16S684J
R	402		RS1/16S103J
R	403		RS1/16S103J
R	404		RS1/16S183J
R	405		RS1/16S123J
R	407		RS1/16S622J
R	408		RS1/16S622J
R	409		RS1/16S113J
R	410		RS1/16S752J
R	701		RS1/16S102J
R	702		RS1/16S221J
R	703		RS1/16S221J
R	704		RS1/16S221J
R	705		RS1/16S221J
R	706		RS1/16S221J
R	707		RS1/16S221J
R	708		RS1/16S102J
R	709		RS1/16S102J
R	710		RS1/16S102J
R	901		RS1/16S104J
R	902		RS1/16S473J
R	903		RS1/16S273J

CAPACITORS

C	101		CEV470M6R3
C	102		CKSRYB102K50
C	103		CKSRYB104K16
C	104		CKSRYB224K16
C	105		CEV470M6R3
C	106		CKSRYB104K16
C	107		CKSRYB105K6R3
C	201		CKSRYB104K16
C	202		CCSRCH560J50
C	204		CKSRYB224K16
C	205		CKSRYB224K16
C	206		CKSRYB273K25
C	207		CKSRYB273K25
C	208		CKSRYB104K16
C	209		CKSRYB104K16
C	210		CCSRCK2R0C50
C	211		CCSRCH220J50
C	301		CKSRYB153K25
C	302		CKSRYB104K16
C	303		CKSRYB103K50
C	304		CKSRYB103K50
C	305		CKSRYB104K16
C	306		CKSRYB104K16
C	307		CKSRYB333K16
C	308		CKSRYB104K16
C	309		CKSRYB473K16
C	310		CKSRYB473K16
C	311		CKSRYB104K16
C	312		CKSRYB104K16
C	315		CEV220M6R3
C	317		CKSRYB104K16
C	318		CKSRYB104K16
C	319		CKSRYB104K16
C	320		CCSRCH470J50
C	325		CKSRYB471K50
C	328		CKSRYB472K50
C	329		CKSRYB104K16
C	330		CKSRYB104K16
C	331		CKSRYB104K16
C	401		CKSRYB221K50

=====Circuit Symbol and No.		===Part Name	Part No.
C	402		CKSRYB221K50
C	403		CKSRYB153K25
C	404		CKSRYB103K50
C	405		CEV101M10
C	702		CKSRYB104K16
C	703		CKSRYB104K16
C	801	10µF/10V	CCH1349
C	802		CEV101M10
C	803		CKSRYB224K16

Miscellaneous Parts List

		Pickup Unit(Service)(P9)	CXX1480
M	1	Motor Unit(SPINDLE)	CXB6007
M	2	Motor Unit(LOADING/CARRIAGE)	CXB5903

6. ADJUSTMENT

6.1 CD ADJUSTMENT

1) Precautions

- This unit uses a single power supply (+5V) for the regulator. The signal reference potential, therefore, is connected to VREF(approx. 2.1V) instead of GND.
  If VREF and GND are connected to each other by mistake during adjustments, not only will it be impossible to measure the potential correctly, but the servo will malfunction and a severe shock will be applied to the pick-up. To avoid this, take special note of the following.
  Do not connect the negative probe of the measuring equipment to VREF and GND together. It is especially important not to connect the channel 1 negative probe of the oscilloscope to VREF with the channel 2 negative probe connected to GND.
  Since the frame of the measuring instrument is usually at the same potential as the negative probe, change the frame of the measuring instrument to floating status.
  If by accident VREF comes in contact with GND, immediately switch the regulator or power OFF.

- Always make sure the regulator is OFF when connecting and disconnecting the various filters and wiring required for measurements.

- Before proceeding to further adjustments and measurements after switching regulator ON, let the player run for about one minute to allow the circuits to stabilize.

- Since the protective systems in the unit's software are rendered inoperative in test mode, be very careful to avoid mechanical and /or electrical shocks to the system when making adjustment.

- The RFI and RFO signals are easy to oscillate because of a wide band. When observing them, insert a resistor of about 1 kΩ to the series.

- This equipment will not guarantee the load ejection operation when the mechanical unit is turned upside down. In particular, if the ejection operation is incorrectly performed and recovery is disabled, the recovery is enabled by resetting a product or turning ACC off to on.

2) Test Mode

This mode is used for adjusting the CD mechanism module of the device.

- Test mode starting procedure
  Reset while pressing the **4** and **6** keys together.

- Test mode cancellation
  Switch ACC, back-up OFF.

- After pressing the EJECT key, do not press any other key until the disk is completely ejected.

- If the ► or ◄ key is pressed while focus search is in progress, immediately turn the power off (otherwise the actuator may be damaged due to adhesion of the lenses).

6.2 CHECKING THE GRATING AFTER CHANGING THE PICKUP UNIT

• **Note :**
The grating angle of the PU unit cannot be adjusted after the PU unit is changed. The PU unit in the CD mechanism module is adjusted on the production line to match the CD mechanism module and is thus the best adjusted PU unit for the CD mechanism module. Changing the PU unit is thus best considered as a last resort. However, if the PU unit must be changed, the grating should be checked using the procedure below.

• **Purpose :**
To check that the grating is within an acceptable range when the PU unit is changed.

• **Symptoms of Mal-adjustment :**
If the grating is off by a large amount symptoms such as being unable to close tracking, being unable to perform track search operations, or taking a long time for track searching.

• **Method :**

• Measuring Equipment	• Oscilloscope, Two L.P.F.
• Measuring Points	• E, F, VREF
• Disc	• ABEX TCD-784
• Mode	• TEST MODE

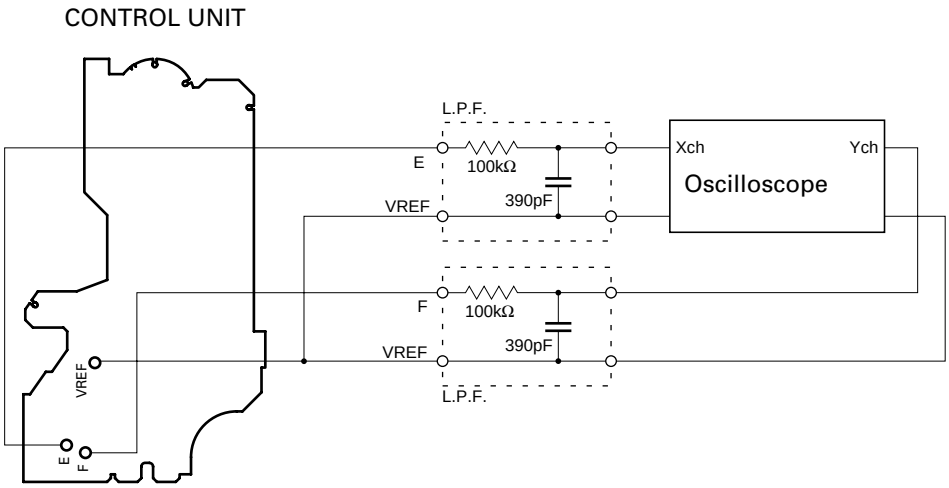

• **Checking Procedure**
1. In test mode, load the disc and switch the 5V regulator on.
2. The display will change, returning to "81" on the fourth press.
3. As shown in the diagram above, monitor the LPF outputs using the oscilloscope and check that the phase difference is within 75° . Refer to the photographs supplied to determine the phase angle.
4. If the phase difference is determined to be greater than 75° try changing the PU unit to see if there is any improvement. If, after trying this a number of times, the grating angle does not become less than 75° then the mechanism should be judged to be at fault.

• **Note**
Because of eccentricity in the disc and a slight misalignment of the clamping center the grating waveform may be seen to "wobble" (the phase difference changes as the disc rotates). The angle specified above indicates the average angle.

• **Hint**
Reloading the disc changes the clamp position and may decrease the "wobble".

Grating waveform

Ech → Xch 20mV/div, AC
Fch → Ych 20mV/div, AC

0°

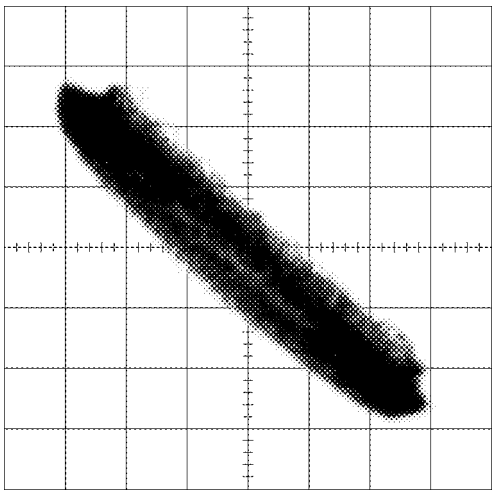

30°

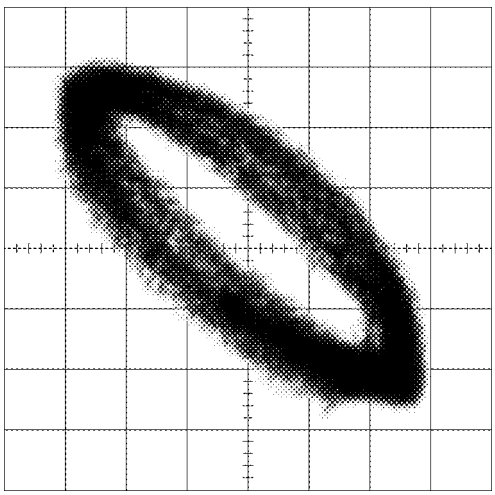

45°

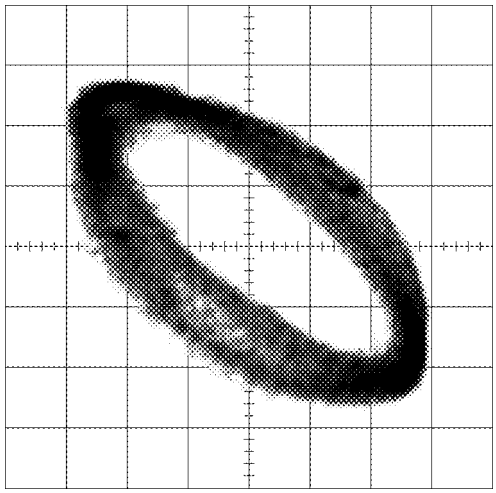

60°

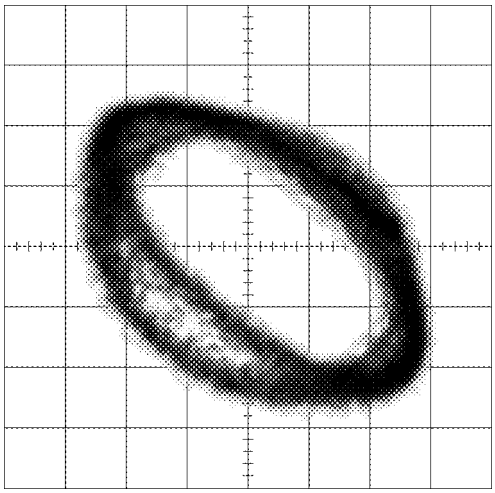

75°

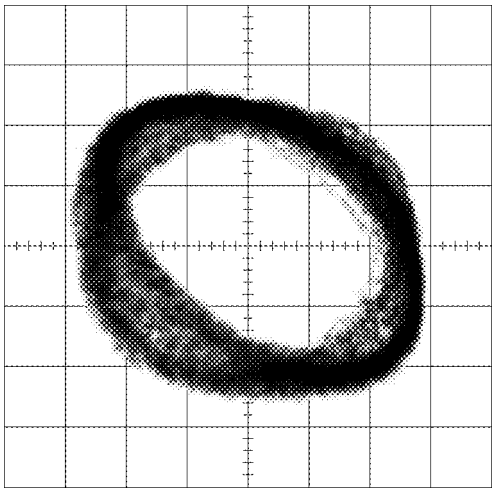

90°

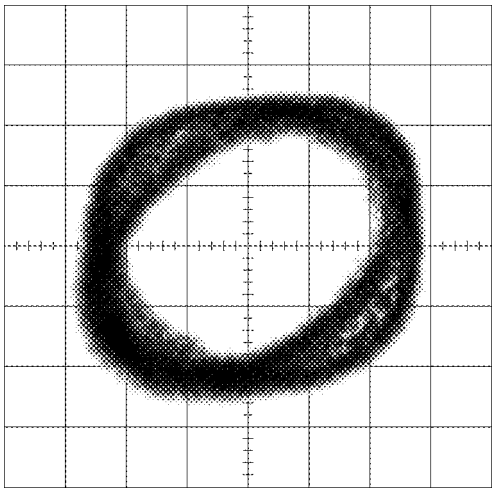

6.3 ERROR MODE

● Error Messages

If a CD is not operative or stopped during operation due to an error, the error mode is turned on and cause(s) of the error is indicated with a corresponding number. This arrangement is intended at reducing nonsense calls from the users and also for facilitating trouble analysis and repair work in servicing.

(1) Basic Indication Method

1) When SERRORM is selected for the CSMOD (CD mode area for the system), error codes are written to DMIN (minutes display area) and DSEC (seconds display area). The same data is written to DMIN and DSEC. DTNO remains in blank as before.

2) Head unit display examples

Depending on display capability of LCD used, display will vary as shown below. xx contains the error number.

8-digit display	6-digit display	4-digit display
ERROR–xx	ERR–xx	E–xx

(2) Error Code List

Code	Class	Displayed error code	Description of the code and potential cause(s)
10	Electricity	Carriage Home NG SERVO LSI Communication Error	CRG can't be moved to inner diameter. CRG can't be moved from inner diameter. → Failure on home switch or CRG move mechanism. Communication error between microcomputer and SERVO LSI.
11	Electricity	Focus Servo NG	Focusing not available. → Stains on rear side of disc or excessive vibrations on REWRITABLE.
12	Electricity	Spindle Lock NG Subcode NG	Spindle not locked. Sub-code is strange (not readable). → Failure on spindle, stains or damages on disc, or excessive vibrations. A disc not containing CD-R data is found. Turned over disc are found, though rarely. CD signal error.
17	Electricity	Setup NG	AGC protection doesn't work. Focus can be easily lost. → Damages or stains on disc, or excessive vibrations on REWRITABLE.
30	Electricity	Search Time Out	Failed to reach target address. → CRG tracking error or damages on disc.
44	Electricity	ALL Skip	Skip setting for all track. (CD-R/RW)
50	Mechanism	CD On Mech Error	Mechanical error during CD ON. → Defective loading motor, mechanical lock and mechanical sensor.
A0	System	Power Supply NG	Power (VD) is ground faulted. → Failure on SW transistor or power supply (failure on connector).

Remarks: Mechanical errors are not displayed (because a CD is turned off in these errors).

Unreadable TOC does not constitute an error. An intended operation continues in this case.

Upper digits of an error code are subdivided as shown below:

1x: Setup relevant errors, 3x: Search relevant errors, Ax: Other errors.

7. GENERAL INFORMATION

7.1 DIAGNOSIS

7.1.1 DISASSEMBLY

● **Removing the Case (not shown)**

1. Remove the Case.

● **Panel Assy (Fig.1)**

1 Take the two stoppers off the Chassis and then remove the Panel Assy.

● **Removing the CD Mechanism Module (Fig.1)**

2 Remove the four screws and then remove the CD Mechanism Module.

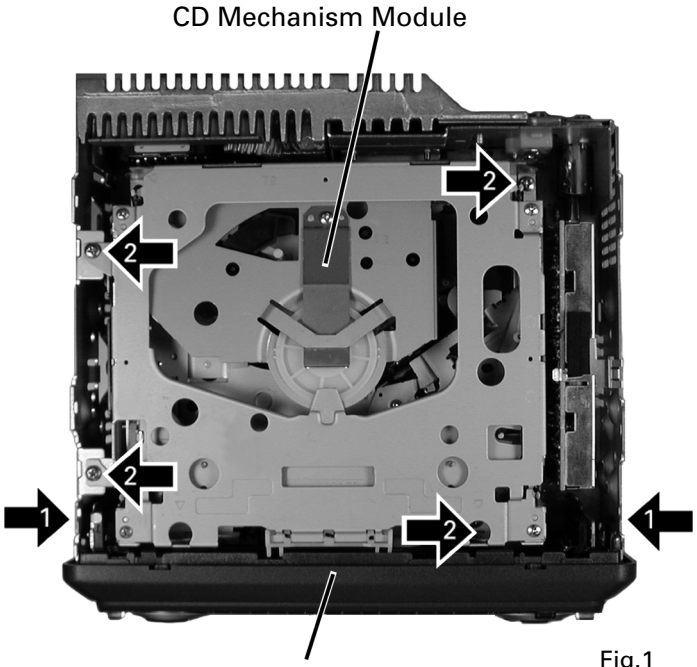

Fig.1

● **Removing the Tuner Amp Unit (Fig.2)**

1 Remove the two screws.

2 Straight the tabs at three locations indicated.

3 Remove the three screws.

4 Remove the screw and then remove the Tuner Amp Unit.

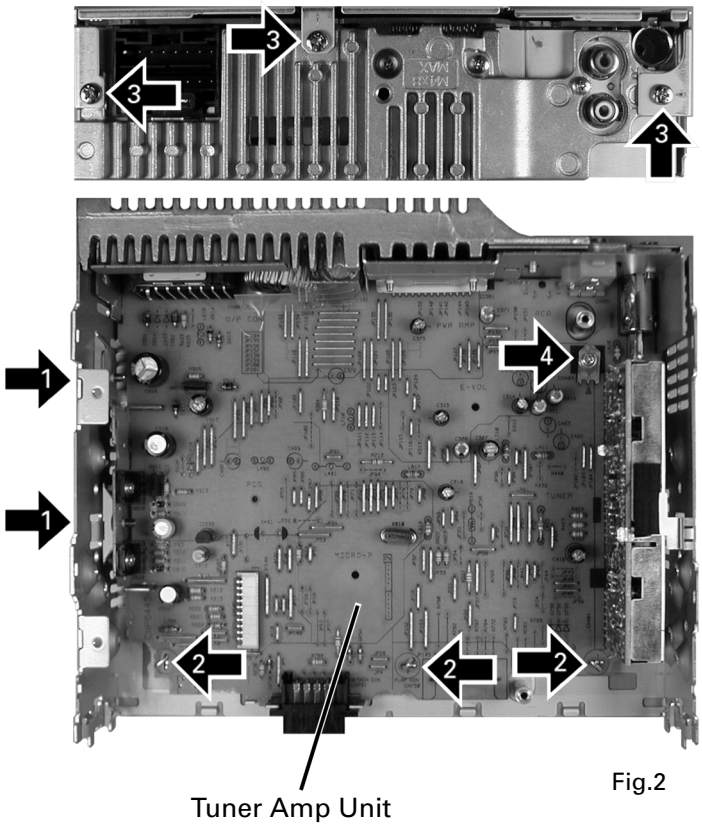

Fig.2

● How to hold the Mechanical Unit

1. Hold the top and bottom frame.
2. Do not squeeze top frame's front portion too tight, because it is fragile.

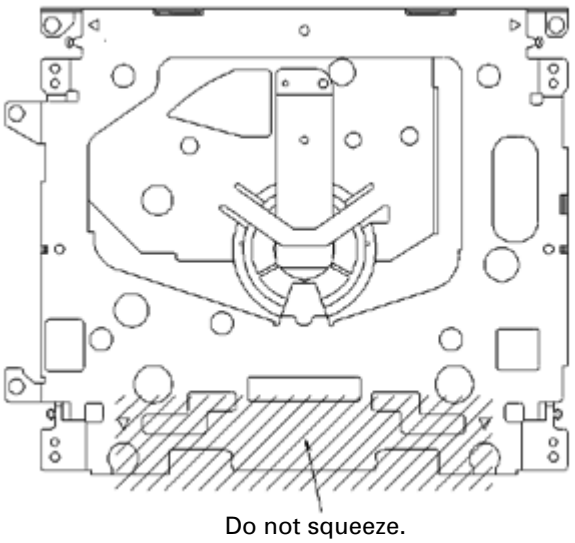

● How to remove the Top and Bottom Frame

1. When the disk is in "clamp" state, unlock Spring A (6 pieces) and Spring B (2 pieces), and unscrew screws (4 pieces).
2. Unlock each 1 of pawl at the both side of the frame, then remove the top frame.
3. Remove the Carriage Mechanical part in such way that; you remove the mechanical part from 3 pieces of Damper while slowly pulling up the part.
4. Now, the top frame has been removed, and under this state, fix the genuine Connector again, and eject the disk.
   (Caution)
   When you reassemble the Carriage Mechanical part, apply a bit of alcohol to Dampers.

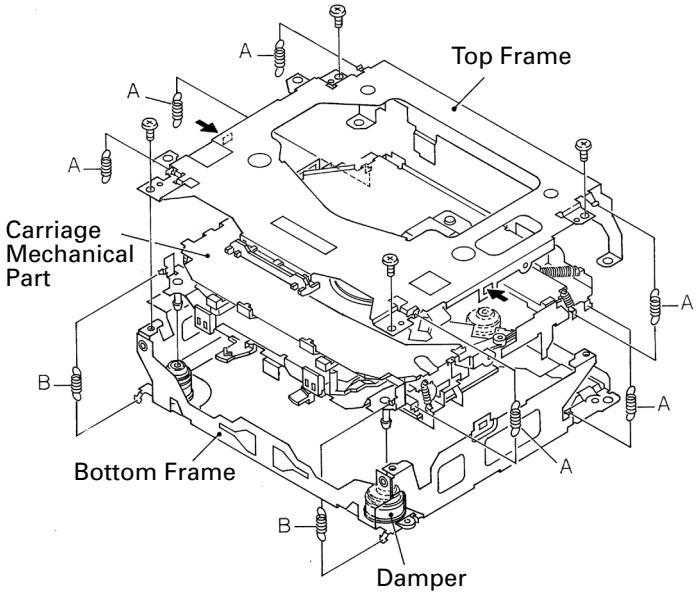

● How to remove the Guide Arm Assy

1. Unlock the spring (1 piece) at the right side of the assembly.
2. Unscrew screws (2 pieces), then remove the Screw Gear Bracket.
3. Shift the Guide Arm Assy to the left and slowly rotate it to the upper direction.
4. When the Guide Arm Assy rotates approximately 45 degree, shift the Assy to the right side direction and remove it.

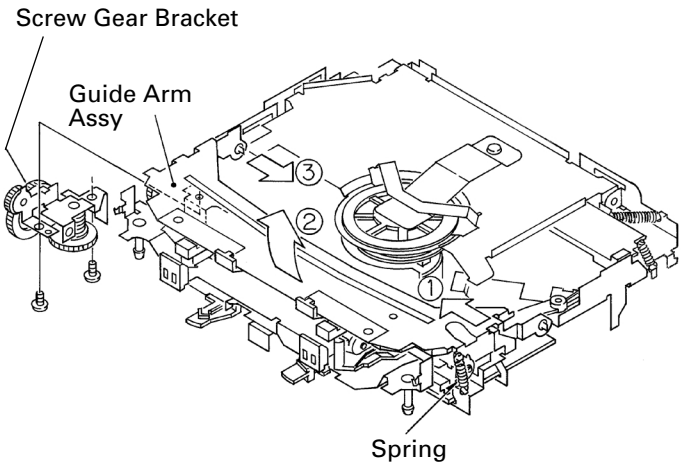

● How to remove the Control Unit

1. Give jumper-solder treatment to the Flexible Wire of the Pickup unit, then remove the wire from the Connector.
2. Remove all 4 points of solder-treatment on the Lead Wire. Also, unscrew the screw(1 piece).
3. Then, Remove the Control unit.
   (Caution)
   Be careful not to damage SW when you reassemble the Control Unit into the device.

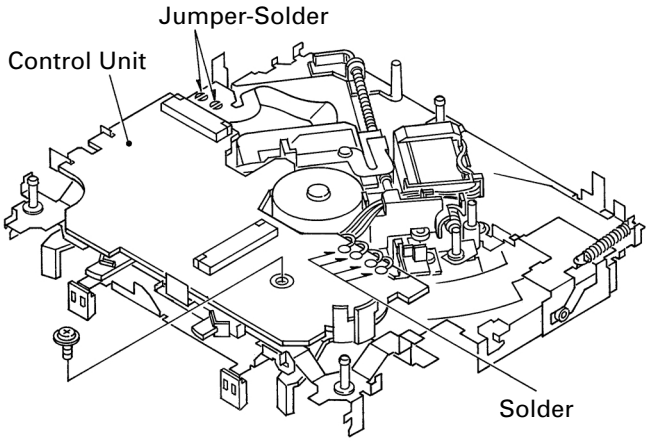

● How to remove the Loading Arm Assy

1. Unlock the spring (1 piece) and remove the E ring (1 piece) of the Fulcrum Shaft.
2. Shift the arm to the left side direction and unlock pins (2 pieces).

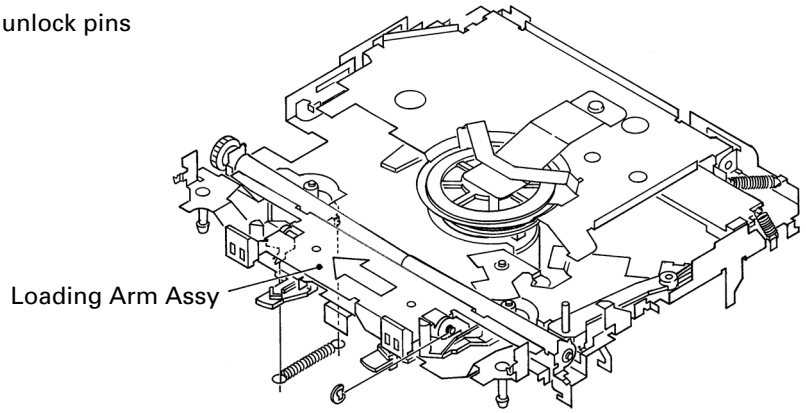

● How to remove the Pickup Unit

1. Unscrew 2 pieces of screws, then remove the Pulley Cover.
2. Remove the Feed Screw unit from the pawl of the Feed Screw Guide (The pawl is located inside the guide).
3. Remove the belt from the Pulley, then remove the Pickup unit.
   (Caution)
   Make sure not to stain the belt with grease when you fix the belt.

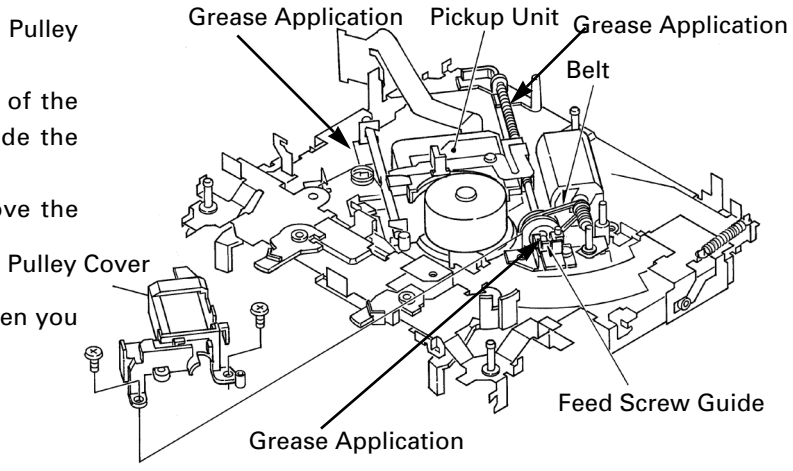

7.1.2 CONNECTOR FUNCTION DESCRIPTION

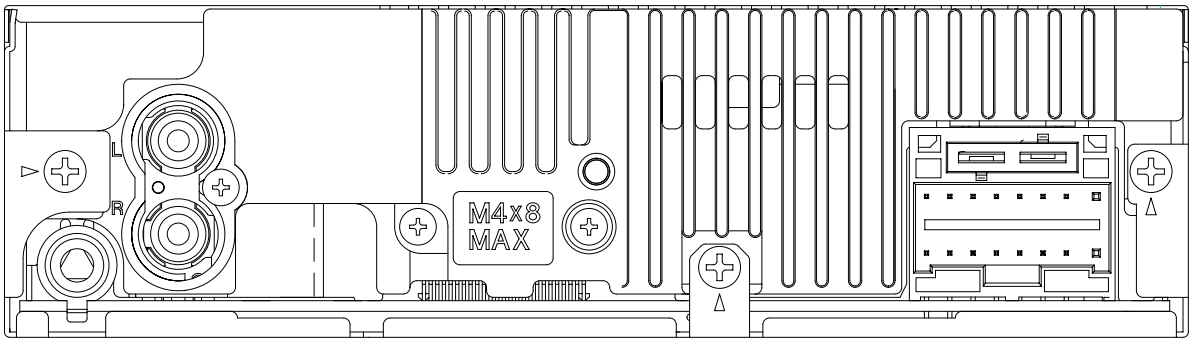

ANTENNA PRE OUT

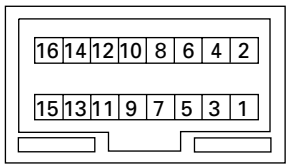

1. GND
2. BACK UP
3. ACC
4. NC
5. NC
6. B.REM
7. NC
8. NC
9. RL-
10. FL-
11. RL+
12. FL+
13. RR-
14. FR-
15. RR+
16. FR+

7.2 PARTS

7.2.1 IC

● **Pin Functions(PE5262A)**

Pin No.	Pin Name	I/O	Format	Function and Operation
1	MODEL1	I		Model select input
2,3	NC			Not used
4	AVSS	I		A/D GND
5	ST	I		FM stereo input
6	SD	I		SD input
7	AVREF1			A/D converter reference voltage
8	KYDT	I		Key data input
9	DPDT	O	C	Display data output
10	SDBW	I		SDBW input
11	TUNPDI	I		PLL IC data input
12	TUNPDO	O	C	PLL IC data output
13	TUNPCK	O	C	PLL IC clock output
14	TUNPCE	O	C	PLL IC chip enable output
15	$\overline{\text{CURRQ}}$	O		Tuner voltage FIX output
16	LOCL	O	C	Local L output
17	NC			Not used
18	$\overline{\text{FM}}$/AM	O	C	FM/AM power select output
19	NC			Not used
20	FLPILM	O	C	Inside of flap illumination output
21	VDCONT	O	C	VD control output
22	NC			Not used
23	CONT	O	C	Servo driver power supply control output
24	XCE	O	C	CD LSI chip enable output
25	$\overline{\text{XRST}}$	O	C	CD LSI reset output
26	XPCK	O	C	CD LSI clock output
27-30	XPI0-3	I/O	C	CD LSI data input/output
31	CLCONT	O	C	Driver input select output
32	HOME	I	C	Home position detector input
33	VSS			GND
34	LOEJ	O	C	CD load motor LOAD/EJECT direction exchange output
35	CD5VON	O	C	CD +5V power supply control output
36,37	ROT1-0	I		Rotary encoder data input
38	TELIN	I		Telephone mute input
39	NC			Not used
40	ILMPW	O	C	Illumination power supply control output
41	$\overline{\text{SWVDD}}$	O	C	Keyboard unit power supply control output
42	SYSPW	O	C	System power supply control output
43	VST	O	C	Strobe pulse output for electronic volume
44	$\overline{\text{MUTE}}$	O	C	System mute output
45	PEE	O	C	Beep tone output
46	LOCH	O	C	Local H output
47	NC			Not used
48	TUNPCE2	O	C	EEPROM chip enable output
49	PCL	O	C	Clock adjustment output
50	VCK	O	C	Clock output for electronic volume
51	VDT	O	C	Data output for electronic volume
52	ANTPW	O		Antenna output
53	EJECTS	I		Eject key input pin
54	DALMON	O	C	Stand-by output
55–59	NC			Not used
60	$\overline{\text{RESET}}$	I		Reset input
61,62	NC			Not used
63	$\overline{\text{BSENS}}$	I		Back up power sense input
64	$\overline{\text{ASENS}}$	I		ACC power sense input
65	$\overline{\text{DSENS}}$	I		Grille detach sense
66	ADPW	O	C	A/D converter power supply output
67	NC			Not used

Pin No.	Pin Name	I/O	Format	Function and Operation
68	VDD			Power supply
69	X2			Crystal oscillator connection pin
70	X1	I		Crystal oscillator connection pin
71	IC(VPP)			Connect to GND
72	NC			Not used
73	TESTIN	I		Test program mode input
74	AVDD			Positive power supply terminal for analog circuit
75	AVREF0			A/D converter reference voltage
76	SL	I		SD level input from tuner
77	TEMP	I		CD temperature sense input
78	VDSENS	I		VD power supply voltage sense input
79	DISCSNS	I		CD DISC sense input
80	CSENS	I		Flap open/close sense input

Output Format	Meaning
C	C MOS output
N	N channel open drain output

IC's marked by * are MOS type.
Be careful in handling them because they are very liable to be damaged by electrostatic induction.

*PE5262A

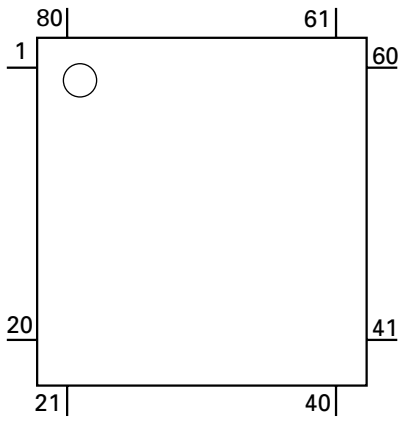

● **Pin Functions (PD6340A)**

Pin No.	Pin Name	I/O	Function and Operation
1-5	SEG4-0	O	LCD segment output
6-9	COM3-0	O	LCD common output
10	VLCD		LCD drive power supply
11-14	KST3-0	O	Key strobe output
15,16	KDT0,1	I	Key data input (analogue input)
17	REM	I	Remote control reception
18	DPDT	I	Display data input
19	NC		Not used
20	KYDT	O	Key data output
21	MODA		GND
22	X0		Crystal oscillator connection pin
23	X1		Crystal oscillator connection pin
24	VSS		GND
25,26	KDT2,3	I	Key data input
27	NC		Not used
28	KST4	O	Key strobe output
29-32	NC		Not used
33-55	SEG35-13	O	LCD segment output
56	VDD		Power supply
57-64	SEG12-5	O	LCD segment output

*PD6340A

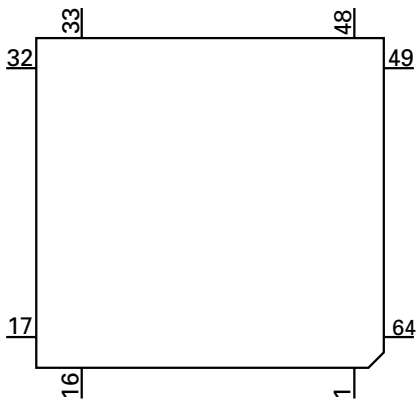

● **Pin Functions(TA2153FN)**

Pin No.	Pin Name	I/O	Function and Operation
1	VCC		Power supply voltage terminal
2	RFGC	I	RF amplitude adjustment control signal terminal
3	GMAD	I	AGC amplifier frequency characteristic adjustment terminal
4	FNI	I	Main beam amplifier input terminal
5	FPI	I	Main beam amplifier input terminal
6	TPI	I	Sub beam amplifier input terminal
7	TNI	I	Sub beam amplifier input terminal
8	MDI	O	Monitor photodiode amplifier input terminal
9	LDO	I	Laser diode amplifier output terminal
10	SEL	I	APC circuit ON/OFF signal, LDO terminal control input terminal and bottom and peak detection frequency switching terminals
11	TEB	I	Tracking error balance adjustment signal input terminal
12	2VRO	O	Reference voltage (2VRO) output terminal
13	TEN	I	Tracking error signal generation amplifier reverse phase input terminal
14	TEO	O	Tracking error signal generation amplifier output terminal
15	SBAD	O	Sub beam addition signal output terminal
16	FEO	O	Focus error signal generation amplifier output terminal
17	FEN	I	Focus error signal generation amplifier reverse phase input terminal
18	SEB	I	RFRP generation circuit mode switching terminal
19	VRO	O	Reference voltage (VREF) output terminal
20	RFRP	O	Signal generation amplifier output terminal for track count
21	BTC	I	Bottom detection time constant adjustment terminal for RFCT signal generation
22	RFCT	O	RFRP signal center level output terminal
23	PKC	I	Peak detection time constant adjustment signal for RFCT signal generation
24	RFRPIN	I	Signal generation amplifier input terminal for track count
25	RFGO	O	RF signal amplitude adjustment amplifier output terminal
26	GVSW	I	AGC, FE or TE amplifier gain switching terminal
27	AGCIN	I	RF signal amplitude adjustment amplifier input terminal
28	RFO	O	RF signal generation amplifier output terminal
29	GND	I	GND terminal
30	RFN2	I	RF signal generation amplifier input terminal

TA2153FN

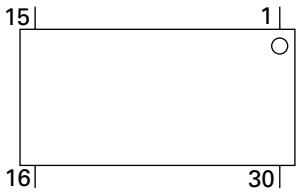

● **Pin Functions(TC9495F2)**

Pin No.	Pin Name	I/O	Function and Operation
1	TESTO		Test mode terminal
2	$\overline{\text{HSO}}$	O	Replay speed flag output terminal
3	$\overline{\text{UHSO}}$	O	Replay speed flag output terminal
4	EMPH	O	Emphasis flag output terminal for sub code Q data
5	LRCK	O	Channel clock (44.1 kHz) output terminal
6	VSS		Digital ground terminal
7	BCK	O	Bit clock output terminal
8	AOUT	O	Digital audio data output terminal
9	DOUT	O	Digital out output terminal
10	MBOV	O	Buffer memory over signal output terminal
11	IPF	O	Correction flag output terminal
12	SBOK	O	CRCC decision result output for sub code Q data
13	CLCK	I/O	Clock input/output terminal for sub code P-W data read
14	VDD		Digital + power supply terminal (5 V)
15	VSS		Digital ground terminal
16	DATA	O	Sub code P-W data output terminal
17	SFSY	O	Replay-system frame sync signal output terminal
18	SBSY	O	Sub code block sync output terminal
19	SPCK	O	Clock for processor status signal read
20	SPDA	O	Processor status signal output terminal
21	COFS	O	Correction-system frame clock (7.35 kHz) output terminal
22	MONIT	O	LSI internal signal output terminal
23	VDD		Digital + power supply terminal (5 V)
24	TESIO0	I	Test input/output terminal
25	P2VREF		PLL-system only 2VREF terminal
26	HSSW	O	The VREF voltage is reached for double or quad speed.
27	ZDET	O	One-bit DAC zero detection flag output terminal
28	PDO	O	Phase error signal issue between the EFM and PLCK signals
29	TMAXS	O	TMAX detection result output terminal
30	TAMX	O	TMAX detection result output terminal
31	LPFN	I	Reverse input terminal of amplifier for lowpass filter
32	LPFO	O	Output terminal of amplifier for lowpass filter
33	PVREF		PLL-system only VREF terminal
34	VCOREF	I	VCO center frequency reference level terminal
35	VCOF	O	Filter terminal for VCO
36	AVSS		Analog-system ground terminal
37	SLCO	O	Output terminal of DAC for data slice level generation
38	RFI	I	RF signal input terminal
39	AVDD		Analog-system power supply terminal (5 V)
40	RFCT	I	RFRP signal center level input terminal
41	RFZI	I	Input terminal for RFRP signal zero cross
42	RFRP	I	RF ripple signal input terminal
43	FEI	I	Focus error signal input terminal
44	SBAD	I	Sub beam addition signal input terminal
45	TSIN	I	Test input terminal
46	TEI	I	Tracking error input terminal
47	TEZI	I	Input terminal for tracking error or zero cross
48	FOO	O	Focus equalizer output terminal
49	TRO	O	Tracking equalizer output terminal
50	VREF		Analog reference power supply terminal
51	RFGC	O	RF amplitude adjustment control signal output terminal
52	TEBC	O	Tracking balance control signal output terminal
53	FMO	O	Feed equalizer output terminal
54	FVO	O	Speed error signal or feed search EQ output
55	DMO	O	Disc equalizer output terminal
56	2VREF		Analog reference power supply terminal
57	SEL	O	APC circuit ON/OFF signal output terminal

Pin No.	Pin Name	I/O	Function and Operation
58-61	FLGA-D	O	External flag output terminal for internal signal monitor
62	VDD		Digital + power supply terminal (5 V)
63	VSS		Digital ground terminal
64	IO0	O	RF amplifier gain switching terminal
65	IO1	O	Not used
66	IO2	I	HOME detection switch input terminal
67	IO3	O	FocusDrv and signal output terminal
68	$\overline{\text{DMOUT}}$	I	Field equalizer PWM output terminal for IO0 and IO1 Disc equalizer PWM output terminal for IO2 and IO3
69	$\overline{\text{CKSE}}$	I	Usually open
70	$\overline{\text{DACT}}$	I	DAC test mode terminal
71	TESIN	I	Test input terminal
72	TESIO1	I	Test input/output terminal
73	VSS		Digital ground terminal
74	PXI	I	DPS-system clock oscillator circuit input terminal
75	PXO	O	DPS-system clock oscillator circuit output terminal
76	VDD		Digital + power supply terminal (5 V)
77	XVSS		Ground terminal for system clock oscillator circuit
78	XI	I	System clock oscillator circuit input terminal
79	XO	O	System clock oscillator circuit output terminal
80	XVDD		For system clock oscillator circuit + power supply terminal
81	DVSR		R channel D/A converting unit power supply terminal
82	RO	O	R channel data forward rotation output terminal
83	DVDD		D/A converting unit power supply terminal (5 V)
84	DVR		Reference voltage terminal
85	LO	O	L channel forward rotation output terminal
86	DVSL		L channel D/A converting unit power supply terminal
87-89	TEST1-3	I	Test mode terminal
90-93	BUS0-3	I/O	Data input/output terminal for microcomputer interface
94	VDD		Digital + power supply terminal (5 V)
95	VSS		Digital ground terminal
96	BUCK	I	Clock terminal for microcomputer interface
97	$\overline{\text{CEE}}$	I	Chip enable signal for microcomputer interface
98	TEST4	I	Test mode terminal
99	$\overline{\text{TSMOD}}$	I	Test mode terminal
100	$\overline{\text{RST}}$	I	Reset signal input terminal

*TC9495F2

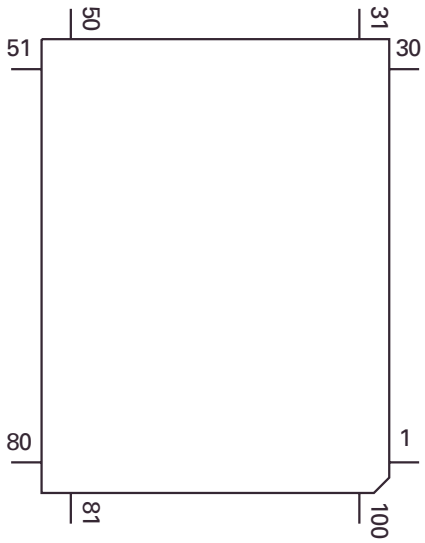

● **Pin Functions(BA5996FM)**

Pin No.	Pin Name	Function and Operation
1	VR	Input pin for reference voltage
2	OPIN2(+)	Input pin for non-inverting input for CH2 preamplifier
3	OPIN2(-)	Input pin for inverting input for CH2 preamplifier
4	OPOUT2	Output pin for CH2 preamplifier
5	OPIN1(+)	Input pin for non-inverting input for CH1 preamplifier
6	OPIN1(-)	Input pin for inverting input from CH1 preamplifier
7	OPOUT1	Output pin for CH1 preamplifier
8	GND	Ground pin
9	MUTE	Mute control pin
10	POWVCC1	Power supply pin for CH1, CH2, and CH3 at "Power" stage
11	VO1(-)	Driver CH1 - Negative output
12	VO1(+)	Driver CH2 - Positive output
13	VO2(-)	Driver CH2 - Negative output
14	VO2(+)	Driver CH2 - Positive output
15	VO3(+)	Driver CH2 - Positive output
16	VO3(-)	Driver CH2 - Negative output
17	VO4(+)	Driver CH4 - Positive output
18	VO4(-)	Driver CH4 - Negative output
19	POWVCC2	Power supply pin for CH4 at "Power" stage
20	GND	Ground pin
21	CNT	Control pin
22	LDIN	Loading input
23	OPOUTSL	Output pin for preamplifier for thread
24	OPINSL	Input pin for preamplifier for thread
25	OPOUT3	CH3 preamplifier output pin
26	OPIN3(-)	Input pin for inverting input for CH3 preamplifier
27	OPIN3(+)	Input pin for non-inverting input for CH3 preamplifier
28	PREVCC	PreVcc

BA5996FM

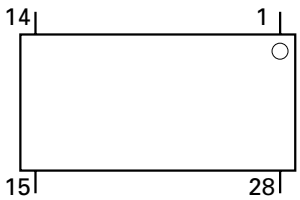

● FM/AM Tuner Unit

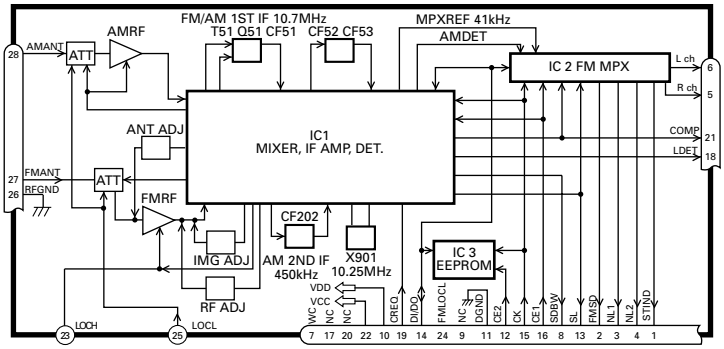

No.	Symbol	I/O	Explain	
1	STIND	O	stereo indicator	"Low" when the FM stereo signals are received. To be pulled up to the "VDD" at 47kΩ.
2	FMSD	O	FM station detector	"High" when signals are received. To be pulled up to the "VDD" at 47kΩ Meanwhile, 10kΩ should be used when taking diver FIX trigger from here and "High: 0.9VDD or more" and "Low: 250mV or less". (Should satisfy the diver IC specifications)
3	NL1	O	noise level-1	"High" when noise is received. Output for the RDS. GND at 47kΩ //1,800pF.
4	NL2	O	noise level-2	"High" when noise is received. Output for the RDS. GND at 36kΩ //330pF.
5	Rch	O	R channel output	FM stereo "R-ch" signal output or AM audio output. Add the specified de-emphasis constant.
6	Lch	O	L channel output	FM stereo "L-ch" signal output or AM audio output. Add the specified de-emphasis constant.
7	WC		write control	EEPROM write control. Writing permissible at "Low". Normally open.
8	SDBW	O	SD bandwidth	SD bandwidth signal output. For detection of detuning data for the RDS.
9	NC			Not used
10	VDD		power supply	Power supply pin for the digital section. DC 5V +/- 0.25V. Be careful about overlapping noise in the logic section.
11	DGND		digital ground	Grounding for the digital section.
12	CE2	I	chip enable-2	EEPROM chip enable. Active a "Low" To be pulled up to the "VDD" at 47kΩ
13	SL	I/O	signal level	Received FM/AM signal level (strength) output. Connect the specified load resistor and capacitor (10k Ω + 39k Ω //4,700pF)
14	DI/DO	I/O	data input/ data output	Data input/Data output To be pulled up to the "VDD" at 47kΩ
15	CK	I	clock	Clock input To be pulled up to the "VDD" at 47kΩ
16	CE1	I	chip enable-1	AF·RF chip enable. Active at "High" To be grounded at 47kΩ
17	NC			Not used
18	LDET	O	lock detector	Active at "Low". To be pulled up to the "VDD" at 47kΩ
19	CREQ	I	current request	Active at "Low". To be grounded at 47kΩ
20	NC			Not used
21	COMP	O	composite signal	FM composite signal output. r out < 100Ω
22	VCC		power supply	Analog section power supply pin.DC 8.4V +/- 0.3V
23	LOCH	I	local high	FM local high pin. When seeking local high, apply 5V together with "LOCL".
24	FMLOCL	I	FM local low	FM local low pin. When seeking local low, apply 5V to the base of the NPN transistor with which the specified resistor is being connected to the emitter. Keep it open in case of ordinary marketed models.
25	LOCL	I	local low	FM/AM local low pin. When seeking local low, apply 5V to the base of the NPN transistor. Since this pin is exclusive for AM when the FMLOCL is in use, do not drive it under FM.
26	RFGND		RF ground	Grounding for the antenna section.
27	FMANT	I	FM antenna input	FM antenna input. 75Ω. Surge absorber (DSP-201M-S00B) is necessary.
28	AMANT	I	AM antenna input	AM antenna input. High impedance. Connect to the antenna through an L (LAU type) of 4.7μH.To cope with the power transmission line hums, insert a series circuit consisting of an L (a coil of about 100mH) + R (a resistor of 470 Ω to 2.2kΩ) between the GND.

7.2.2 DISPLAY

● **CAW1723(DEH-1400/XM/UC), CAW1716(DEH-14/XM/UC)**

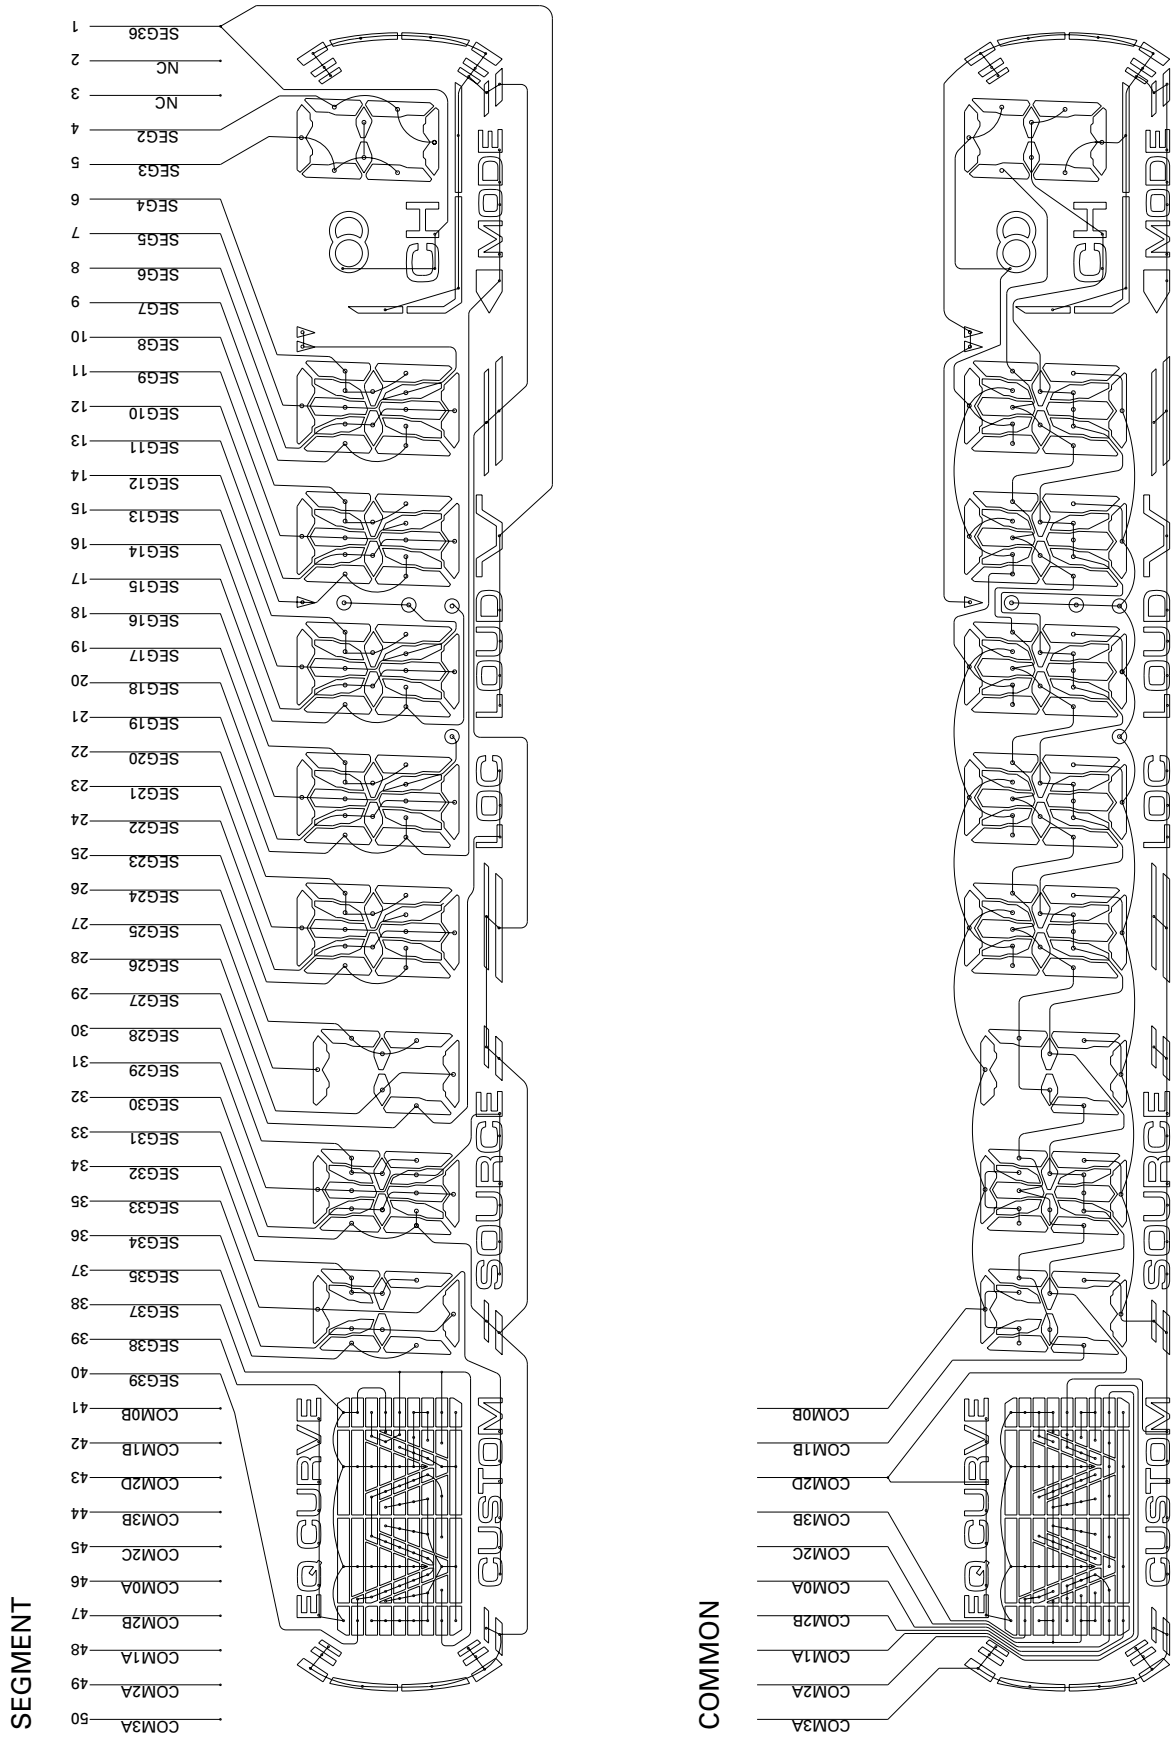

7.3 OPERATIONAL FLOW CHART

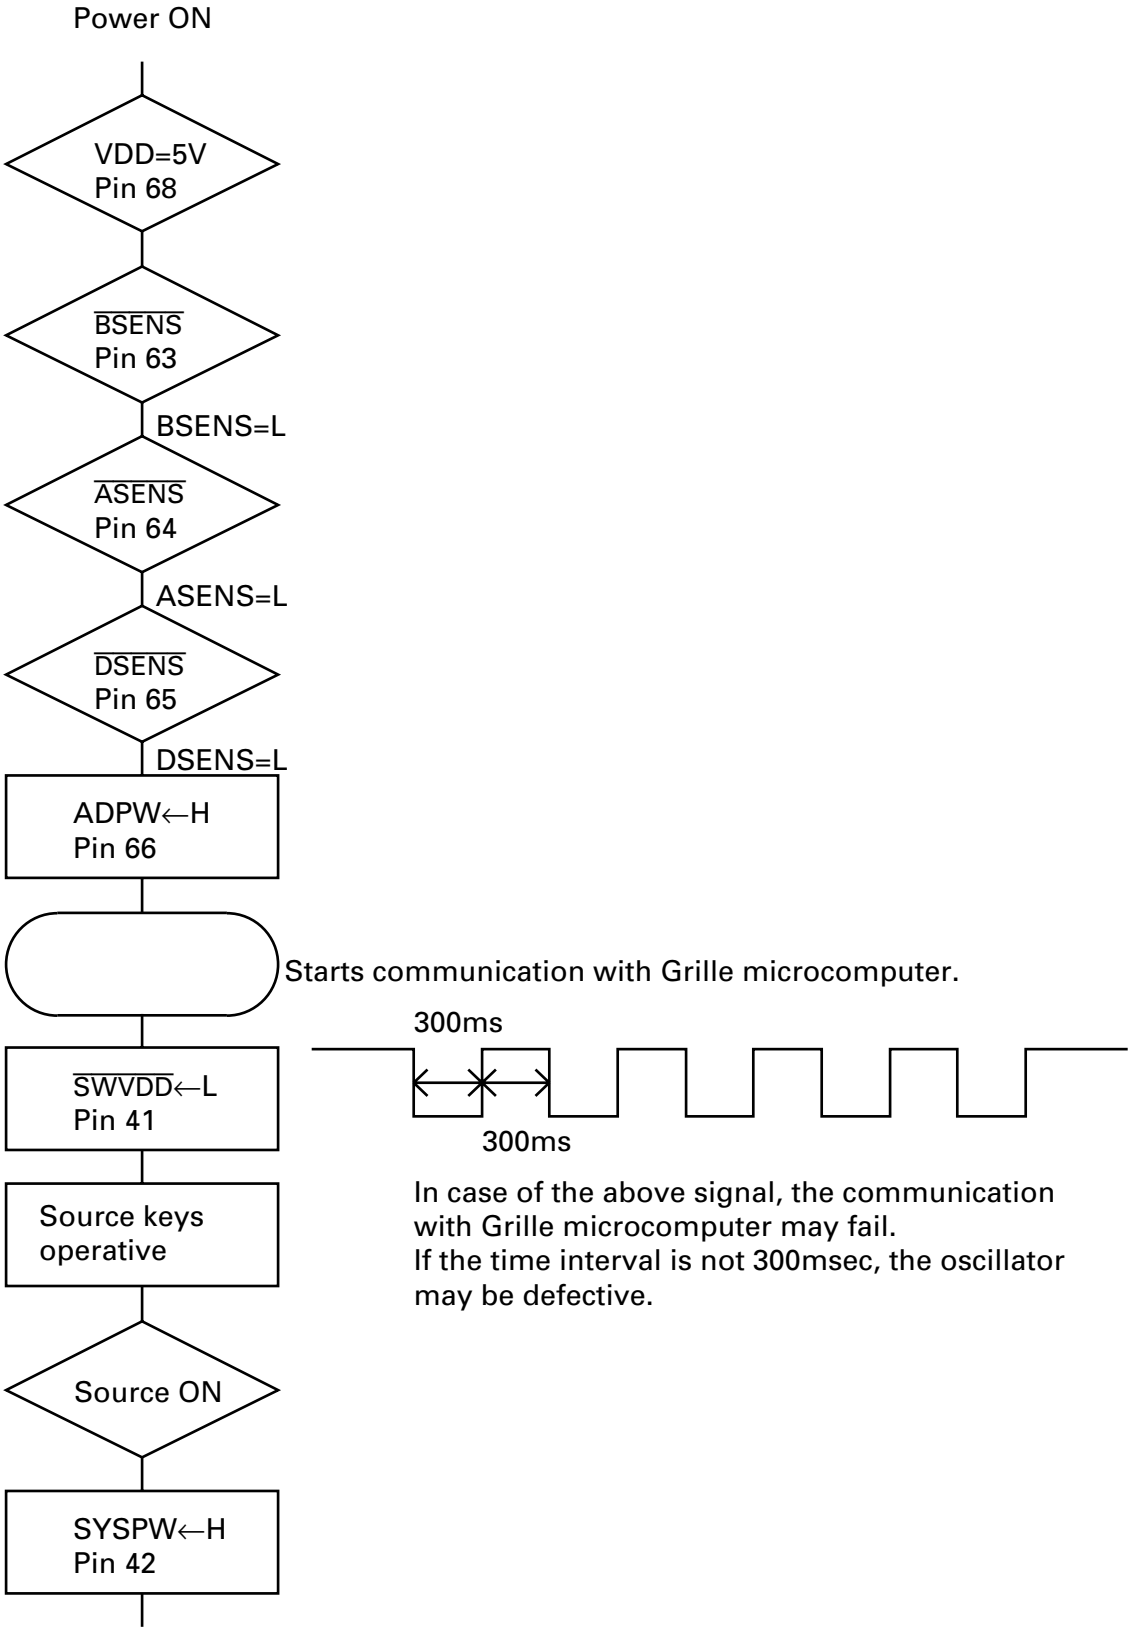

Completes power-on operation.(After that, proceed to each source operation.)

8. OPERATIONS AND SPECIFICATIONS

8.1 OPERATIONS

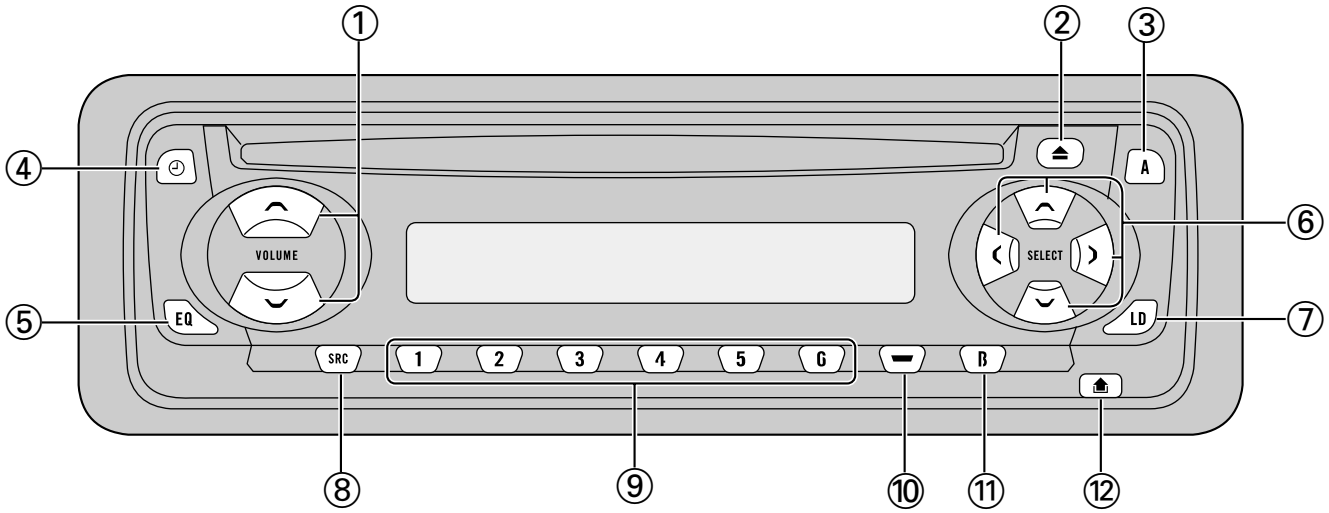

What's what

① VOLUME button
Press to increase or decrease the volume.

② CD EJECT button
Press to eject a CD from your built-in CD player.

③ AUDIO button
Press to select various sound quality controls.

④ CLOCK button
Press to switch clock display on or off.

⑤ EQ button
Press to select various equalizer curves.

⑥ ▲/▼/◄/► buttons
Press to do manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.

⑦ LOUDNESS button
Press to switch loudness function on or off.

⑧ SOURCE button
This unit is switched on by selecting a source. Press to cycle through all of the available sources.

⑨ 1–6 (PRESET TUNING) buttons
Press for preset tuning.

⑩ LOCAL/BSM button

⑪ BAND button
Press to select among three FM and one AM band and cancel the control mode of functions.

⑫ DETACH button
Press to remove the front panel from the head unit. ▣

Power ON/OFF

Turning the unit on

Press SOURCE to turn the unit on.
When you select a source the unit is turned on. ▣

Selecting a source

You can select a source you want to listen to. To switch to the built-in CD player, load a disc in this unit

Press SOURCE to select a source.
Press SOURCE repeatedly to switch between the following sources:
Built-in CD player—Tuner

Notes

- When no disc is set in this product, built-in CD player source will not change.
- When this unit's blue/white lead is connected to the car's auto-antenna relay control terminal, the car's antenna extends when this unit's source is switched on. To retract the antenna, switch the source off. ▣

Turning the unit off

Press SOURCE and hold for at least one second to turn the unit off. ▣

Tuner

Listening to the radio

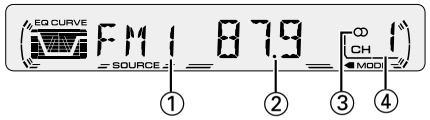

① BAND indicator
Shows which band the radio is tuned to, AM or FM.

② FREQUENCY indicator
Shows to which frequency the tuner is tuned.

③ STEREO (◌◌) indicator
Shows that the frequency selected is being broadcast in stereo.

④ PRESET NUMBER indicator
Shows what preset has been selected.

1 Press SOURCE to select the tuner.

2 Use VOLUME to adjust the sound level.
When you press VOLUME up/+, the volume is raised and when pressed down/–, the volume is lowered.

3 Press BAND to select a band.
Press BAND until the desired band is displayed, FM1, FM2, FM3 for FM or AM.

4 To perform manual tuning, press ◄ or ► with quick presses.
The frequencies move up or down step by step.

5 To perform seek tuning, press and hold ◄ or ► for about one second and release.
The tuner will scan the frequencies until a broadcast strong enough for good reception is found.
• You can cancel seek tuning by pressing either ◄ or ► with a quick press.
• If you press and hold ◄ or ► you can skip broadcasting stations. Seek tuning starts as soon as you release the buttons.

Note

- When the frequency selected is being broadcast in stereo the STEREO (◌◌) indicator will light. ▣

Built-in CD player

Playing a CD

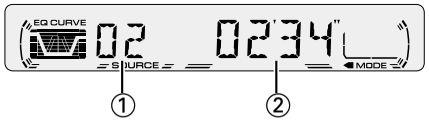

① TRACK NUMBER indicator
Shows the track currently playing.

② PLAY TIME indicator
Shows the elapsed playing time of the current track.

1 Insert a CD into the CD loading slot.
Playback will automatically start.

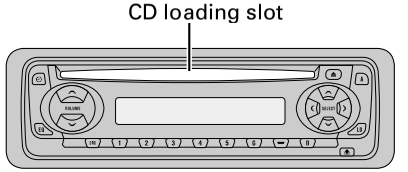

- You can eject a CD by pressing CD EJECT.

2 After a CD has been inserted, press SOURCE to select the built-in CD player.

3 Use VOLUME to adjust the sound level.
When you press VOLUME up/+, the volume is raised and when pressed down/–, the volume is lowered.

Audio Adjustments

Introduction of audio adjustments

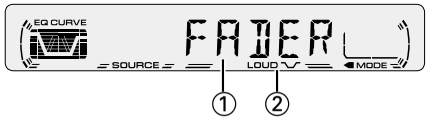

① AUDIO display
Shows the audio adjustments status.

② LOUD indicator
Appears in the display when loudness is turned on.

Press AUDIO to display the audio function names.
Press AUDIO repeatedly to switch between the following audio functions:
FADER (balance adjustment)—EQ (equalizer)—LOUD (loudness)—FIE (front image enhancer)—SLA (source level adjustment)
• When selecting the FM tuner as the source, you cannot switch to SLA.
• To return to the display of each source, press BAND.

Note

• If you do not operate the audio function within about 30 seconds, the display is automatically returned to the source display. ▣

Using balance adjustment

You can select a fader/balance setting that provides an ideal listening environment in all occupied seats.

1 Press AUDIO to select FADER.
Press AUDIO until FADER appears in the display.
• If the balance setting has been previously adjusted, BAL will be displayed.

2 Press ▲ or ▼ to adjust front/rear speaker balance.
Each press of ▲ or ▼ moves the front/rear speaker balance towards the front or the rear.
• F15 – R15 is displayed as the front/rear speaker balance moves from front to rear.
• 0 is the proper setting when only two speakers are used.

3 Press ◄ or ► to adjust left/right speaker balance.
When you press ◄ or ►, BAL:0 is displayed.
Each press of ◄ or ► moves the left/right speaker balance towards the left or the right.
• BAL:L9 – BAL:R9 is displayed as the left/right speaker balance moves from left to right. ▣

Using the equalizer

The equalizer lets you adjust the equalization to match car interior acoustic characteristics as desired.

Recalling equalizer curves

There are six stored equalizer curves which you can easily recall at any time. Here is a list of the equalizer curves:

Display	Equalizer curve
SBASS	Super bass
PWRFL	Powerful
NTRL	Natural
VOCAL	Vocal
CSTM	Custom
FLAT	Flat

• CSTM is an adjusted equalizer curve that you create.
• When FLAT is selected no supplement or correction is made to the sound. This is useful to check the effect of the equalizer curves by switching alternatively between FLAT and a set equalizer curve.

Press EQ to select the equalizer.
• If the equalizer has been previously set to an equalizer curve other than PWRFL then the title of that previously selected equalizer curve will be displayed, such as SBASS, NTRL, VOCAL, CSTM, or FLAT. ▣

Adjusting equalizer curves

You can adjust the currently selected equalizer curve setting as desired. Adjusted equalizer curve settings are memorized in CSTM.

1 Press AUDIO to select the equalizer mode.
Press AUDIO until EQ appears in the display.

2 Select the band you want to adjust with ◄/►.
L (low) —M (mid) —H (high)

3 Press ▲ or ▼ to adjust the equalizer curve.
Each press of ▲ or ▼ increases or decreases the equalizer curve respectively.
• +6 – –6 is displayed as the equalizer curve is increased or decreased.
• The actual range of the adjustments are different depending on which equalizer curve is selected.

Note

• If you make adjustments when a curve other than CSTM is selected, the newly adjusted curve will replace the previous curve. Then a new curve with CSTM appears on the display while selecting the equalizer curve. ▣

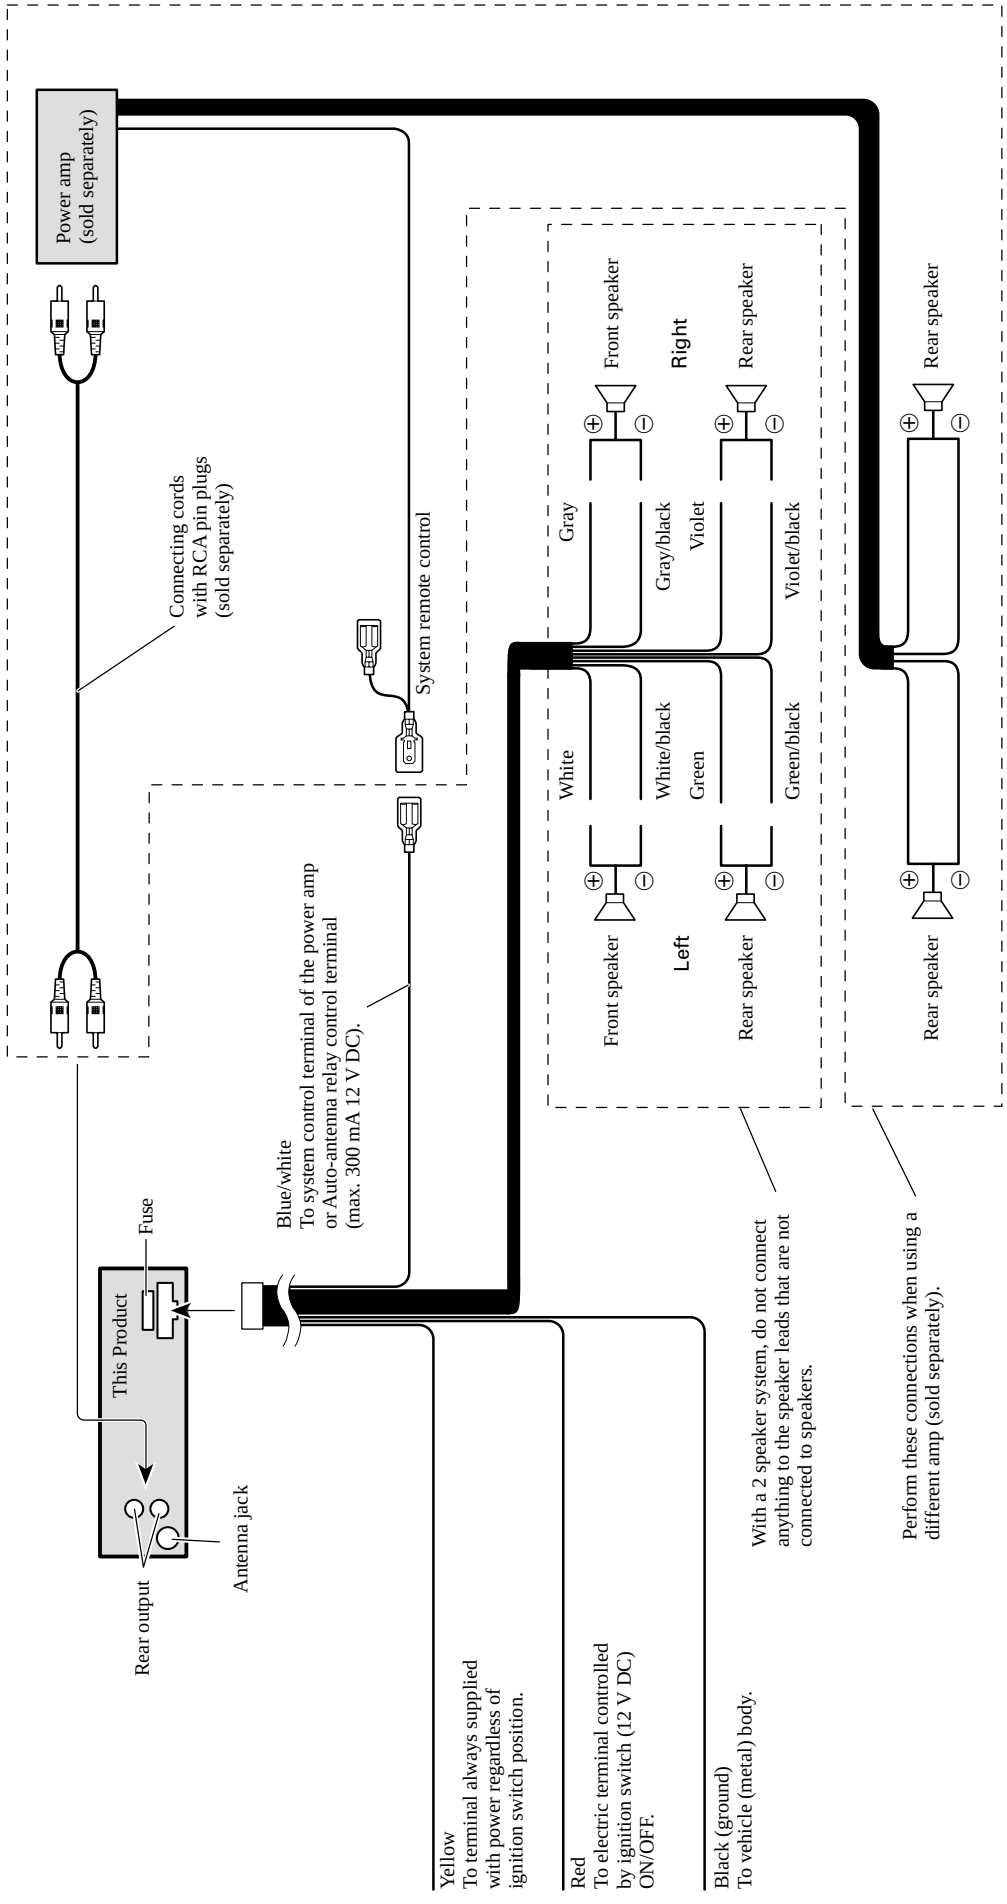
Power amp
(sold separately)
Connecting cords
with RCA pin plugs
(sold separately)
System remote control
Blue/white
To system control terminal of the power amp
or Auto-antenna relay control terminal
(max. 300 mA 12 V DC).
Fuse
This Product
Rear output
Antenna jack
Yellow
To terminal always supplied
with power regardless of
ignition switch position.
Red
To electric terminal controlled
by ignition switch (12 V DC)
ON/OFF.
Black (ground)
To vehicle (metal) body.
Front speaker
Rear speaker
Left
Right
Gray
Gray/black
Violet
Violet/black
White
White/black
Green
Green/black
With a 2 speaker system, do not connect
anything to the speaker leads that are not
connected to speakers.
Perform these connections when using a
different amp (sold separately).

8.2 SPECIFICATIONS

General

Power source ..... 14.4 V DC (10.8 – 15.1 V allowable)
Grounding system ..... Negative type
Max. current consumption ..... 10.0 A
Backup current ..... 3 mA
Dimensions (W × H × D):
(DIN)
Chassis ..... 178 × 50 × 157 mm (7 × 2 × 6-1/8 in)
Nose ..... 188 × 58 × 19 mm (7-3/8 × 2-1/4 × 3/4 in)
(D)
Chassis ..... 178 × 50 × 162 mm (7 × 2 × 6-3/8 in)
Nose ..... 170 × 48 × 14 mm (7 × 1-7/8 × 1/2 in)
Weight ..... 1.3 kg (2.9 lbs)

Audio

Continuous power output is 20W per channel min. into 4 ohms, both channels driven 50 to 15,000 Hz with no more than 5% THD.
Maximum power output 45 W × 4
Load impedance ..... 4 Ω (4 – 8 Ω allowable)
Preout max output level/output impedance ..... 2.2 V/1 kΩ
Equalizer (3-Band Equalizer):
(LOW) ..... Level: ±12 dB
(MID) ..... Level: ±12 dB
(HIGH) ..... Level: ±12 dB
Loudness contour
(LOW) ..... +3.5 dB (100 Hz), +3 dB (10 kHz)
(MID) ..... +10 dB (100 Hz), +6.5 dB (10 kHz)
(HIGH) ..... +11 dB (100 Hz), +11 dB (10 kHz) (volume : –30 dB)

CD player

System ..... Compact disc audio system
Usable discs ..... Compact disc
Signal format:
Sampling frequency 44.1 kHz
Number of quantization bits ..... 16; linear
Frequency characteristics ..... 5 – 20,000 Hz (±1 dB)
Signal-to-noise ratio ..... 94 dB (1 kHz) (IHF-A network)
Dynamic range ..... 92 dB (1 kHz)
Number of channels ..... 2 (stereo)

FM tuner

Frequency range ..... 87.9 – 107.9 MHz
Usable sensitivity ..... 9 dBf (0.8 µV/75 Ω, mono, S/N: 30 dB)
50 dB quieting sensitivity .. 15 dBf (1.5 µV/75 Ω, mono)
Signal-to-noise ratio ..... 70 dB (IHF-A network)
Distortion ..... 0.3% (at 65 dBf, 1 kHz, stereo)
Frequency response ..... 30 – 15,000 Hz (±3 dB)
Stereo separation ..... 40 dB (at 65 dBf, 1 kHz)
Selectivity ..... 70 dB
Three-signal intermodulation (desired signal level) ..... 30 dBf (two undesired signal level: 100 dBf)

AM tuner

Frequency range ..... 530 – 1,710 kHz (10 kHz)
Usable sensitivity ..... 18 µV (S/N: 20 dB)
Selectivity ..... 50 dB (±10 kHz)

Note

- Specifications and the design are subject to possible modifications without notice due to improvements. ▣